### **General Safety Information**

## WARNING

- Obtain, read and carefully service instructions when installing parts. A loose, worn, or damaged parts may cause injury to the rider.
- We strongly recommend that only genuine Shimano replacement parts be used. · Be careful not to let the cuffs of your clothes get caught in the chain while riding, otherwise you may fall off the bicycle.
- · Read these Technical Service Instructions carefully, and keep them in a safe place for later reference.

#### Note

- If gear shifting operations cannot be carried out smoothly, clean the derailleur and lubricate all moving parts.
- If the amount of looseness in the links is so great that adjustment is not possible, you should replace the derailleur.
- When the chain is in the position shown in the illustration, the chain may contact the front chainrings or front derailleur and generate noise. If the noise is a problem, shift the chain onto the next-larger rear sprocket or the one after.
- For smooth operation, use the specified outer casing and the bottom bracket cable guide.
- Grease the inner cable and the inside of the outer casing before use to ensure that they slide properly.
- Parts are not guaranteed against natural wear or deterioration resulting from normal
- For maximum performance we highly recommend Shimano lubricants and maintenance products
- For any questions regarding methods of installation, adjustment, maintenance or operation, please contact a professional bicycle dealer.

#### Technical Service Instructions

SI-59G0C

# FD-5500 FD-5501

Front derailleur

Front

Rear sprockets

In order to realize the best performance, we recommend that the following combination be used.


Series	SHIMANO 105
Shifting lever	ST-5500-CA / ST-5510-CA / ST-R600
Outer casing	SP40
Gears	18
Front derailleur	FD-5500 / FD-5501
Front chainwheel	FC-5501 / FD-5502
Bottom bracket	BB-5500
Rear derailleur	RD-5500 / RD-5501
Freehub	FH-5500 / FH-5501
Cassette sprocket	CS-HG70-9
Chain	CN-HG73
Bottom bracket cable guide	SM-SP17

## **Specifications**


type / Brazed on type
**
8.6mm), M (31.8mm)
15 teeth or less
61° - 66°
43.5mm

#### Installation of the front derailleur

1. Adjust so that the clearance between the chain guide outer plate and the large gear is 1 - 3 mm before installing.

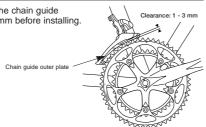

- 2. The level section of the chain guide outer plate should be directly above and parallel to the largest chainring.
- 3. Secure using a 5mm Allen key.

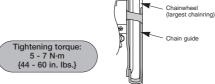


### SIS adjustment

#### 1. Low adjustment

Set so that the clearance between the chain guide inner plate and the chain is 0 - 0.5 mm.



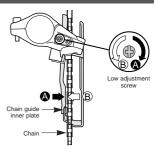


#### 2. Connection and securing of cable

While pulling the inner cable, tighten the wire fixing bolt with a 5 mm allen key to secure the cable.



# Tightening torque: 5 - 7 N·m {44 - 60 in. lbs.}


After taking up the initial slack in the cable, re-secure to the front derailleur as shown in the illustration.

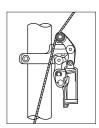

#### 3. Top adjustment

Set so that the clearance between the chain guide outer plate and the chain is 0 - 0.5 mm.




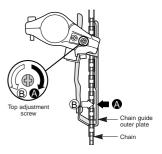

#### 4. Adjustment of the cable tension

(1) Set the chain to the largest rear sprocket, and shift the front to top gear.




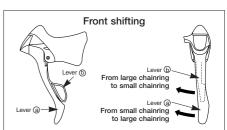

(2) Perform the trimming.

Trimming (noise-prevention mechanism) Gently press the lever (b). (A "click" sound will be heard.)

(3) After trimming, adjust the clearance (by using the cable-adjustment bolt) of the chain and chain guide to the minimum (0 - 0.5 mm).

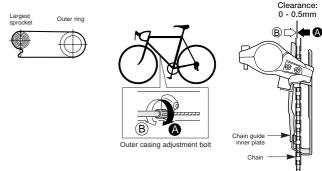

Be sure to read these service instructions in conjunction with the service instructions for the ST-5500-CA / 5510 / R600 before use.

# SHIMANO

These service instructions are printed on recycled paper.

#### SHIMANO AMERICAN CORPORATION

One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003 SHIMANO EUROPE HOLDING B.V.

SHIMANO INC. Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222

Please note: specifications are subject to change for improvement without notice. (English)  $\odot$  Apr. 2003 by Shimano Inc. XBC SZK Printed in Japan.

3-77 Oimatsu-cho, Sakai, Osaka 590-8577, Japan