

SERVICE INSTRUCTIONS

SL-SY20 SL-MY20

Shifting Lever

Before use, read these instructions carefully, and follow them for correct use.

Specifications

Type: SIS type (6-speed)/with friction-select mechanism


Installation position: Handlebar (MY20) \varnothing 22.2mm,
Handle stem (SY20) \varnothing 21.7mm,
Down tube (SY20) \varnothing 28.6mm

Note


- For SIS use, be sure to use the following combination:
 - Shifting lever.....SL-SY20/SL-MY20
 - Rear derailleur.....RD-TY20
 - Freewheel.....MF-HG20 (6-speed)
 - Chain.....Hyperglide compatible narrow type UG chain
 - Outer cable.....Shimano SIS cable
- Because the high cable resistance of a frame with internal cable guides would impair the SIS function, this type of frame should not be used.
- SL-SY20 and SL-MY20 cannot be used in combination with the Dura Ace rear derailleur.

SIS operation

Move the knob to select SIS or friction.

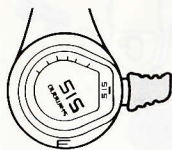


SIS

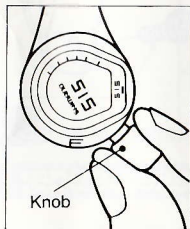

Friction system

Installation of the shifting lever

Install by referring to the illustration below.

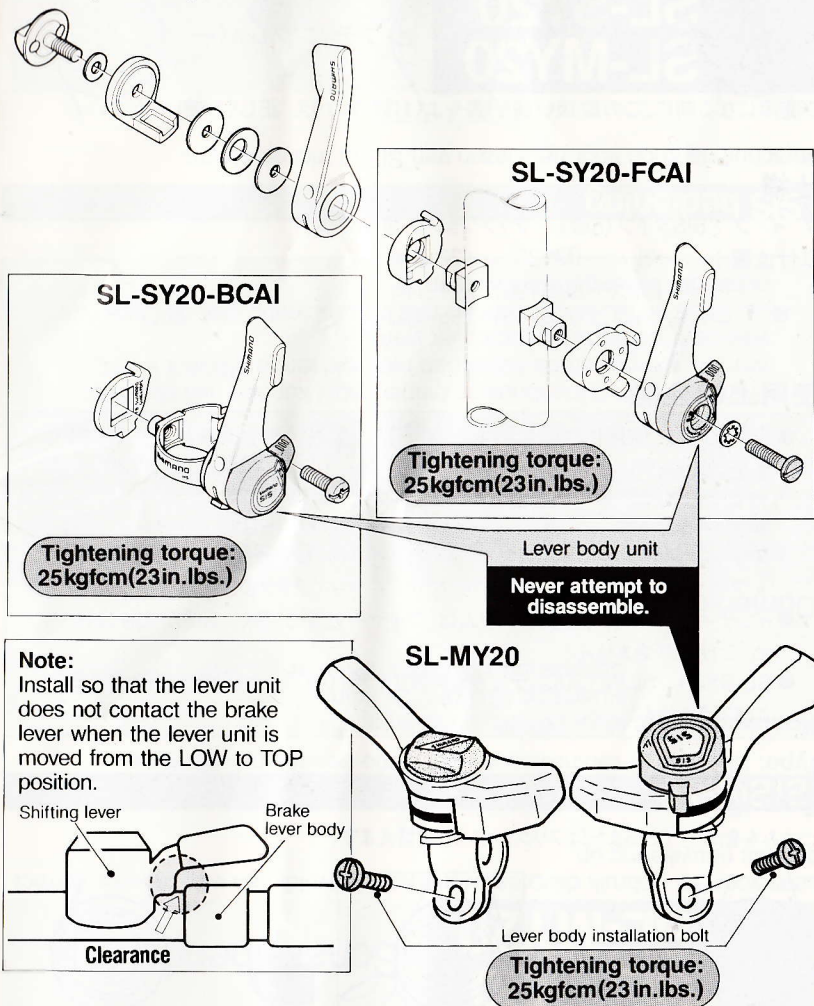

Please note: Specifications are subject to change for improvement without notice. (English)

SHIMANO

SHIMANO AMERICAN CORPORATION
One Shimano Drive, Torrance, California, U.S.A. 92710 Tel: (714) 501-0200
SHIMANO (EUROPA) GmbH
Klein-Hußeln 1-3, 4010 Hilden, West Germany Tel: 02103-5005-0

SHIMANO (SINGAPORE) PTE. LTD.
No. 20 Borneo Street, Juring Road, Singapore 226 Tel: 2654777
SHIMANO INDUSTRIAL CO. LTD.
3-77 Omiya-cho, Sakai, Osaka, Japan Tel: 07223-233243