

# Sandisk Sansa E200 v2 Series

## Audible User Guide



### Requirements & Tech Specs

- Windows XP with SP 2 or Vista
- Windows Media Player 11.
- **Audible Formats:** 2 3 4
- **Capacities Available:** 1GB, 2GB
- **Bookmarking:** No
- **Section Navigation:** Yes
- **Variable Playback Speed:** Yes
- **FM Radio:** Yes
- **Video:** No
- **Removable Battery:** No

# How To's:

A. **Playback:** How do I locate/play Audible content on the device?

1. Press the **Menu** button.
2. Scroll to and select **Music**.
3. Scroll to and select **Audiobooks**.
4. Scroll to and highlight the title you wish to play and press the **Select** button.

B. **Rewind/Fast-Forward:** How do I rewind/fast-forward through my Audible content on the device?

1. **Rewinding:** Press and hold the **Previous/Rewind** button to rewind.
2. **Fast-Forwarding:** Press and hold the **Next/Forward** button to fast forward.

C. **Section Navigation:** How do I use section navigation?

*\* The device must have **Ch. Mode** (chapter mode) turned on.*

1. While the title is playing, press the **Down/Submenu** button.
2. Scroll down to **Ch. Mode** and select it.
3. Press **Select** button to select *On* (enable).
4. Press **Previous/Rewind** or **Next/Forward** to rewind or skip by section.

D. **Playback Speed:** How do I change the playback speed on the device?

1. While a title is playing, press the **Down/Submenu** button.
2. Scroll down to **Speed** and press **Select** button to toggle between slow, normal, and fast.

## Buttons and Functions



1	Display window	Display the information and status here
2	Left/Previous/Rewind	Press for previous track, rewind, or move left
3	Select Button	Press to select the item
4	Down/Submenu	Press to move down or to options menu
5	Right/Forward	Press for next track, fast forward, or move right
6	Up/Pause/Resume	Press to move up one item, pause, or resume
7	Menu	Return to the Main Menu
8	MIC	Built-in microphone
9	Earphone Port	Connect earphones here to listen
10	Volume Up	Turns up the volume
11	Volume Down	Turns down the volume
12	Hold/Lock	Factory sets to locked position (shows orange color). Slide to center position for controls. When locked, all controls are disabled to prevent accidental activation of controls.
13	Power/ <b>Reset</b>	<ul style="list-style-type: none"> <li>• Slide up to turn on the player</li> <li>• Slide up and hold for 2 seconds to turn off the player</li> <li>• Slide up and hold for 15 seconds to reset your player</li> </ul>
14	USB Port	Plug USB cable here to connect to the computer
15	Clip	The removable clip accessory

