Latte Art Factory Recipes Settings Manual

LAF Classic, LAF Bar January 2023



Latte Art Factory Recipes Settings Manual

1. Navigating to the recipes section

1. Main screen

1. Main screen

2. Settings

From the main screen, tap on the settings icon the recipes.

and then on



1. Main screen

03.08.2022 17:00:03 Settings Service Recipes Statistics Milk airflow Sleep mode Sleep mode VPN IP NA

2. Settings



3. Recipes

- 1. Main screen
- 2. Settings
- 3. Recipes

Some important things to understand before you start adjusting recipes:

1. In 'milk airflow' you can create and adjust different phases of a recipe. Phases involves 3 elements; liquid type, temperature and texture. A recipe can have multiple phases.

An example of a phase would be solid milk foam at 60°C, where the solid foam is the (texture), milk is the (liquid type) and 60°C is the (temperature).

i

The machine stores up to 32 phases. If using two liquids, that is 16 phases for each liquid type. If using one liquid, that is 32 phases for the single liquid type.

In the 'milk module' section you can combine different phases to create your unique recipe. It is also where you can adjust the liquid volume of a drink, for example increase the amount of your liquid by 10ml, and rename the recipe.

i

<u>To adjust anything related to the **texture**, **liquid**, or **temperature** – <u>start in **Milk airflow** section</u></u>

To adjust anything related to the volume of your recipe, rearrange the phases or rename your recipe – start in the Milk module section



4. Milk settings

- 1. Main screen
- 2. Settings
- 3. Recipes

4. Milk Settings

Create a new phase

Tap the three dots _____ to name your phase.

To create a new phase, simply adjust the following three parameters:

- 1. Milk Type *
- 2. Air Flow **
- 3. Temperature

*Milk type A is connected to the left container inside the fridge and milk type B is connected to the right container. If you're only using one large container, then milk types A & B will be the same liquid.

**The higher you adjust the air flow percentage, the more solid the foam will be. If the air setting is too high, the liquid will come out interrupted and bubbly and an error message might pop up. A simple fix is to reduce the % of air flow.

The labels hot/cold, foam type and cup type don't affect the temperature or air settings.

There can only be one phase associated to a specific combination of milk type, hot/cold, foam type δ cup type.

i Examples:

Phase 1 – Latte Art Texture

Milk Type - A Hot/Cold – Hot Foam Type – Liquid 1 Cup Type – Here

<u>Phase 2</u> – Solid Foam

Milk Type – A Hot/Cold – Cold Foam Type – Liquid 1 Cup Type – Here

Latte Art Factory Recipe Settings

In the example above, for the solid foam phase, the milk doesn't have to be cold. However, if you were to select hot instead, then you would be adjusting phase 1.

As mentioned, each phase needs to have a unique combination of milk type, hot/cold, foam type & cup type.

Recommendations:

Before setting milk settings for the first time, run milk calibration, please refer to the milk calibration manual.

- 1. For cold beverages set the temperature to 0°C.
- 2. If using cow milk, set the temperature under 75°C.
- 3. If using plant-based milks, set the temperature under 65°C.
- 4. Test each phase to ensure you are satisfied and that it works properly.

i

All settings are saved and recipes are updated automatically.



Menu adjustment



1. Recipe Name [A]



2. Picture associated with Recipe [B]

- 1. Main screen
- 2. Settings
- 3. Recipes
- 4. Milk Settings

5. Milk Modul

For drinks layout on the main screen check Config mode.

How to adjust your recipe

1. Recipe Name

[A] A click on the recipe name shows a keyboard to rename the drink. Tap enter to save your input. Use the arrows to switch between recipes or press Recipe ID and type the recipe number. A list of Recipe IDs can be found in <u>Counters</u>.

i

Number of cups defines how many cups are written into counters with 1 dispensing.

2. Picture associated with Recipe

[B] The recipe picture can be modified by tapping the **arrows**, which allows you to view various images from our preloaded library. Uploading custom images is currently not possible.

Configuring recipes: Can have big drink images or can have smaller with up to 25 drinks per page (5 drinks /icons per row)



3. Categorise your drink as "Here" or "To go" **[C]**



4. Adjusting phases & liquid volume amounts **[D]**



5. Adjusting phases & liquid volume amounts [E]

- Categorise your drink as "Here" or "To go" [C] Here and to-go recipes are adjusted separately. Switch between them with the buttons
- Adjusting phases & liquid volume amounts
 [D] Each drink recipe can have up to 3 dispensing phases. A phase is a unique combination of milk type, temperature and air flow.

Pressing on the phase name (eg. Solid Cappu in the image) will allow you to choose from a list of up to 32 phases that have been created in the milk flow section.

i

3.

Dispense time in seconds determines the quantity of milk foam that comes out. The higher the dispensing time, the more volume of milk foam your recipe will have. Setting the value to 0 skips the dispensing phase.

Example:

The recipe in the picture to the right means the following:

For the first 3 seconds, the phase "Latte Art" will dispense.

After that, the phase "Iced Coffee" will dispense for 14 seconds.

As phase 3 has a dispensing time of 0, no more liquid will be dispensed.

+E shows air and temperature settings of corresponding phases. To review and adjusts please go to Milk Airflow section. G FRANK BUNA Latte Art Factory

CUP&CINO Kaffeesystem-Vertrieb GmbH & Co. KG, Paderborner Str. 33, 33161 Hövelhof, Germany +49 5257 98 98 40 4, <u>www.frankbuna.com</u>, <u>info@frankbuna.com</u>