	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
	Page 1 of 110			

ThermoJet® H2700E Series Oil Purifier System Installation and Operating Manual

	 <p style="text-align: center; margin-top: 10px;"> READ AND UNDERSTAND THIS OPERATING MANUAL BEFORE ATTEMPTING TO INSTALL, COMMISSION, OR USE THIS EQUIPMENT. FAILURE TO UNDERSTAND THESE INSTRUCTIONS COULD RESULT IN SERIOUS PERSONAL INJURY AND OR LOSS OF PROPERTY. </p>	
---	--	---



5615 W Fuqua • Houston, Texas 77085

1-713.464.6266 • Fax: 713.464.9871



**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**

INSTALLATION AND OPERATING MANUAL

Doc #	77740150
Rev	02
Date	June 2020
Page 3 of 110	



	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM INSTALLATION AND OPERATING MANUAL	Doc #	77740150
		Rev	02
		Date	June 2020
		Page 4 of 110	

Table of Contents

I	GENERAL INFORMATION	6
	Manufacturer Contact Information	7
	Explanation Of Graphic Symbols In The Documentation	8
II	UNIT IDENTIFICATION AND LABELING	11
	ThermoJet ® Model H2700- Model Code Designations	12
	Model Code Designation Key	13
	Tag Detail for ATEX Model Oil Purifiers	14
	Operating Conditions – ATEX Constructions.....	15
III	DESCRIPTION OF THE PRODUCT	16
	Principal of Operation.....	17
	Degasification.....	17
	Flow through the Unit.....	17
	The Jet Mixer.....	17
	Return of Clean Oil.....	17
	Mounting Options	18
IV	INSTALLATION.....	18
	Receipt Inspection	19
	Placement of Equipment.....	19
	Inlet and Return Oil Piping Connections.....	20
	Condensate Purifier Connection.....	22
	System Exhaust and Relief Valve Connections.....	24
	Electrical Power Connection.....	25
	Grounding	28
V	SYSTEM START-UP AND OPERATION	29
	Start-Up Procedures	30
	Heater Operation:.....	36
	Adjusting System Pressure.....	39
	System Discharge Pressure	40
	System Vent Operation.....	41
	Monitoring Normal Operation.....	43
	Dailey ThermoJet Oil Purifier System Operational Checks	43
	System Shutdown	44
VI	ROUTINE MAINTENANCE	45
	Maintenance Checks	46
	General Inspection.....	48
	Oil Filter Maintenance	49
	Y-Strainer Maintenance	50
	Condensate Purifier Assembly Maintenance.....	51
	Oil Mist Eliminator Maintenance	52
	Air Breather Maintenance	53
	Separation Vessel Maintenance	54
	Oil Heater Maintenance	57
	Auto Tune Oil Heater Controller.....	63
	Check and Adjust Operating Pressures.....	65
	Verify Low Oil Pressure Switch Operation.....	66
	Verify Oil Heater High Temperature Cutout Operation.....	68
VII	CLEANING AND DECONTAMINATION	72
	Cleaning and Decontamination.....	73
	Removal From Use, Disposal And Transport	75

	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM INSTALLATION AND OPERATING MANUAL	Doc #	77740150
		Rev	02
		Date	June 2020
		Page 5 of 110	

Draining and Cleaning Procedures	77
VIII TROUBLE SHOOTING	78
Trouble Shooting Guide	79
Quick Reference Troubleshooting Guide.....	82
Types of Product Misapplication and Misuse Not Covered By Warranty or Guarantees	83
Maintenance Spare Parts List.....	84
Process and Instrument Diagram	85
PID Symbol Legend and Customer Connection Chart	86
Electrical Wiring Diagram.....	87
Fuse Ratings and Characteristics	89
Tagging and Labeling	90
Bill Of Materials	94
General Arrangement Drawings	96
Dimensional Outline Drawings.....	99
Ex Components	106





**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**

INSTALLATION AND OPERATING MANUAL

Doc #	77740150
Rev	02
Date	June 2020
Page 6 of 110	

I GENERAL INFORMATION

 	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
			Page 7 of 110	

Manufacturer Contact Information

For additional information contact the manufacturing office nearest you or check our website.








For questions regarding this publication or if you have specific questions regarding the installation and operation of **ThermoJet®** Oil Purifier System, please contact


Manufacturer
 5615 W Fuqua St. B-201
 Houston, Texas 77085
 USA
 Ph 1.713.464.6266









Explanation Of Graphic Symbols In The Documentation

The following graphic symbols are used in this publication to communicate specific detailed information necessary for the safe operation of this product. These graphic symbols are used to create "Safety Alerts" within the documentation to alert the users of potential hazards, instruction on how to avoid injury and instruction notices for safe operation. When interfacing with this product it is important these safeguards are observed.

It is important for safety alerts to have the appropriate choice of signal word because this word and its colored background communicate the severity of the hazard. The signal word calls attention to the warning and designates a degree or level of hazard seriousness. The signal words for product safety alerts as used in this manual are "DANGER", "WARNING", "CAUTION", and "NOTICE".

SYMBOL	SYMBOL DESCRIPTION AND USE
	This symbol is used to identify a "DANGER" level of hazard seriousness. "DANGER" indicates a hazardous situation which, if not avoided, will result in death or serious injury
	This symbol is used to identify a "WARNING" level of hazard seriousness. "WARNING" indicates a hazardous situation which, if not avoided, could result in death or serious injury
	This symbol is used to identify a "CAUTION" level of hazard seriousness. "CAUTION" indicates a hazardous situation which, if not avoided, could result in minor or moderate injury
	This symbol is used to identify a "SAFETY ALERT" associated with either a "WARNING" or "CAUTION" severity hazard. The alert is accompanied with instruction necessary to avoid a hazard or personally injurious situation. The "SAFETY ALERT" symbol is accompanied with other graphics to further identify the type of hazard or personal injury risk involved.
	This symbol is used to warn against a crushing or pinching hazard. This symbol can be used in conjunction with either a "DANGER", or "WARNING" or "CAUTION" severity level
	This symbol is used to warn against risk of creating an "EXPLOSION". This symbol can be used in conjunction with a "SAFETY ALERT" symbol with either a "DANGER", or "WARNING" or "CAUTION" severity level.
	This symbol is used to warn against "ELECTRIC SHOCK". This symbol can be used in conjunction with a "SAFETY ALERT" symbol with either a "DANGER", or "WARNING" or "CAUTION" severity level.

SYMBOL	SYMBOL DESCRIPTION AND USE
	This symbol is used to warn against "CRUSHING". The equipment should never be tipped or stood on edge. This symbol can be used in conjunction with a "SAFETY ALERT" symbol with either a "DANGER", or "WARNING" or "CAUTION" severity level.
	This symbol is used to warn against "SLIP HAZARDS". This symbol can be used in conjunction with a "SAFETY ALERT" symbol with either a "DANGER", or "WARNING" or "CAUTION" severity level.
	This symbol is used to warn against "CORROSIVE" or "CAUSTIC CHEMICALS" that might inadvertently be used to clean the equipment. Any cleaning agents used must be compatible with the equipment materials of construction and not harmful to personnel. This symbol can be used in conjunction with a "SAFETY ALERT" symbol with either a "DANGER", or "WARNING" or "CAUTION" severity level.
	This symbol is used to indicate that a "FORK TRUCK" is used to transport the equipment. The Fork truck operator should be properly trained in its operation and observe all plant driving and safety regulations. Do not transport equipment on public roadways using a fork truck. This symbol can be used in conjunction with a "SAFETY ALERT" symbol with either a "DANGER", or "WARNING" or "CAUTION" severity level.
	This symbol is used to warn against the presence of poisonous substances being present. This symbol can be used in conjunction with either a "DANGER", or "WARNING" or "CAUTION" severity level
	This symbol is used to warn against the presence of a carcinogenic substances being present. This symbol can be used in conjunction with either a "DANGER", or "WARNING" or "CAUTION" severity level
	This symbol is used to warn against the presence of a hot surfaces. This symbol can be used in conjunction with either a "DANGER", or "WARNING" or "CAUTION" severity level
	This symbol is used to identify "NOTICE" instructions and is used where a "SAFETY ALERT" designation is too severe. A "NOTICE" label is used for instruction or issuing a reminder about a condition which is more procedural in nature rather than related to an immediate risk of personal injury.

SYMBOL	SYMBOL DESCRIPTION AND USE
	This symbol is used to indicate that gloves and other "PERSONAL PROTECTIVE EQUIPMENT (PPE)" should be used. This symbol may be used in conjunction with a "NOTICE".
	This symbol is used to indicate that eye protection and other "PERSONAL PROTECTIVE EQUIPMENT (PPE)" should be used. This symbol may be used in conjunction with a "NOTICE".
	This symbol is used to indicate that respiratory protection and other "PERSONAL PROTECTIVE EQUIPMENT (PPE)" should be used. This symbol may be used in conjunction with a "NOTICE".
	This symbol is used to indicate that lifting points are provided on equipment for safe movement and should be used. This symbol may be used in conjunction with a "NOTICE" or "CAUTION" severity level.
	This symbol is used to indicate that the reader must read and understand referenced "DATA AND INFORMATION". This symbol may be used in conjunction with a "NOTICE" or with a "SAFETY ALERT" symbol with either a "DANGER", or "WARNING" or "CAUTION" severity level.
	This symbol is used to advise "SPILLS" are to be controlled and cleaned up. In case of spillage, the user or other responsible body must ensure appropriate cleanup and decontamination is carried out. This symbol may be used in conjunction with a "NOTICE" or with a "SAFETY ALERT" symbol with either a "DANGER", or "WARNING" or "CAUTION" severity level.
	This symbol is used to encourage the use of cleaning materials which the customer can "RECYCLE". Drained oil should be recycled. This symbol may be used in conjunction with a "NOTICE".
	This symbol is used to advise the materials must be disposed of in accordance to environmental laws ordinances and directives. Disposal methods which have "ADVERSE ENVIRONMENTAL IMPACT" are to be avoided. This symbol may be used in conjunction with a "NOTICE".





**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**

INSTALLATION AND OPERATING MANUAL



Doc #	77740150
Rev	02
Date	June 2020
Page 11 of 110	

II UNIT IDENTIFICATION AND LABELING

 	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
			Page 12 of 110	


ThermoJet® Model H2700- Model Code Designations

- **Electrical Standard:**
The ThermoJet® Model H2700 Oil Purifier is designed to comply with

ATEX   II 3G Ex db e nA IIB+H2 T3 Gc

- **Inlet Power:**
The ThermoJet® Model H2700 Oil Purifier is available for connection to either 380, 400, 415 or 460 VAC three-phase power. The purchaser specifies supply voltage. Refer to the model code sheet for options available for specific voltages and construction.

- **Mounting:**
Designates the mounting method used.

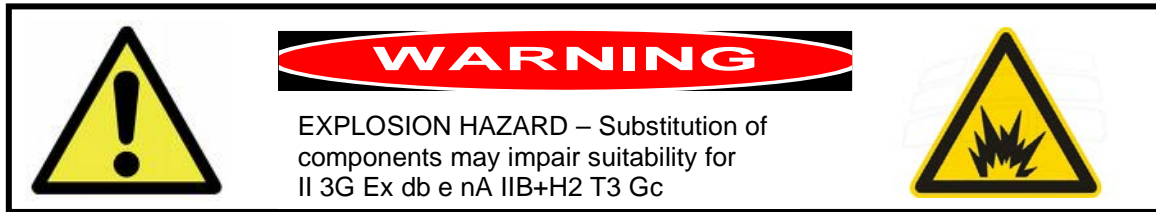



**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**

INSTALLATION AND OPERATING MANUAL


Doc #	77740150
Rev	02
Date	June 2020
Page 13 of 110	

Model Code Designation Key
ThermoJet ® Model H2700
Oil Purifier



Option Description	Option Code	Description
Application Type Electrical Area Classification	H2700	Dewatering Application in Hydrocarbon Processing Industry II 3G Ex db e nA IIB+H2 T3 Gc 22" X 30" footprint
Heater Type	E	Electric Heater
Electrical Power Supply	A	460 VAC, 60 Hz, 3 Phase
	B	380 VAC, 60 Hz, 3 Phase
	E	380 VAC, 50 Hz, 3 Phase
	C	400 VAC, 50 Hz, 3 Phase
	K	415 VAC, 50 Hz, 3 Phase
Mounting	BL	Base mounted with feet and lifting eyes
	FL	Fork-liftable
Export Crating (excluding North America, South America & Canada)		Export Crating

Tag Detail for ATEX Model Oil Purifiers

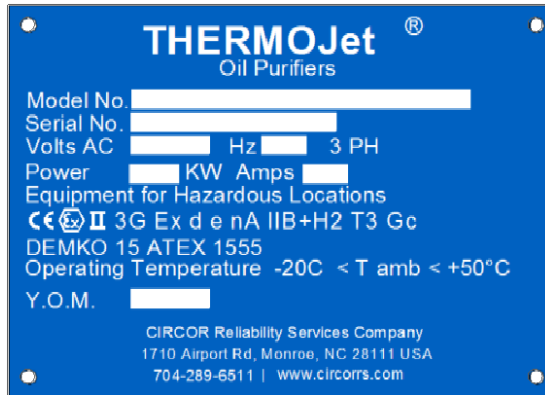ThermoJet ® Oil Purifiers manufactured compliant with the ATEX Directive



Data Ref.	Description	Example
Model No.	Per Customer, P.O. & Manufacture Job Order See " ThermoJet ® Oil Purifier Model Code Designation Key" _____	H2700-EEBL
Serial No.	Unique Serial Numbers are to be issued to each machinery item. The equipment Serial Number is a unique sequential number selected and logged in an EXCEL file . The serial number log is managed and maintained by the manufacture QC Department.	TJ-XXXX
Volts AC	Machinery is available for connection to either 380 VAC, 415 VAC or 460 VAC electrical power. Purchaser specifies the electrical power requirement. Reference " ThermoJet ® Oil Purifier Model Code Designation Key" Option Code B or E 380 VAC power _____ Option Code C 400 VAC power _____ Option Code K 415 VAC power _____ Option Code A 460 VAC power _____	380 VAC 400 VAC 415 VAC 460 VAC
HZ	Machinery is suitable for 50 or 60 hertz AC power as stipulated by the "POWER" option of the "ThermoJet ® Oil Purifier Model Code Designation Key" Power Option Code A 460 VAC 60 Hz _____ Power Option Code B 380 VAC 60 Hz _____ Power Option Code E 380 VAC 50 Hz _____ Power Option Code C 400 VAC 50 Hz _____ Power Option Code K 415 VAC 50 Hz _____	60 Hz 60 Hz 50 Hz 50 Hz 50 Hz
Power	Maximum operating power requirement at the specified voltage with the power selector switch in the "ON" position with the electric motor running and the oil heater fully energized. Reference " ThermoJet ® Oil Purifier Model Code Designation Key" Power Option Code A 460 VAC 60 Hz _____ Power Option Code B 380 VAC 60 Hz _____ Power Option Code E 380 VAC 50 Hz _____ Power Option Code C 400 VAC 50 Hz _____ Power Option Code K 415 VAC 50 Hz _____	13.5 KW / 18 Amps 13.5 KW / 22 Amps 13.5 KW / 22 Amps 13.5 KW / 21 Amps 13.5 KW / 20 Amps
YOM	Year Of Manufacture	YYYY

 	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
			Page 15 of 110	

Operating Conditions – ATEX Constructions

- Indoor/outdoor Use
- Ambient temperature range
-20°C to +50°C (-4°F to +122°F) Standard Construction
- Altitude to 2000m
- Relative humidity not exceeding 95%
- Power supply fluctuations not to exceed ±10% rated voltage.
- Over voltage category II IEC 60364-4-443
- Pollution degree 2
- IP 54





**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**

INSTALLATION AND OPERATING MANUAL

Doc #	77740150
Rev	02
Date	June 2020
Page 16 of 110	

III DESCRIPTION OF THE PRODUCT

 	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
			Page 17 of 110	

Principal of Operation

The ThermoJet Oil Purifier works on the principal of air stripping. The use of air bubbled through contaminated liquids has long been used to remove contaminants. But the use of this technique was restricted because the volume of gas required was large due to limited mixing of the gas with the liquid. The unique technology embodied by the ThermoJet makes air stripping practical and efficient because of the mixing and intimate contact of the air with the fluid being cleaned. In addition, the ThermoJet utilizes the principal that the capacity of air to entrain moisture increases exponentially with temperature.

The ThermoJet is designed to operate on ISO 32 through ISO 220 oils from circulating oil systems. Oil with higher viscosity (ISO 150 and ISO 220) must be at 40° C (100°F) minimum temperature at the inlet to the ThermoJet during start-up.

Degasification

The ThermoJet® removes dissolved and emulsified water from industrial lubricants. The ThermoJet returns the viscosity of the lube oil and restores the oil flash point to like new levels. No longer is there a need to dispose of water laden lube oils; these oils can be purified and reused.

Flow through the Unit

The suction pump of the ThermoJet draws contaminated oil from the user lube or hydraulic system. Flexible hose or hard piping can be used to connect the ThermoJet to the system reservoir. A one and one half horsepower motor drives the suction pump. The suction pump is protected by a “Y” strainer. From the pump the oil passes through a filter. This cartridge filter can be easily replaced. It is recommended replacement be made when the pressure differential across it, as monitored by two easily read gages which are externally mounted on the panel above the access door, reaches 2 BAR (30 PSI). From the filter the oil passes through the heater that elevates the oil to 82° C (180° F).

The electric heater temperature is set and controlled with a solid-state device whose operation is viewed through a window on the electrical control box. After the heater, the oil passes through the heart of the ThermoJet which is the dual stage jet mixer

The Jet Mixer

This proprietary and uniquely designed device is the heart of the system. Without the aid of secondary pressure, it continuously and automatically draws ambient air into the heated oil stream as delivered to it by the inlet pump. The ambient air becomes intimately mixed with the oil and assumes the temperature of the oil. The oil leaves the Jet Mixer and is directed to the separation vessel that operates at atmospheric pressure. Here the moisture laden air expands and leaves the oil thus cleansing the oil of water.


Return of Clean Oil


In the separation vessel the oil from the jet mixer cascades down trays to promote the release of the saturated air. A volume of oil is maintained in the lower portion of the separation vessel to allow any entrained air to leave the oil so that none is contained in the return oil stream. The second close coupled pump driven by the electric motor returns oil to the user reservoir. Water vapor vents from the separation vessel and travels through a filter and oil absorbing media to insure that discharge from the unit is oil free. The water condensate discharged from the ThermoJet can be piped to a sanitary sewer.

Mounting Options

The ThermoJet Model H2700 Oil Purifier is offered in two different mounting configurations so that the unit can best fit client requirements. All series units are available as base mounted with lifting eyes. The H-2700 series is also available mounted on a fork lift able base.





IV INSTALLATION





WARNING

If the equipment is not used in the manner described in this manual the protection provided by the equipment may be impaired







WARNING

THIS INSTRUMENT MUST BE EARTHED



	WARNING	
<p>All ATEX approved constructions must be installed in accordance with the requirements of EN60079-14:2014 – Part 14 Electrical installations in hazardous areas (other than mines).</p>		

Receipt Inspection


Remove all shipping materials and plastic plugs.

Inspect for shipping damage externally and internally (open enclosure door), and report any found to Reliability Services immediately. It is desirable to take photographs of any damage to substantiate your claim.




Inspect for completeness of materials and equipment against the packing list and the purchase order.

Placement of Equipment

After verifying the adequacy and strength of all relevant support surfaces, place the ThermoJet® Oil Purifier as close as possible to the oil reservoir in an upright position. See Dimensional Drawings in the PARTS LIST / DRAWINGS / SCHEMATICS section of this manual for anchor bolt and equipment clearance dimensions

	<p>NOTICE: Be sure to leave working space around the system and consider space requirements for electric heater removal, fully opened access door, control panel enclosure door, and gauge monitoring.</p>
---	---

The ThermoJet Oil Purifier is constructed with lift rings. Ensure that lifting equipment and rigging is suitable for safely lifting, moving and placing the equipment.


	WARNING	
<p>Use suitable transport equipment for lifting and setting the equipment into place. Ensure that the equipment is secured prior to and during lifting and transport. Stand clear of the all equipment while being maneuvered. Crane and fork truck operators should be properly trained in there operation.</p>		
		





Using standard plant practices secure the ThermoJet Oil Purifier to the installation surface by bolting the four (4) mounting feet.

Inlet and Return Oil Piping Connections

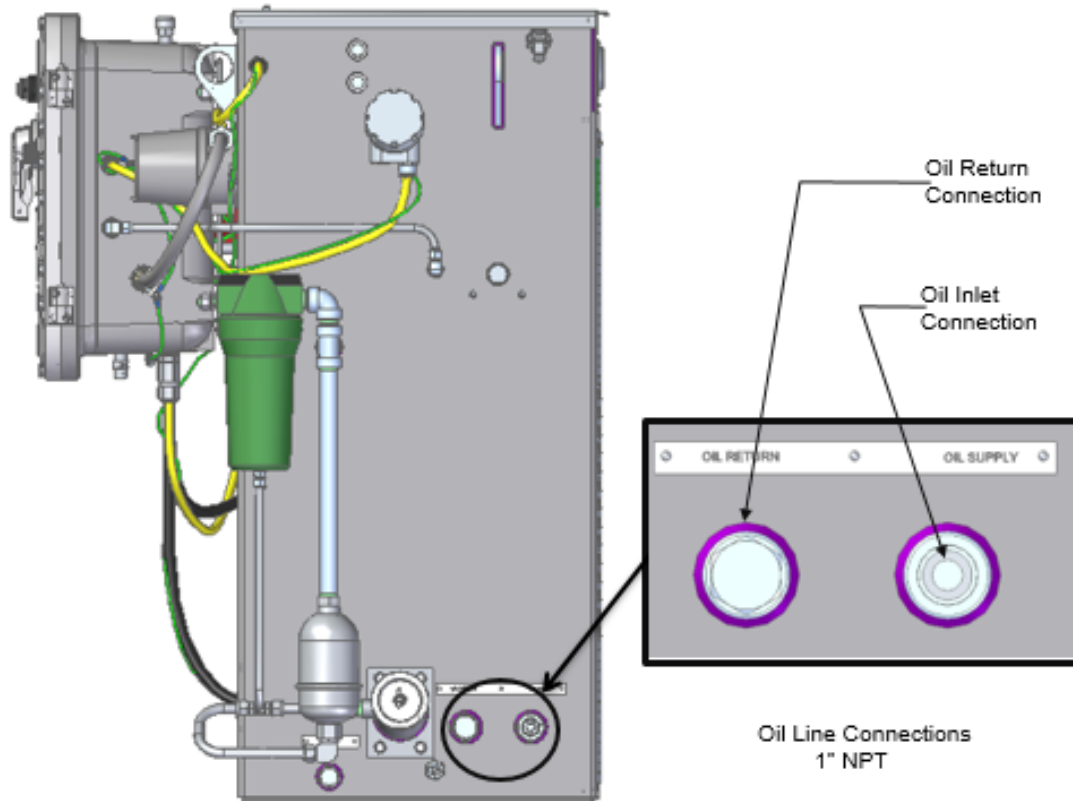The oil inlet and outlet connection sizes are 1" FNPT. The user suction and discharge line sizes (either schedule 40 pipe or smooth I.D. hose) should be ¾" I.D. minimum and 2" I.D. maximum to ensure that no flow restrictions will occur due to line lengths, high viscosity, etc. When processing high viscosity oils, the larger sizes of pipe or hose should be used. If tubing is used, increase the diameter by at least one size. All connections should be tight and free of air leaks.



 	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
			Page 21 of 110	



NOTICE:

Even very small air leaks can dramatically affect pump suction performance. If air bubbles are visible in the sight glass after flow is established, re-tighten all suction connection points.

If a flooded suction to the ThermoJet Oil Purifier is not practical, ensure that the suction height from the reservoir drain to the inlet connection of the ThermoJet® is no more than 8 feet (2.4 meters) above the minimum oil level in the reservoir.

If the suction lift exceeds 8 feet (2.4 meters), install a foot-valve or foot-pump to ensure that the suction pump will prime and hold prime during long-term service.

Ensure that the oil return connection is above the oil level in the reservoir to prevent back flow and flooding of the separation tank when the ThermoJet® is not operating. Return oil must be introduced into the reservoir above the oil level to prevent siphoning when the ThermoJet® is not operating.

To prevent the potential risk of static electricity ensure that free falling oil does not exceed 6 inches (150 mm). If the oil return level exceeds 6 inches (150 mm), insert a guide baffle to smooth out flow to the oil surface in the reservoir.

Even if the ThermoJet® is to be installed temporarily, it should be hard-piped for safety reasons. Hoses are acceptable if they are certified not to collapse under vacuum conditions and are rated for 600 PSIG (42 bar) at 200° F (100° C).

Since all wetted parts of the ThermoJet® are constructed of type 300 stainless steel, it is recommended (but not mandatory) that connecting hard pipe work is also stainless steel.

In accordance with good piping practice, the use of joints, bends, and unnecessary long pipe runs should be minimized. Elevated sections of suction piping in horizontal runs also must be avoided to prevent air pockets from existing.

Connect the suction line to the reservoir low point drain, or to existing purifier connections if the reservoir is constructed in accordance with API 614.



NOTICE:

Ensure that the supply connection to the ThermoJet Oil Purifier is not adjacent to or near any oil return connection in the oil reservoir being serviced. This could result in oil frothing.

When a flooded suction is provided to the ThermoJet Oil Purifier, recommended practice is to install a manual shut-off valve (if one does not already exist) directly onto the reservoir connection routed to the ThermoJet® inlet connection.

If the oil reservoir is located below the ThermoJet® oil inlet connection, a manual shut-off valve is not required or desirable since it creates a line restriction unnecessarily.

The discharge line should be connected above the oil surface and at the opposite end of the reservoir versus the suction connection to ensure optimum circulation of oil through the ThermoJet®. An oil purifier return connection will exist if the reservoir is constructed in accordance with API 614.


NOTE: Do not install any valves or other restrictive devices in the discharge line which could cause back flow and flooding of the unit.

Choose a central convenient location, allowing enough room to connect oil supply and return piping and electrical services. Ensure that unrestricted operator access is maintained at the front of the unit when the cabinet door is open for system operation and ease of access to the electrical control enclosure..

The ThermoJet Oil Purifier has maintenance access doors on the front of the cabinet. Ensure that unrestricted access is provided for system troubleshooting and maintenance.

Condensate Purifier Connection

Condensate Purifier Assembly (CPA) connection is ½” FNPT. Pipe CPA connection is to a dirty / oily water drain system.

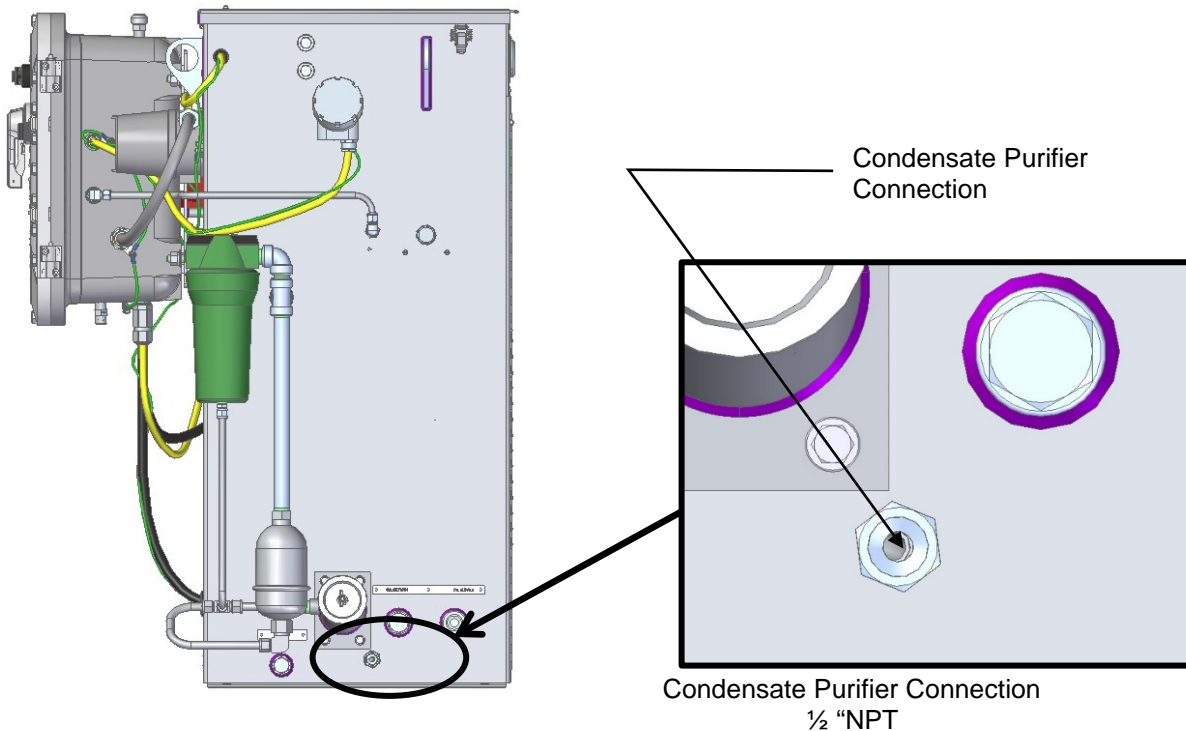




NOTICE:

When cleaning oil spills consult with your lubricating oil supplier and the lubricating oil MSDS documentation regarding safe guards and Personal Protective Equipment (PPE) requirements




System Exhaust and Relief Valve Connections

The exhaust connection is at the 3/4" FNPT demisting filter outlet". Do not reduce the connection size. Smaller connection size will reduce the flow of air supply through the jet mixer.

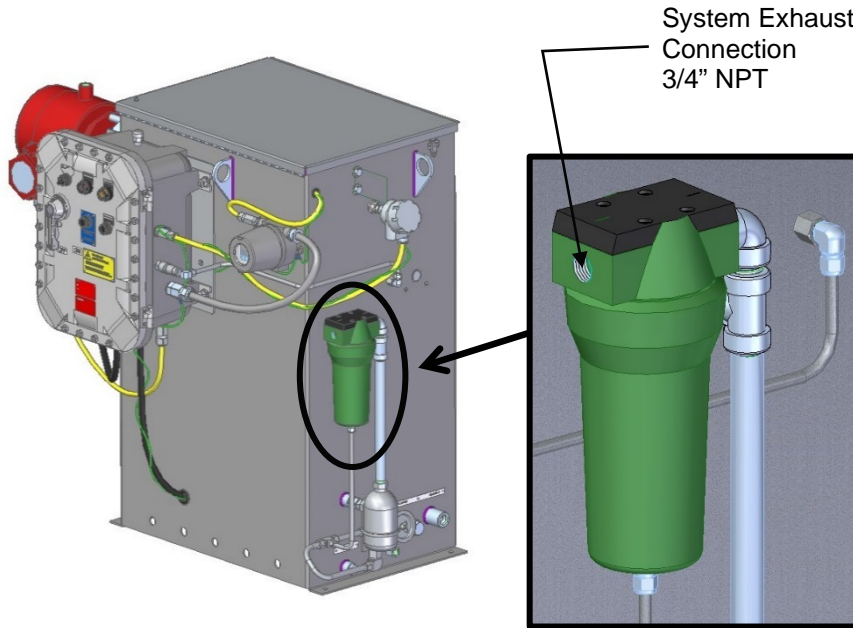

Exhaust Connection




CAUTION

This machine is designed to remove water contamination from the processed oil.

Discharge connection must be made only to a safe space away from walkways and occupied spaces a.


DO NOT BREATH DISCHARGE VAPORS




The exhaust must be piped away to a location that is not occupied. The ends of the vent header pipe should be such that rain, animals and blowing dust and dirt cannot enter. Exhaust piping must be DN20 (3/4" NPT) or larger. Exhaust piping must extend vertically at least 4.5 m / 15 feet above the ThermoJet Oil Purifier.

Electrical Power Connection

Supply power service is made at the left side of the controller enclosure. The connection is 1-1/2" conduit

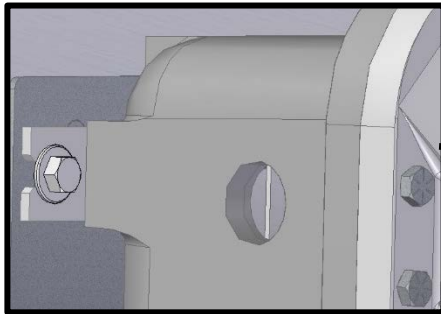

1-1/2" Conduit Connection

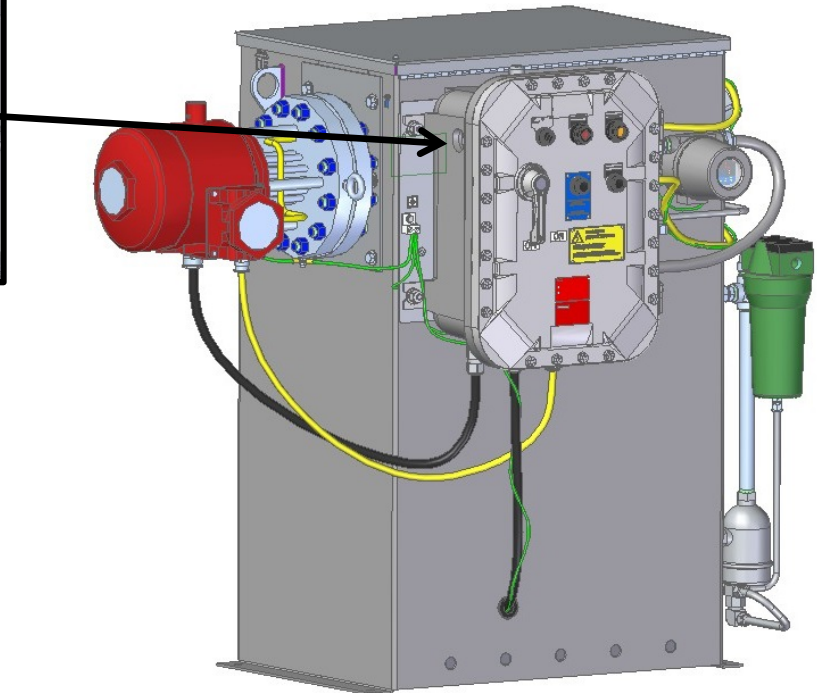

There are no ventilation requirements as long as the unit meets the operating conditions.

	WARNING		
<p>EXPLOSION HAZARD – Do not connect equipment unless supply power has been switched OFF and the area is known to be non-hazardous / safe.</p>			

ThermoJet Oil Purifier is wired for the power supply stated on the nameplate. It must not be re-wired for any other voltage. The power circuit requirements are indicated in the table below. The table shows amperage rating with pump motors running and oil heaters "ON".



WARNING



Electrical power service must have adequate circuit protection. Use the table below for selection of proper user provided interrupt device.

Model	Volts AC	Phase	Amperes
H2700 EB** H2700 EE**	380	3	22
H2700 EC**	400	3	21
H2700 EK**	415	3	20
H2700 EA**	460	3	18

ThermoJet H2700 Oil Purifier Power Requirements



NOTICE:
All electrical connections should only be made by a qualified electrician.




WARNING



A switch or circuit breaker shall be included in the building installation; it shall be in close proximity to the equipment and within easy reach of the OPERATOR; it shall be marked as the disconnecting device for the equipment.

Open the Controller Enclosure by removing the bolts that secure the cover to the box. Service power to the ThermoJet Oil Purifier originates at the circuit breaker terminals L1,-L2 and L3 located in a controller enclosure. See the diagrams below for terminal location and user terminal connection identification. The power connection is three phase. Voltage is as specified on the equipment nameplate. Once all cable connections are securely connected, reinstall the enclosure cover.

Input Power Connects to L1 – L2 – L3

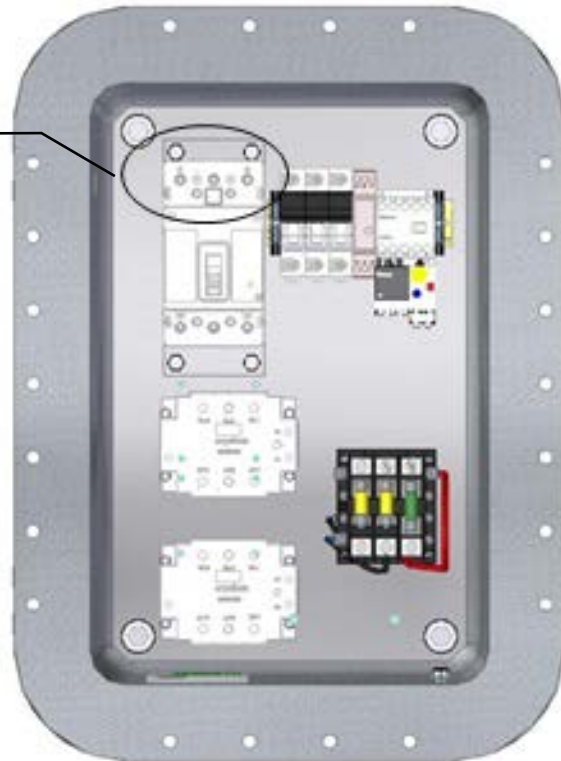


WARNING

To avoid risk of explosion hazard, the Control Enclosure cover must be securely closed with the supplied fasteners..




Grounding

ThermoJet Oil Purifiers must be grounded to ensure safe operation. External ground terminal is located on the left side of the terminal enclosure. See diagrams below for circuit ground connection location.

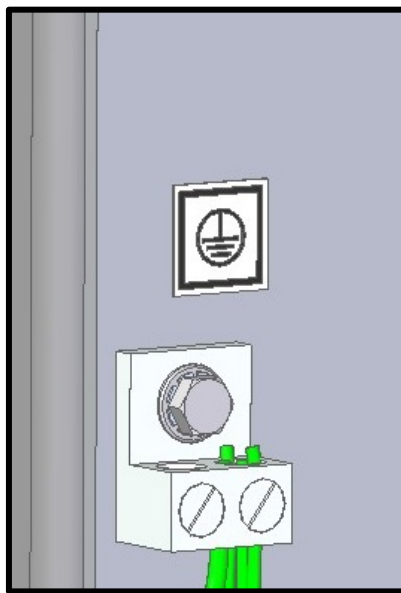

Ground Terminal

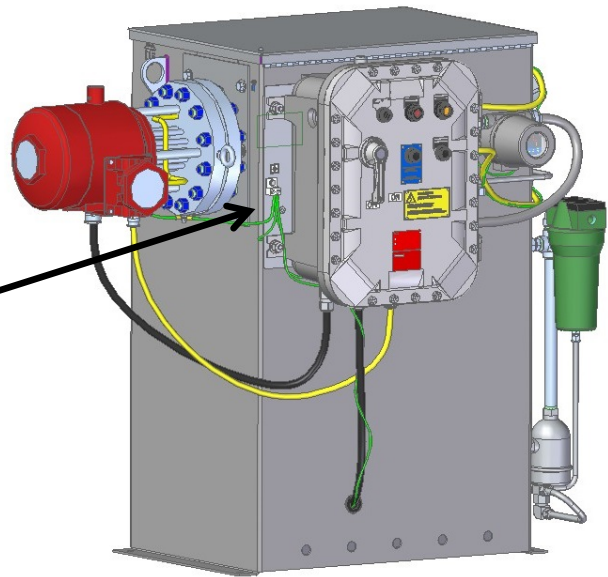



**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**

INSTALLATION AND OPERATING MANUAL

Doc #	77740150
Rev	02
Date	June 2020
Page 29 of 110	

V SYSTEM START-UP AND OPERATION




Start-Up Procedures




Before each start-up, perform a “walk-around” of the purifier installation noting if the points covered in INSTALLATION Section of this manual are correct.

Ensure that the oil filter element is installed in the filter housing and that the O-ring is in good condition.

If installed, open the oil supply block valve at the serviced oil reservoir.

Use the block valve on the bottom of the reservoir to drain any free water which may have accumulated. Care should be taken to avoid spills and ground contamination with the drained waste.

	<p>NOTICE: When cleaning oil spills consult with your lubricating oil supplier and the lubricating oil MSDS documentation regarding safe guards and Personal Protective Equipment (PPE) requirements</p>	 
---	---	---

	<div style="background-color: yellow; border: 2px solid black; padding: 5px; display: inline-block;">CAUTION</div> <p>In case of oil spillage, the user or other responsible body must ensure appropriate cleanup and decontamination is carried out.</p>	 
---	--	--



NOTICE:

Dispose of all contaminated cleaning materials in accordance with all environmental laws, ordinances and directives. Consult your company or plant environmental protection department for disposal policy. Understand the environmental effect of any used cleaning agents used and plan your cleanup accordingly.



Use environmentally friendly products and recycle where ever possible




NOTICE:

Recycle all drained oils.



Ensure that the ThermoJet Oil Purifier Circuit Breaker and the ON-OFF Selector Switch both are in the OFF position.

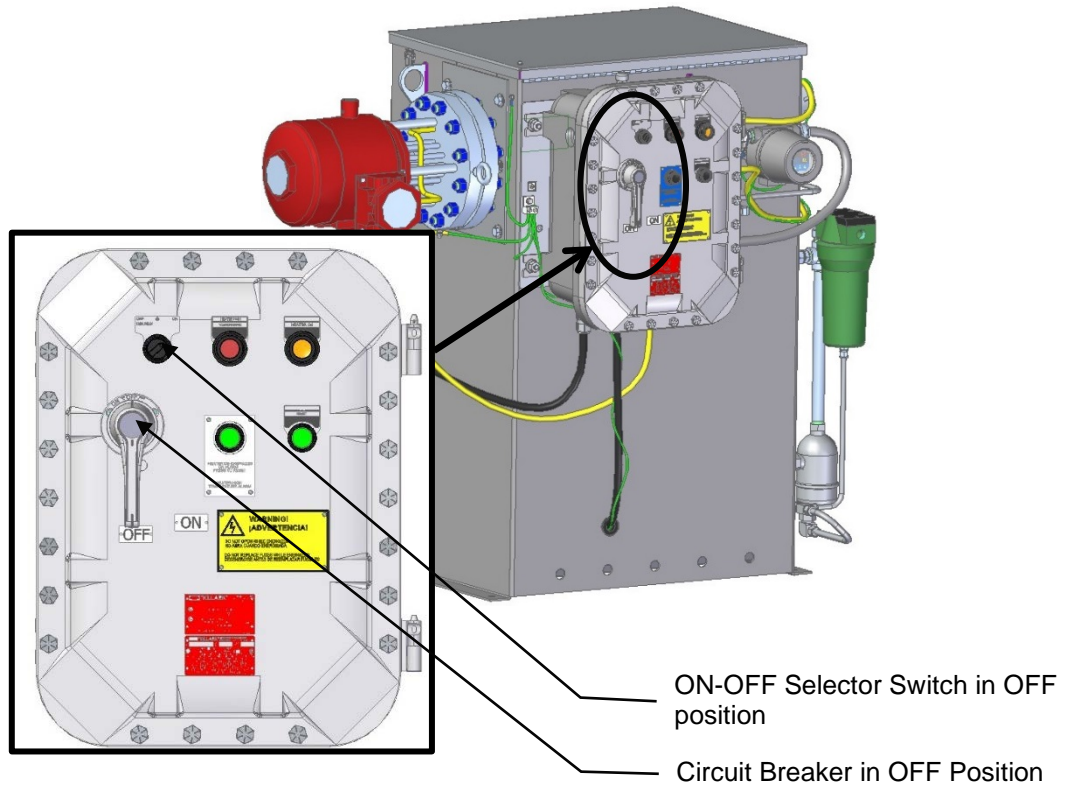

Turn “ON” electrical power at the energy source breaker.

Turn the Circuit Breaker handle to the ON position. Use the ON-OFF Selector switch to jog the electric motor and check proper motor rotation. Verify the motor rotation against the directional arrow located on drive end of the motor.

If incorrect, place the Circuit breaker in the OFF position and disconnect supply power at the source.

Ensure that all sources of electrical power are disconnected before opening the controller. Failure to do so may result in serious injury or even death.

Open the Controller Enclosure and interchange any two of the three incoming power supply leads at the circuit breaker. Ensure all cable terminations are secure before closing and securing the enclosure door with all bolts.




WARNING


To avoid risk of explosion hazard, the Controller Enclosure cover must be securely closed with the supplied fasteners..



Turn the Circuit Breaker handle to the ON position, and again use the ON-OFF Selector Switch to jog the electric motor and verify proper motor rotation. Once the motor rotation is correct leave the Selector Switch in the ON position and allow the motor to run.

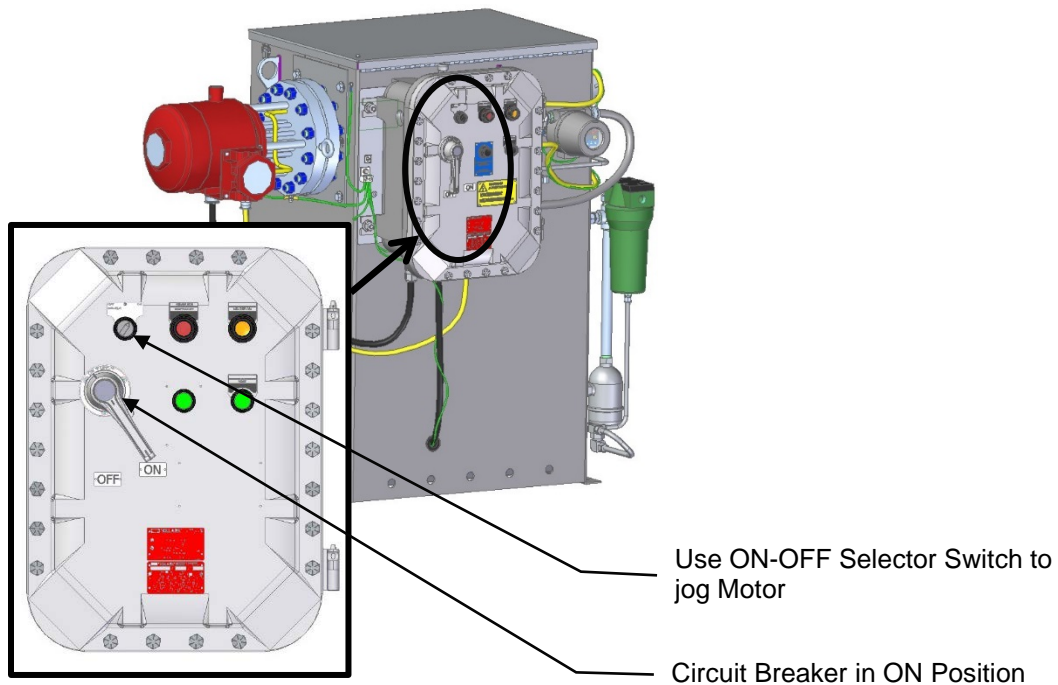

Open the air bleed/sample valve on the downstream of the inlet pump so that air in the suction line can escape. As soon as oil flow is established, close this valve to prevent any oil spills.

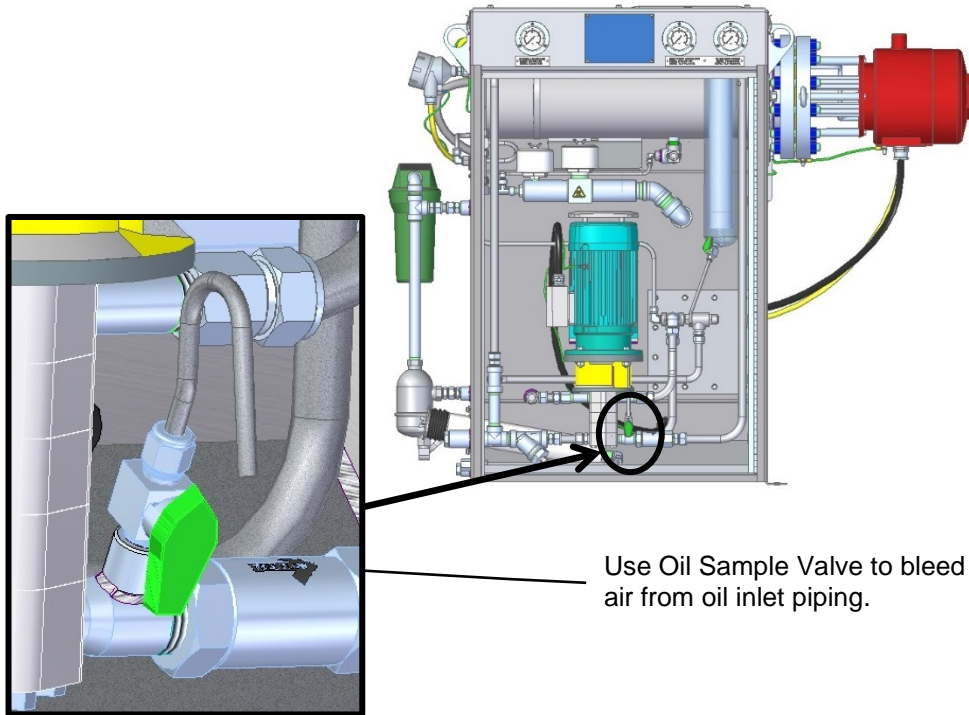

Use Oil Sample Valve to bleed air from oil inlet piping.

	WARNING	
<p>Pump outlet pressure may build quickly. Open valve slowly. Use a container to catch and collect any oil that drains from sample tube</p>		

	CAUTION	
<p>In case of oil spillage, the user or other responsible body must ensure appropriate cleanup and decontamination is carried out.</p>		




NOTICE:

Wear appropriate personal protective gear.

When cleaning oil spills consult with your lubricating oil supplier and the lubricating oil MSDS documentation regarding safe guards and Personal Protective Equipment (PPE) requirements




Once oil fills the heater tube and oil reaches the jet mixer, the inlet and outlet pressure to the oil filter will increase to near the normal operating pressure of 240 PSI.

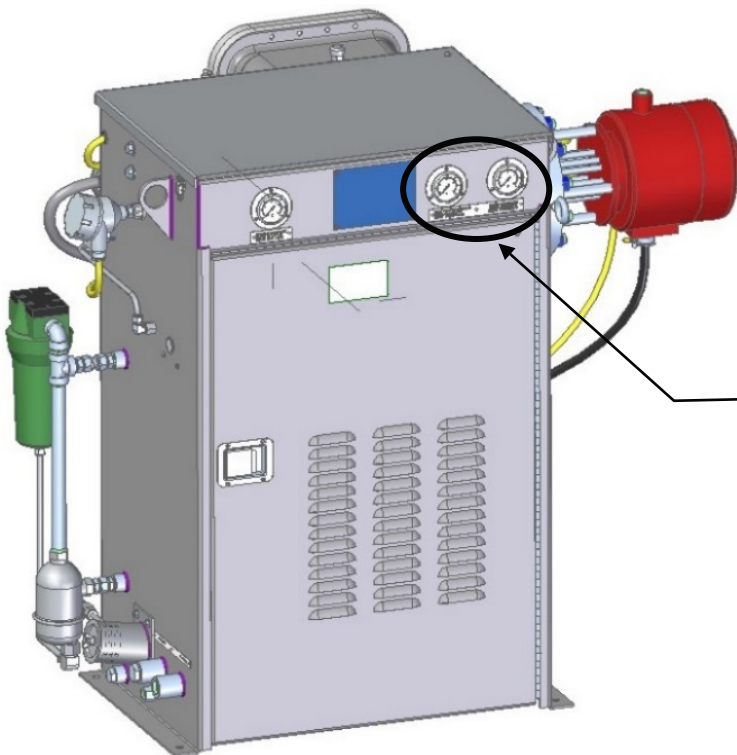

Observe pressure on inlet and outlet filter pressure gauges

Heater Operation:

The electric heater will not energize until flow is established and all the air escapes from the heater tube and the oil pressure builds. This ensures that the heater does not energize before it is immersed in oil. A pressure switch connected to the oil supply tubing downstream of the heater. The pressure switch provides a permissive start interlock and allows the heater to energize once the oil pressure reaches 9.3 BAR (135 PSIG). This may be noted on the inlet pump discharge and filter discharge pressure gauges as well as by the amber HEATER ON indicator light.

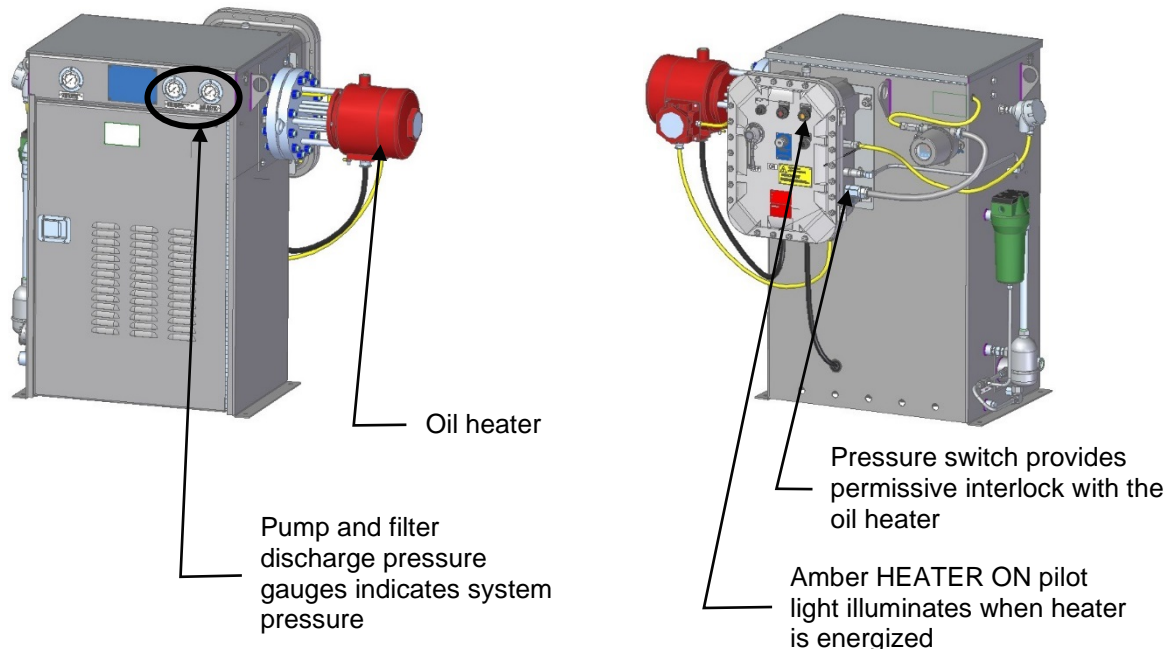

At initial start-up the red Heater High Temperature alarm pilot light and the yellow Heater ON will be illuminated. Press the Heater High Temperature Alarm reset button to reset the high temperature alarm and turn the Heater High Temperature alarm pilot light OFF. The yellow Heater On pilot light will remain ON until the oil temperature approaches the normal operating temperature set by the temperature controller.

The temperature controller is factory set at 82° C (180° F) and is field adjustable. The temperature controller is accessed by unscrewing the glass window from the explosion proof electrical enclosure.

CAUTION

Care should be taken when removing and reinstalling the controller enclosure so prevent damage to any flame proof joint, such as between the enclosure and the treaded cover. Flameproof joints are not to be repaired in the field. If the flame path is damaged the enclosure is to be removed from service and replaced with a new properly working enclosure.

○



Unscrew enclosure cover to access heater controller

Use UP and DOWN buttons to adjust setting

DANGER

During making adjustments to the oil heater control temperature setting the system must be energized and operating. Before removing the cover to the controller contact appropriate operating personnel and obtain all required hot work permits. Ensure that the area has been inspected and determined to be nonhazardous. Observe all hot work permit procedures and policies.

Press the up or down arrow keys quickly on digital display. This will brighten the individual digit of the display. Once the desired digit is brighten, simply hold down the up or down key to increase

 	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
			Page 38 of 110	

or decrease the value. Perform this procedure with each digit until desired temperature setting is reached. Temperature is now set. The alarm modes in the controller are not being used.

The oil heater is equipped with three (3) thermocouples for monitoring heater operation.

- A thermocouple is in the oil stream located at the heater vessel discharge. This thermocouple provides the oil temperature signal to the temperature controller (see above) for heater ON-OFF control
- A thermocouple is attached to one of the heater elements located in the oil stream inside of the heater vessel. This thermocouple provides a signal for high temperature alarm and heater cutout for the heater element
- A thermocouple is clamped to the outside of the heater vessel. This thermocouple provides a signal for a high temperature alarm and cutout for the heater vessel surface.

Should the heater element or vessel surface thermocouple output reach the high temperature alarm/heater cutout setting, power to the oil heater element is interrupted. When this happens the oil temperature as indicated on the heater controller display will begin to decrease. As the oil temperature falls below oil heater controller setting, the heater controller will sense the decreasing oil temperature and attempt to energize the heater. However the high limit controller will prohibit the oil heater from energizing and oil temperature will continue to fall. The Heater On pilot light will be illuminated because the heater controller is providing an ON signal to the heater power control relay.




NOTICE:


When a Heater High Temperature alarm occurs the red pilot light will illuminate. The alarm pilot light will remain illuminated and the oil heater will not be operable until the Heater High Temperature reset button is depressed. Press the reset push button to resume heater operation.

Adjusting System Pressure

The pressure control valve (**PCV1**) downstream of the Oil Heater is factory set at 16.5 BAR (240 PSIG) at the heater process temperature of 82° C (180° F). Initially, the filter inlet and outlet pressures will vary due to higher oil viscosity at start-up.

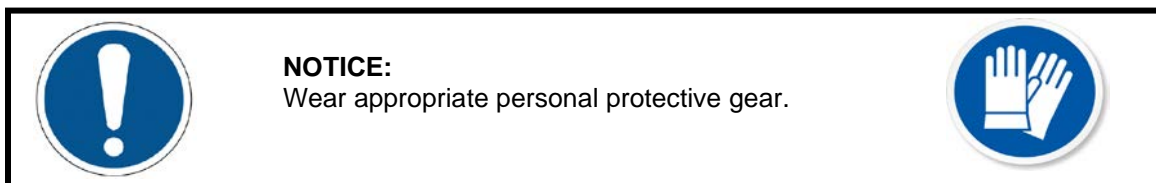

Once the oil temperature approaches the normal operating range, the pressure will return to the normal operating setting of approximately 16.5 BAR (240 PSIG). Slight adjustment to the operating pressure may be necessary. If the pump discharge pressure is too low, adjust **PCV1** by turning adjustment screw clock-wise to increase the oil pressure and c-clockwise to decrease the oil pressure setting. Once adjusted, the filter discharge pressure range should be 14.5-16.5 BAR (210-240 PSIG).

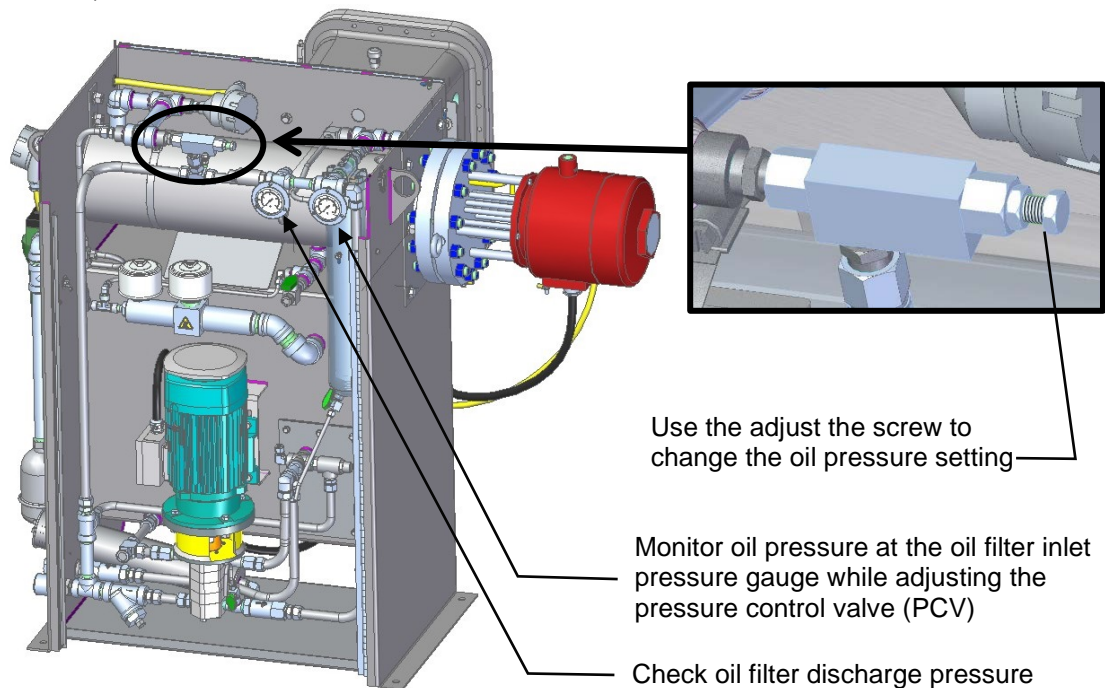


A on the inlet side of the oil filter. The relief valve is factory set at 18.6 BAR (270 PSIG). If the oil pressure will not reach 16.5 BAR (240 PSIG) the relief valve may have operated and opened. See the trouble shooting section of this manual for additional information.

System Discharge Pressure

No adjustments are necessary to the discharge pressure. Once the pressurized oil is processed through the ThermoJet Jet Mixer it enters the separation vessel where the air and removed water vapor is vented out of the system. The return oil pump takes the processed oil from the separation tank and returns it to the equipment reservoir or bulk oil supply tank being serviced. System pressure on the return oil circuit is maintained by a check valve set at 3.4 BAR (50 PSIG). Return oil pressure can be monitored by observing the System Discharge pressure gauge.


A pressure relief valve is installed on the in the return oil circuit before the check valve. The relief valve is factory set at 18.6 BAR (270 PSIG). If the oil pressure will not reach 3.4 BAR (50 PSIG) the relief valve may have operated and opened. See the trouble shooting section of this manual for additional information.

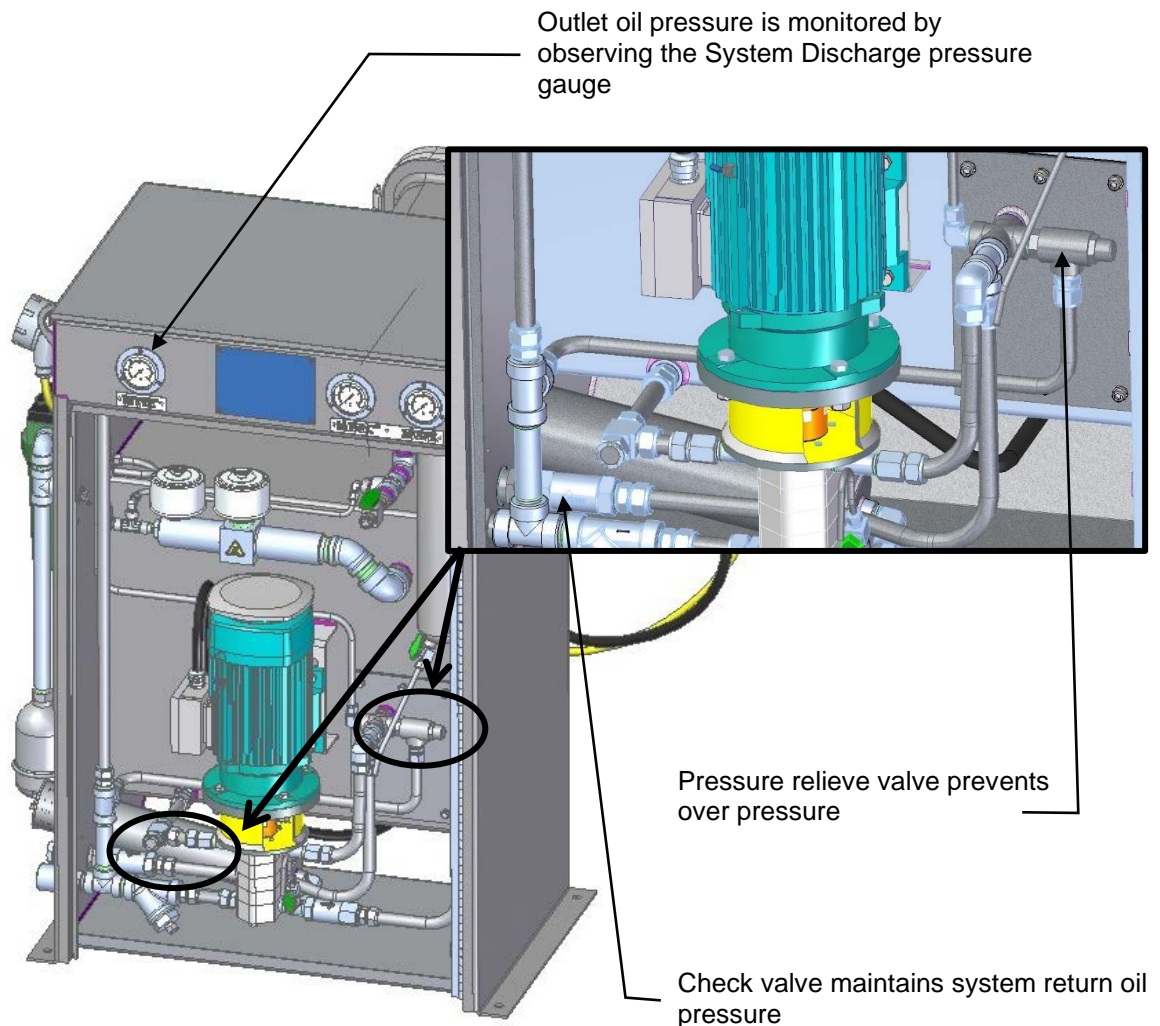

System Vent Operation

No adjustment is necessary for operation of the vent system discharge. Once the system is operating and air begins to enter the separation tank it is vented to atmosphere...

To accommodate any condensate removed by the ThermoJet while air and water vapor are exhausting, a liquid drainer is furnished to route the condensate to the condensate purifier assembly. The excess oil is removed from the condensate and the water is properly routed to the sewer system.

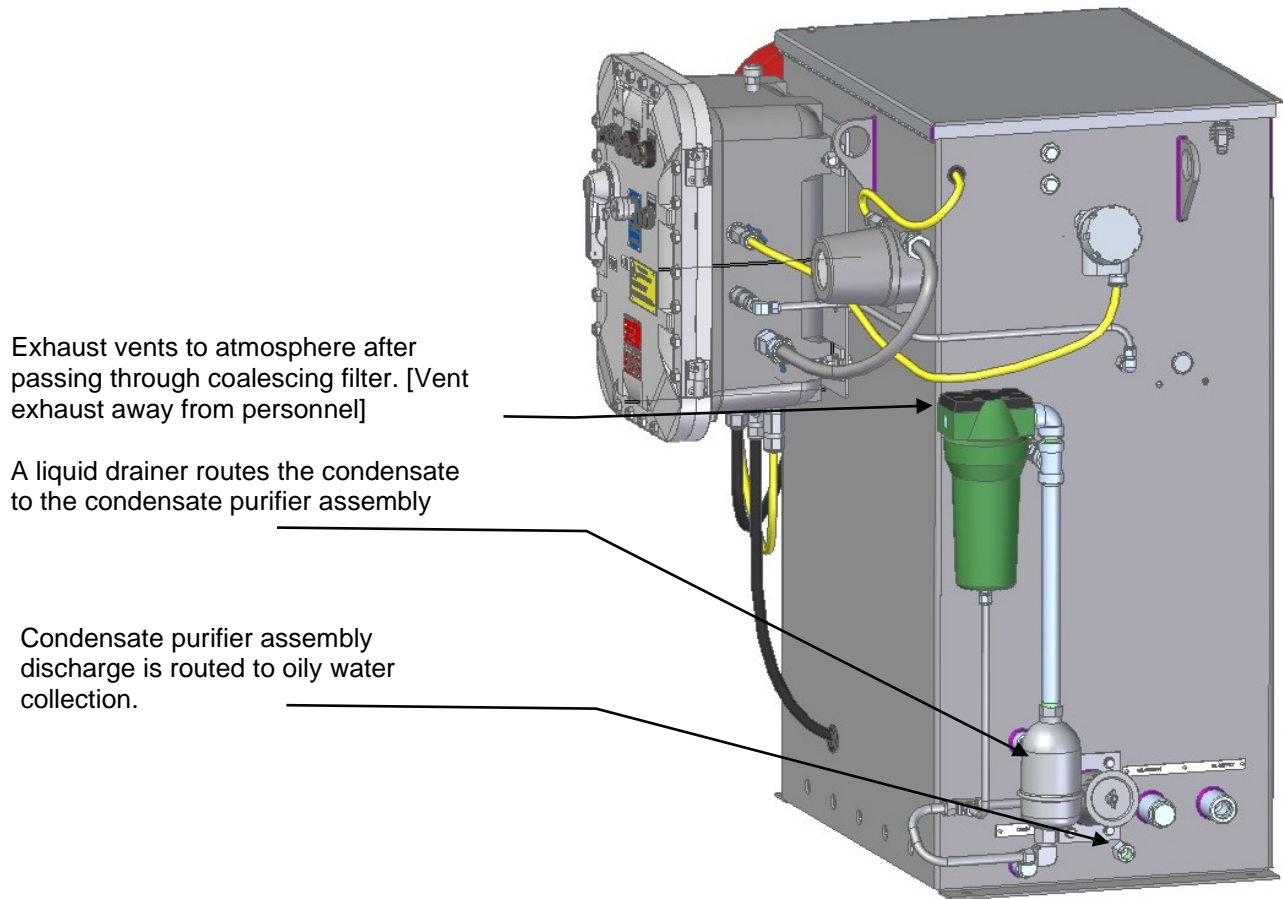

Exhaust vents to atmosphere after passing through coalescing filter. [Vent exhaust away from personnel]

A liquid drainer routes the condensate to the condensate purifier assembly

Condensate purifier assembly discharge is routed to oily water collection.

<p>The discharge from the Condensate Purifier Assembly may be contaminated with the substances being removed from the processed oil. Ensure that the methods used to manage and dispose of these materials are in compliance with all governing authorities and plant policies and procedures.</p>		



NOTICE:

Wear appropriate personal protective gear.

When cleaning oil spills consult with your lubricating oil supplier and the lubricating oil MSDS documentation regarding safe guards and Personal Protective Equipment (PPE) requirements



CAUTION

In case of oil spillage, the user or other responsible body must ensure appropriate cleanup and decontamination is carried out. Reference *CLEANING AND DECONTAMINATION* in the ROUTINE MAINTENANCE section of this manual.





NOTICE:

Dispose of all contaminated cleaning materials in accordance with all environmental laws, ordinances and directives. Consult your company or plant environmental protection department for disposal policy. Understand the environmental effect any used cleaning agents used and plan your cleanup accordingly.

Use environmentally friendly products and recycle where ever possible



 	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
			Page 43 of 110	

Monitoring Normal Operation


The daily operation of the ThermoJet system for the process operator has been reduced to monitoring and daily checks of the ThermoJet oil Purifier to emergency procedures in the event of a major malfunction. Except for emergencies, routine adjustment of the unit is not required. Any change in the Inlet Pump Discharge pressure, Filter Discharge pressure or the System Discharge pressure from the initial set points is an indication that some operational variable has changed. Care should be taken before making adjustments that might offset the failure symptoms and lead to more serious problems before detection and corrections can be made.

Keeping system adjustments to a minimum is intended to make the systems more reliable and to insure proper operation. It is not meant to discourage the natural troubleshooting initiative of the process technician. Operators should be familiar with the operating instruction of this machine, knowing how to read gauge values and alarm settings before attempting these procedures.

Dailey ThermoJet Oil Purifier System Operational Checks

The following operating checks should be made daily;


- a) The normal inlet Pump Discharge pressure gauge reading is between 14.5 and 16.5 BAR (210 to 240 PSIG) at operating temperature.
- b) The normal Filter Discharge pressure gauge reading is between 14.5 and 16.5 BAR (210 to 240 PSIG).
- c) The normal System Discharge pressure gauge reading is between 3.5 and 6.9 BAR (50 to 100 PSIG) at operating temperature depending upon size/configuration of the oil return line.
- d) The temperature controller output setting gauge reading is relatively steady within 10° F of the temperature controller set point on electric heated units. The normal process temperature is between 160°-185° F.
- e) Removed water vapor is exhausting.
- f) Compare the Pump Discharge and Filter Discharge pressure gauges for the pressure difference between the two readings. If the pressure drop is approaching 1.7 BAR (25 PSID), the filter element is plugged and must be changed.

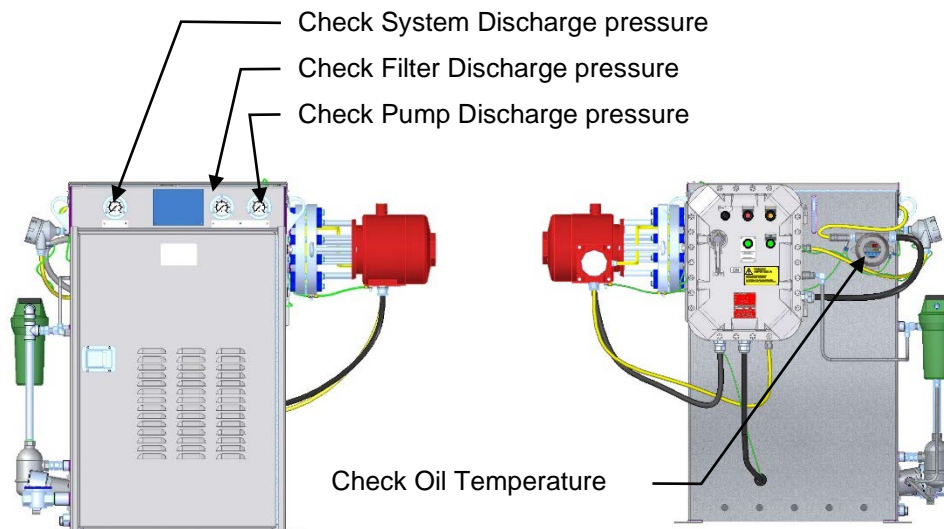

System Shutdown

ThermoJet Oil Purifiers are equipped with a timing relay which delays cessation of oil flow for 2 minutes after the power selector switch has been transferred from the ON to the OFF position. The purpose of this delay is to allow sufficient time for the oil heater to “cool down.” During this cooling interval the oil heater is inoperable and the oil temperature will decrease. At the end of the 2 minute delay the motor will stop running and the pump will cease to operated, and the oil pressure will falls to zero.

To shut down the system, 1) turn the selector switch from the ON to the OFF position, 2) allow the system to operate until the motor turns off, 3) turn the main disconnect switch from the ON to the OFF position.

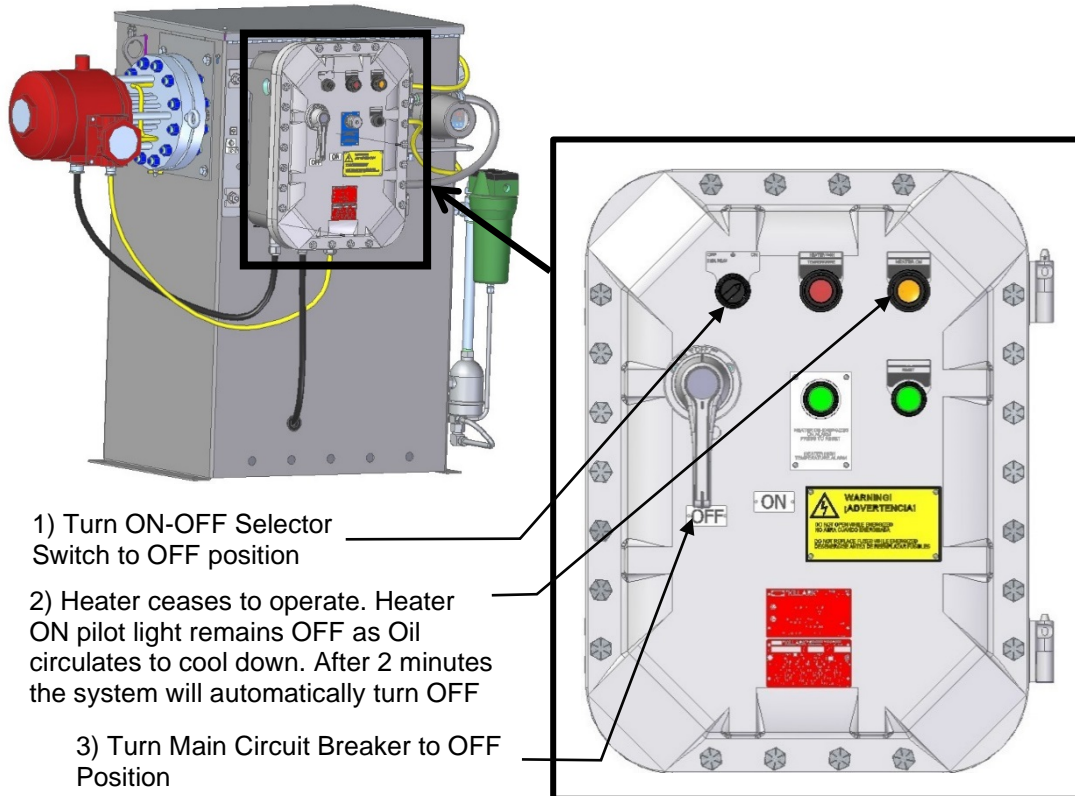

If the unit is turned OFF for system maintenance, see the section of this manual titled *ROUTINE MAINTENANCE*. If the unit is being decommissioned see the section of this manual titled *REMOVAL FROM USE, DISPOSAL AND TRANSPORT*



NOTICE:

For EMERGENCY SHUT DOWN switch the main circuit breaker handle to OFF position.

VI ROUTINE MAINTENANCE



NOTICE:

Only a qualified person should make replacement of spare parts.







WARNING





Before performing maintenance tasks ensure that the area is clear of all hazardous or explosive gases or materials, and that a **HOT WORK PERMIT** or other authorization to work has been issued and posted according to all facility standards and procedures. Where required, area monitoring and alert systems and process must be in place and in operation during the performance of work. Observe all local and state laws and restrictions. Failure to do so may result in explosion and loss of property, serious injury or even loss of life.







Maintenance Checks

To insure proper system operation the following maintenance procedures should be performed according to the schedule indicated below. If the any interim abnormal operating condition is observed on a shorter than indicated interval, maintenance actions should be executed as those conditions are observed. If your operating conditions are considered to be in an extremely dusty or humid environment, the maintenance schedule should be accelerated. Consult with the nearest manufacturing office/service center for further discussion and recommendations.

		 
<p>The oil in the ThermoJet Oil Purifier and its subassemblies may be contaminated with the substances being removed from the processed oil. Ensure that the methods used to manage and dispose of these materials are in compliance with all governing authorities and plant policies and procedures.</p>		

	NOTICE: Wear appropriate personal protective gear.	  
<p>When cleaning oil spills consult with your lubricating oil supplier and the lubricating oil MSDS documentation regarding safe guards and Personal Protective Equipment (PPE) requirements.</p>		

		 
<p>The oil filter will be filled with contaminated oil. Ensure that the container used for receiving the drained oils and other fluids are sufficiently large to avoid spills.</p>		
<p>In case of oil spillage, the user or other responsible body must ensure appropriate cleanup and decontamination is carried out. Reference <i>CLEANING AND DECONTAMINATION</i> in the <i>ROUTINE MAINTENANCE</i> section of this manual.</p>		






WARNING




Contents in this system are under pressure while operating. Surfaces and contents may be HOT. Once the system has been shut down allow sufficient time for cooling before servicing this equipment.





NOTICE:

Dispose of all contaminated cleaning materials in accordance with all environmental laws, ordinances and directives. Consult your company or plant environmental protection department for disposal policy. Understand the environmental effect any used cleaning agents used and plan your cleanup accordingly.

Use environmentally friendly products and recycle where ever possible



Schedule for Routine Maintenance Checks and Tasks			
Maintenance Task	Semi Annual	Annual	Maintenance Spare Parts Needed
General Inspection	X		
Oil Filter Maintenance	X		p/n 19103006 Filter Element p/n 40520235 O-ring <R1>
Y-Strainer Maintenance	X		p/n 49002078 Gasket
Condensate Purifier Assembly Maintenance	X		p/n 19201002 Oil Absorption Sock
Oil Mist Eliminator Maintenance		X	p/n 77750101 Filter Element
Air Breather Maintenance	X		
Separation Vessel Maintenance	X		p/n 40511031 Gasket
Oil Heater Maintenance		X	p/n 40500060 Flange Gasket, 6 Inch
Auto Tune Oil Heater Controller		X	
Check and Adjust Operating Pressures	X		
Verify Low Oil Pressure Switch Operation	X		
Verify Oil Heater High Temperature Cutout Operation	X		

 	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
			Page 48 of 110	

General Inspection

Prior to performing routine maintenance task a general inspection should be made for the overall operating condition of the ThermoJet Oil Purifier and system. A list of items to be checked is provided below. When necessary, this list should be expanded to include additional check points applicable to your particular installation that are important in assuring proper and continuous and safe operation.

- Check and record all pre-service system operating conditions;
 1. Oil temperature
 2. Inlet oil pressure
 3. Outlet pressure
 4. Pump discharge pressure
- Check over all condition of the cabinet, cabinet door and hinged cover operation.
- Check interior of cabinet for leaks and oil spills.
- Check oil supply and return piping and / or hoses for leaks.
- Check condition of all pressure gauges.


Oil Filter Maintenance

Check the inlet pump discharge and filter discharge pressure gauges for the pressure loss between the two readings. If the pressure loss is approaching 1.7 BAR (25 PSID), the filter element is plugged and must be changed. The filter element should be changed when the pressure loss is 1.7 BAR (25 PSID)

To change the filter element, first shut down the ThermoJet. See the section titled *Shut Down Procedures* on how to turn the ThermoJet Oil Purifier OFF.

Remove the vent plug located on top of the filter housing to prevent the siphoning of oil out of the heater tube. Open the drain valve at the bottom of the filter housing and allow the oil to drain into a suitable container.

Turn the locking ring on the filter housing counter-clockwise using the supplied wrench that is attached to the filter housing until the housing is loose. Drop the filter housing down from the filter head. Clean the interior of the filter housing by use of a safe solvent and/or wiping with a lint free cloth. Install a new oil filter (p/n 1910-3006) and O-ring (p/n 4051-1031).

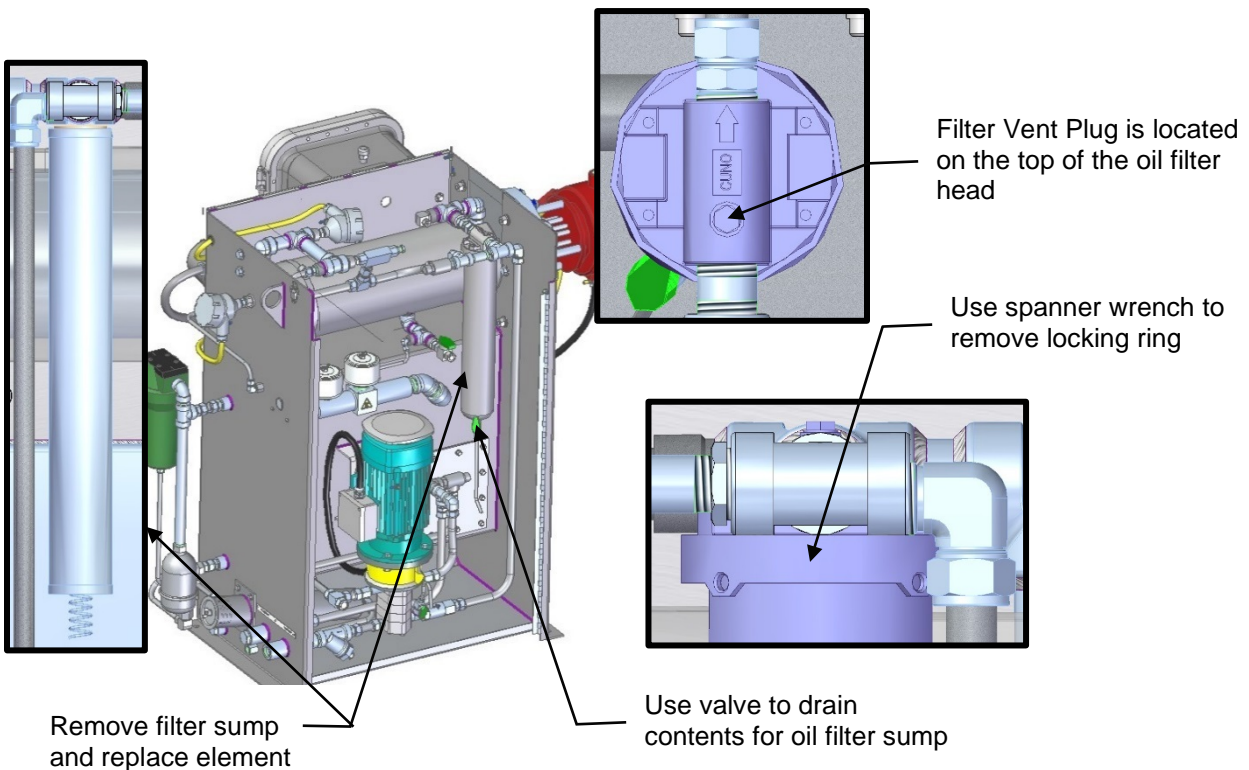

Reinstall the filter housing and using the spanner wrench to tighten and secure the filter housing with the lock-nut.

Reinstall the vent plug on top of the filter housing.

See the sections of this manual titled *Cleaning and Decontamination* and *Removal from Use, Disposal and Transport* for additional information..

Y-Strainer Maintenance


To check and clean the suction screen in the Y Strainer, first shut down the ThermoJet. See the section titled *Shut Down Procedures* on how to turn the ThermoJet Oil Purifier OFF.

Close and tag the nearest oil block valve to the ThermoJet oil inlet and outlet connection.

To drain the collected contents that have been collected in the Y-strainer basket, you only need to remove the small plug from the bottom of the strainer. Collect and properly dispose of all collected contents.

To remove and clean the strainer screen, remove the large plug. The suction screen along with the dirty oil and particulate can be removed from the bottom of the strainer. Collect and properly dispose of all collected contents. Clean the suction screen by washing and flushing. The use of a brush may be necessary to remove small particulate for the screen mesh. Check the plug seal and replace if necessary.

Once cleaning is completed, install the suction screen into the bottom of the Y-strainer body, using the plug to hold in place. Ensure that the plug is tight to avoid leaks or pump cavitation when restarting the machine.

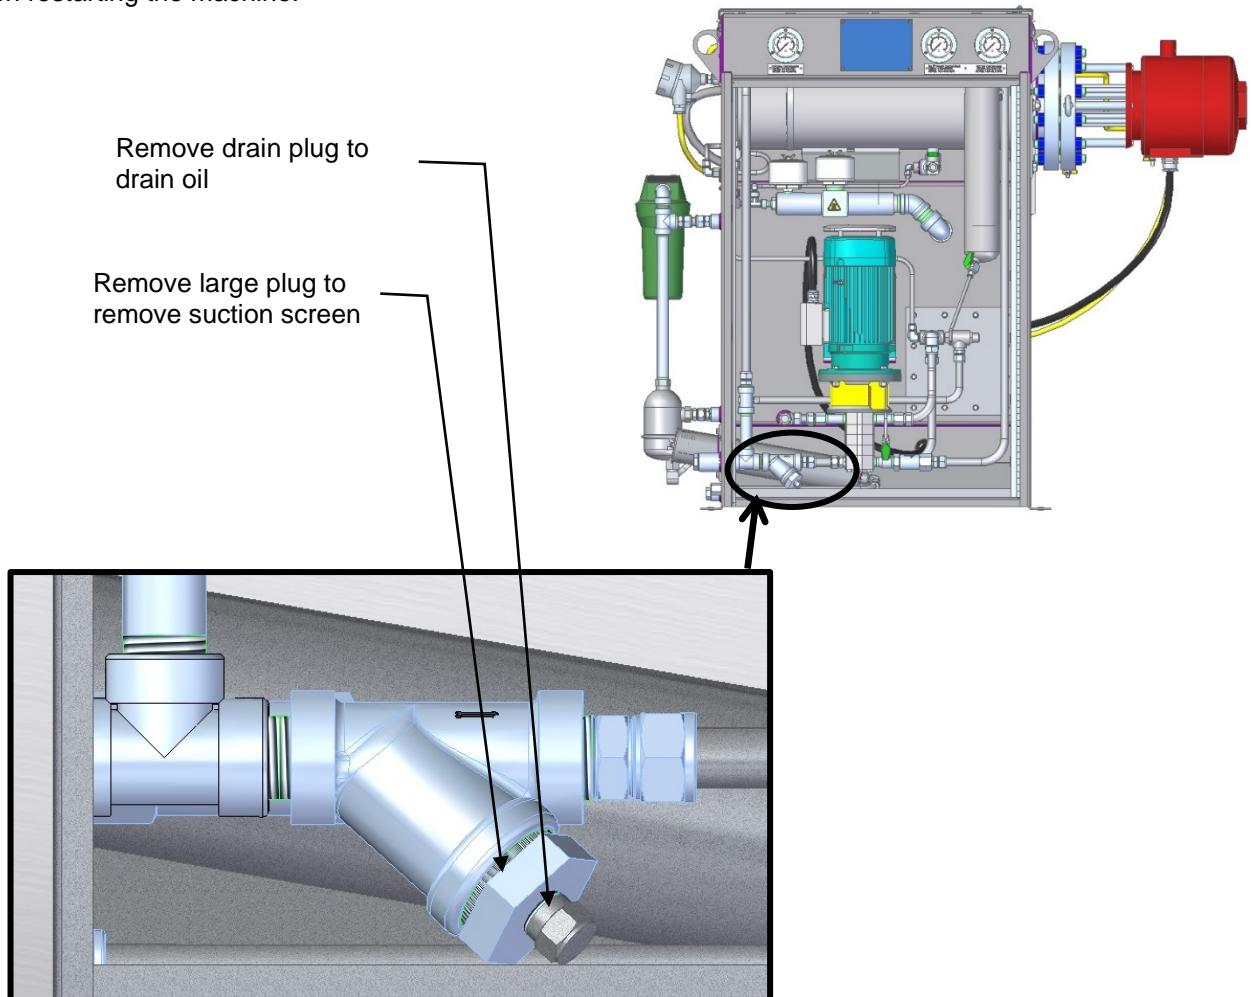


Condensate Purifier Assembly Maintenance

Maintaining and replacing the oil absorption media in the Condensate Purifier Assembly (CPA) can be done while the ThermoJet is operating.

Replace oil absorption media sock if saturated. This absorption media sock should remain effective for two to four weeks. Periodic visual inspection is the only way to determine if sock is saturated.

To replace the absorption media sock locate the cover cap on the CPA housing. Remove the cap and pull the media out of the housing.

Inspect the interior of the housing and clean as necessary. Install a new absorption media sock and re-install the cover cap.

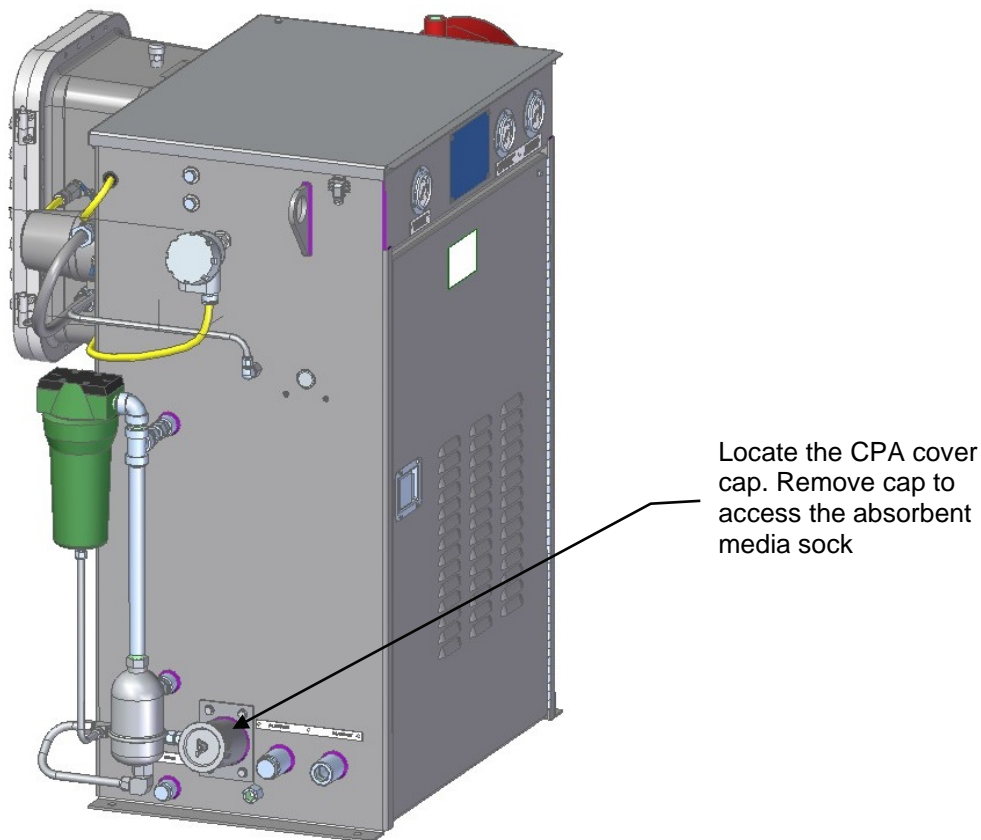

Oil Mist Eliminator Maintenance


The ThermoJet Oil Purifier must be shut down before performing maintenance on the oil mist eliminator. The oil mist eliminator is located on the left side of the unit. Maintenance involves removing and cleaning the oil filter housing and replacing the filter element.

First shut down the ThermoJet. See the section titled *Shut Down Procedures* on how to turn the ThermoJet Oil Purifier OFF.

Close and tag the nearest oil block valve to the ThermoJet oil inlet and outlet connection.




To remove the filter housing first remove the drain tube from the bottom of the filter housing. Next firmly grasp the filter housing with both hands and lift upward and turn to the left (Clock wise). The filter housing can then be lowered away from the filter mounting head. To remove the filter element grasp and pull down. The filter element will slide off of the filter mounting nipple.

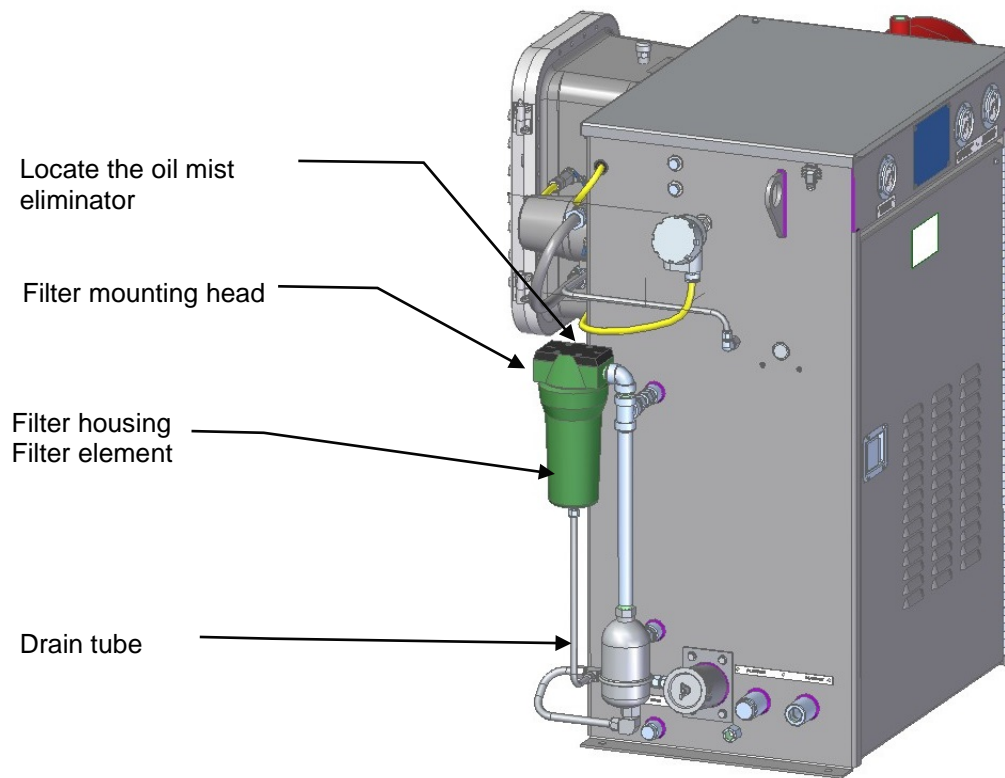Inspect the interior of the filter housing and wipe clean as necessary. Check the drain tube to insure that it is clear and unobstructed. Install a new filter element by sliding onto the mounting nipple. Replace the filter housing by sliding it over the newly installed element, then pushing it upward against the bottom of the filter mounting head and turning to the right (C-Clock wise). Reinstall the drain tube to the bottom at the bottom of the oil mist eliminator.




Air Breather Maintenance

There are two inlet air breathers located on top of the jet mixer. The jet mixer is inside of the ThermoJet Model H2700E console cabinet. This maintenance operation involves removing and cleaning the screens in both air breathers and then reinstalling them on the jet mixer.

	<p style="text-align: center;">WARNING</p> <p>Contents in this system are under pressure while operating. Turn the ThermoJet Oil Purifier OFF before servicing. Surfaces and contents are HOT. Once the system has been shut down allow sufficient time for cooling before servicing this equipment.</p>	 
---	---	--

To access the inlet air breathers open the cabinet door and locate the jet mixer. The inlet air screens are located on top of the jet mixer.

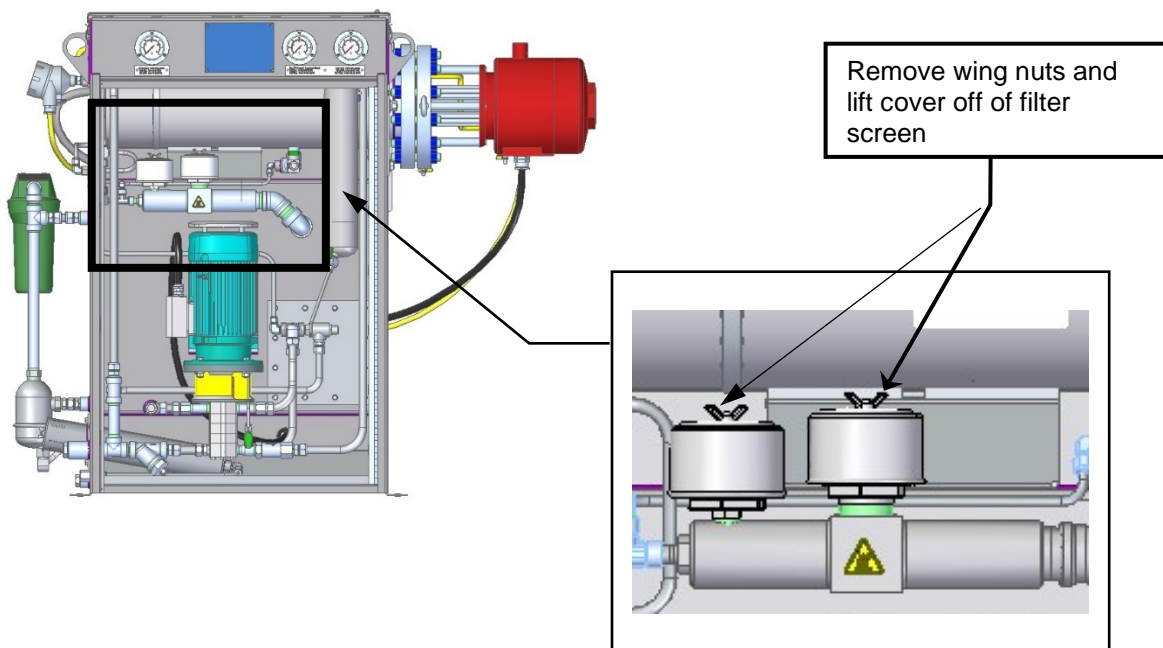

To access the air filter screens remove the wing nuts from the top of the air breathers and lift the covers from the assembly. Remove the filter screens and clean. Once the filter screens are clean, reinstall them and replace the covers and wing nuts.

Separation Vessel Maintenance


The ThermoJet Oil Purifier must be shut down before performing separation vessel. This maintenance operation involves removing the separation inspection cover plate and cleaning the interior of the separation vessel. The inspection cover plate is located on the interior of the ThermoJet Model H2700E console cabinet.

First shut down the ThermoJet. See the section titled *Shut Down Procedures* on how to turn the ThermoJet Oil Purifier OFF.


Close and tag the nearest oil block valve to the ThermoJet oil inlet and outlet connection.




First drain all oil from the separation vessel and the inlet oil filter. A drain plug is located in the outlet pump suction line between the separation vessel outlet and the pump suction for draining the separation vessel. Use the drain valve located at the bottom of the inlet oil filter vessel for draining the oil filter. For additional information on draining the oil from the oil filter see the section in this manual titled *Oil Filter Maintenance*. Use a pail to gather the oil. See the sections of this manual titled *Cleaning and Decontamination* and *Removal from Use, Disposal and Transport* for additional information.

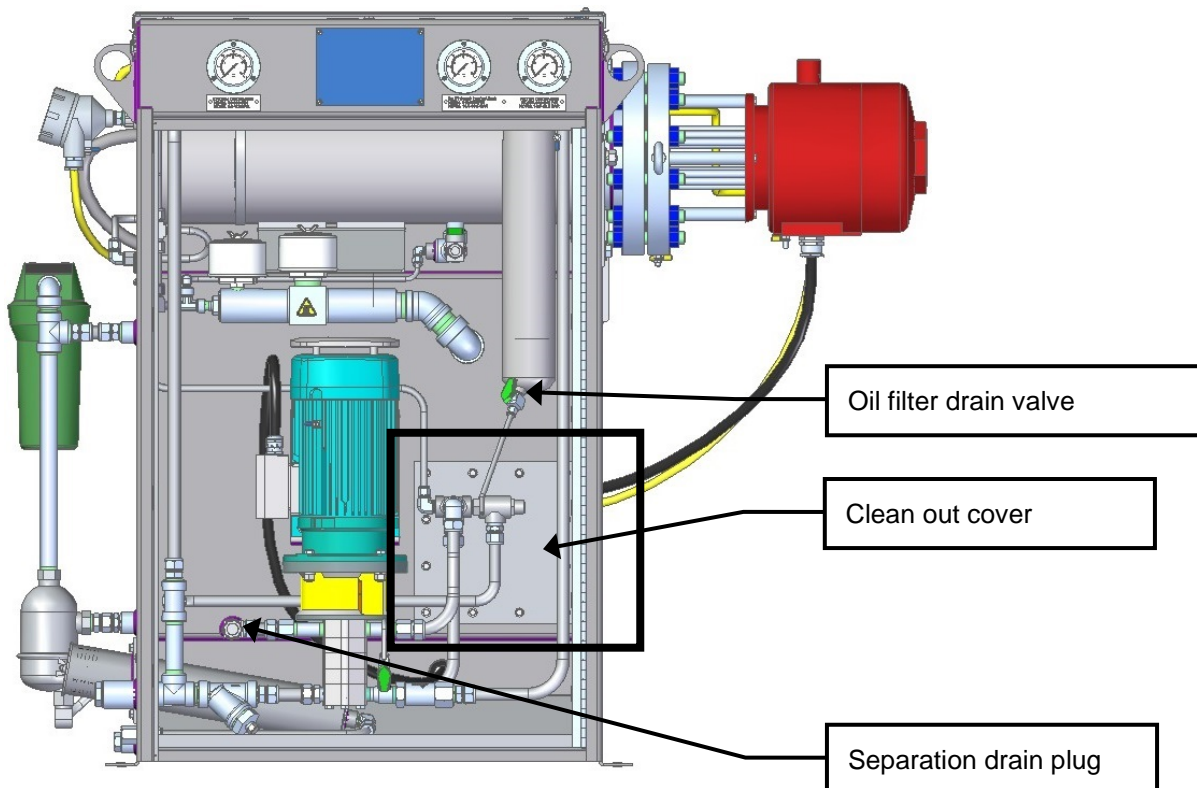

There are six stainless steel tubes that are connected to the separation vessel clean out cover or that restrict immediate access that must first be removed. These are 1) oil outlet tube to the oil outlet connection 2) oil supply tube from the outlet pump 3) oil pressure relief tube from the outlet pump pressure limiting valve 4) oil supply tube between the inlet pump and in oil filter 5) the drain tube connected to the oil filter drain valve and 6) .oil pressure tube to the outlet oil pressure gauge

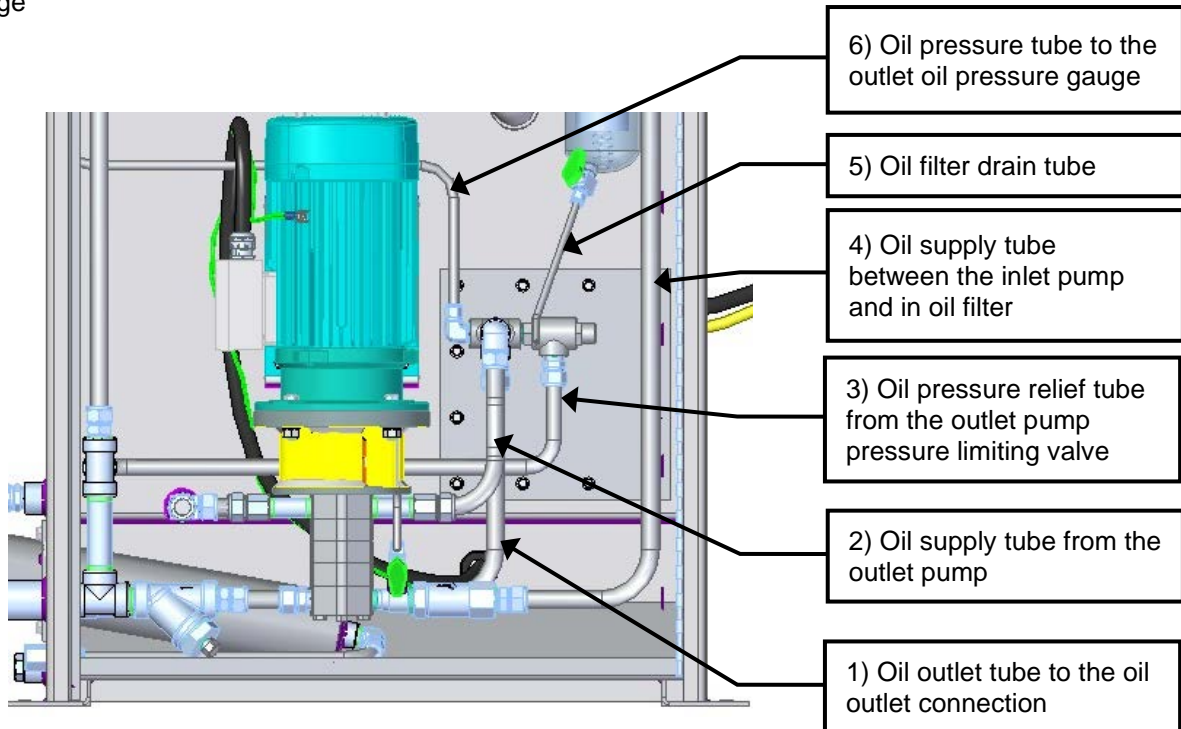


Once all tubing has been removed remove the separation vessel cover plate from the vessel. The cover plate is secured in place with twelve socket head screws. Remove the screws and set aside for reuse. Lift the cover plate from the separation vessel. Note that the oil level control valve is mounted to the rear of the cover plate.

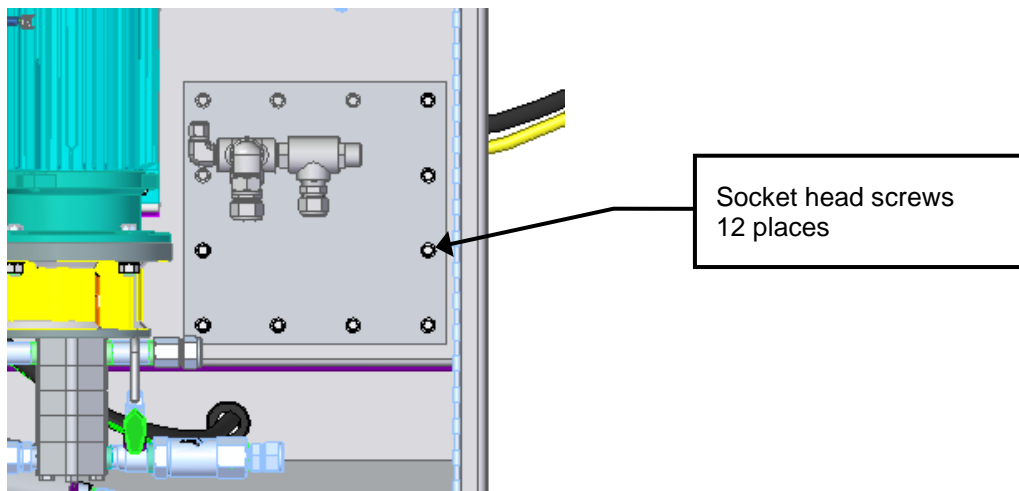

Once the cover plate and level control valve has been removed inspect the interior of the separation reservoir and clean using a lint free rag. See the sections of this manual titled *Cleaning and Decontamination* and *Removal from Use, Disposal and Transport* for additional information.

Inspect the oil level control valve for operation and by lifting the float. The valve should operate smoothly without hanging or sticking as the float moves over its operation range.

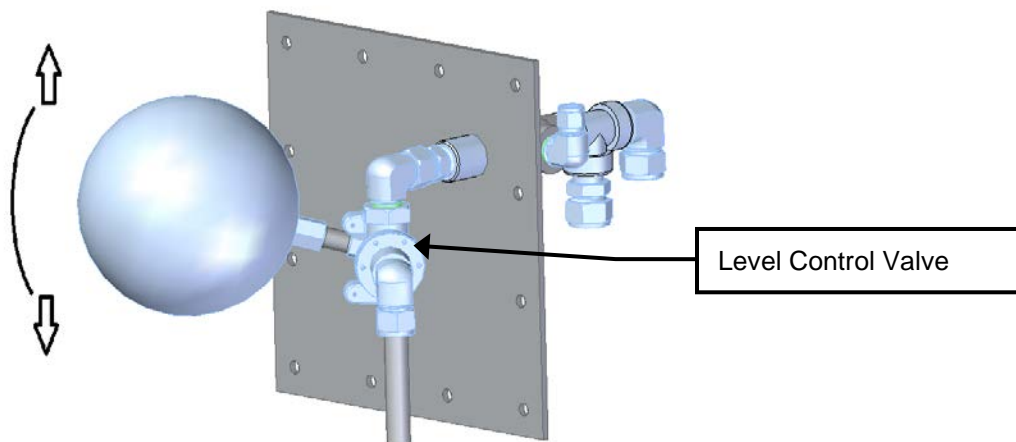

If the level control valve sticks or does not operate smoothly, it should be replaced.

Use part number 51850100 VALVE, LEVEL CONTROL.



IMPORTANT NOTE:

When disassembling the level control valve from the clean out cover, make note of the valve and float orientation. It must be assembled in the same position in order to properly operate and fit into the separation vessel.

Once all parts are inspected and determined to be in proper working order, reassemble the clean out cover onto the separation vessel using a new gasket and the screws from disassembly.

Use replacement part number 40511031 GASKET, OIL LEVEL CONTROL PLATE - VITON



Reinstall all tubing as disassembled. Insure that all connections are tight.



Reinstall the reservoir drain plug

Ensure that the filter drain valve is in the closed position.

Oil Heater Maintenance

The ThermoJet Oil Purifier must be shut down before performing oil heater maintenance. The oil heater is located on the right side of the unit. Maintenance involves removing the oil heater bundle for inspection and cleaning of the oil heater vessel.


	WARNING	
<p>Surfaces and contents are HOT. Once the system has been shut down allow sufficient time for cooling before performing this maintenance task.</p>		

	DANGER	
<p>Ensure that electrical power is turned OFF and all electrical circuits serving this machinery have been locked out and tagged out before performing this maintenance operation. Failure to do so may result in serious injury, loss of property or even death.</p>		


Before performing this maintenance task, first shut down the ThermoJet. See the section titled *Shut Down Procedures* on how to turn the ThermoJet Oil Purifier OFF.

Close and tag the nearest oil block valve to the ThermoJet oil inlet and outlet connection.


Next ensure all of the oil has drained from the oil heater vessel. The heater vessel drain is located on the interior of the ThermoJet H2700E cabinet. Remove the closure cap from the drain valve and set aside. Using a pail to gather the oil, open the drain valve located at the bottom of the heater vessel and collect the oil. The heater internal oil volume of the heater vessel is approximately 14.8 liters (3.9 gallons). See the sections of this manual titled *Cleaning and Decontamination* and *Removal from Use, Disposal and Transport* for additional information.

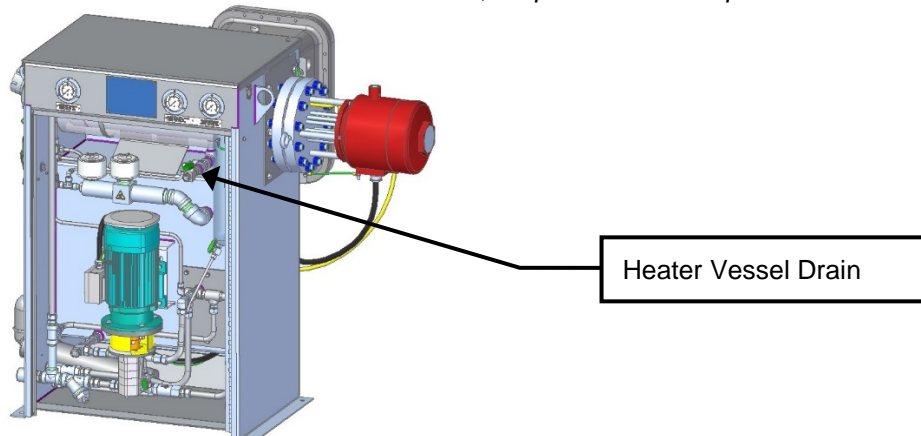

Once electrical power has been removed and locked out from the unit, open the electrical terminal enclosures for the oil heater and the high oil temperature thermocouple and disconnect the cable connecting wires from the terminals.

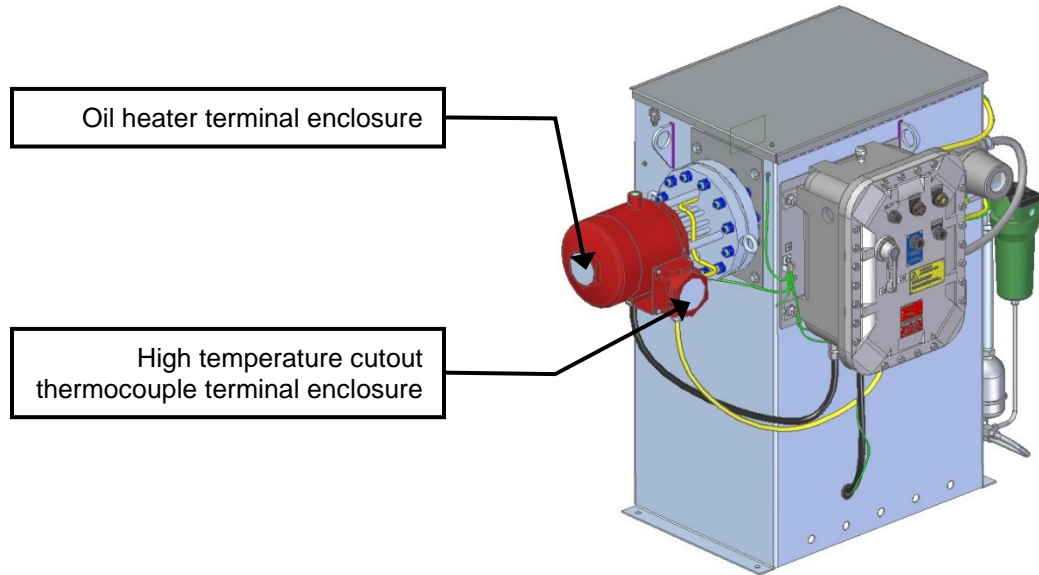

Loosen the compression nut on the cable glands and slide it down the cable. Pull the cables through the cable gland so as to remove them from the two electrical terminal enclosures.

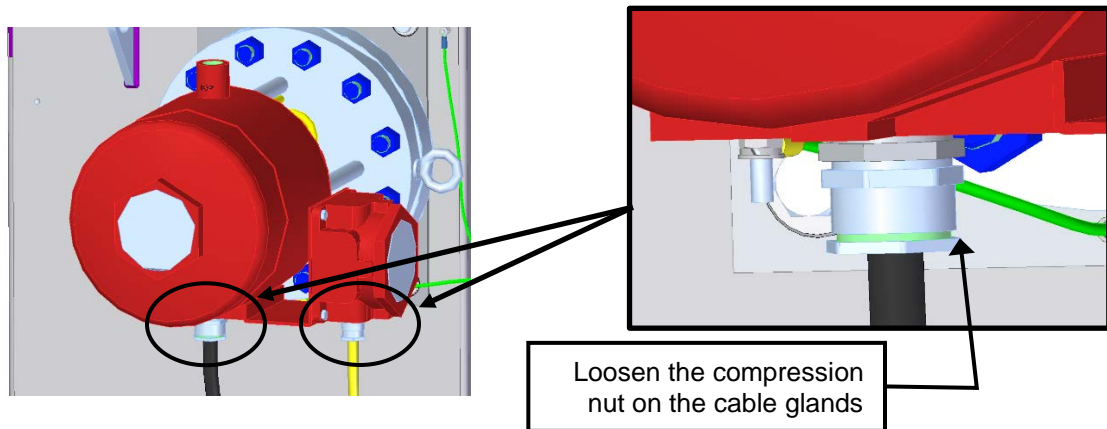








Use suitable transport equipment for removing the heater bundle from the heater vessel, lifting and re-installing the heater into the heater vessel. Ensure that the heater is secured prior to and during lifting and transport. Stand clear of the all equipment while being maneuvered. Crane and fork truck operators should be properly trained in there operation.




Heater approximate weight is 84 Kg (185 pounds)





NOTICE:

When removing the oil heater bundle from the heater vessel, the end of the vessel will be open. Care should be taken to avoid, minimize and control oil spills. Consult with your lubricating oil supplier and the lubricating oil MSDS documentation regarding safe guards and Personal Protective Equipment (PPE) requirements. See the sections of this manual titled *Cleaning and Decontamination, Removal from Use, Disposal and Transport and Draining and Cleaning Procedures* for additional information

Attach a suitable lifting strap to the heater tube at the two lifting eye bolts in the heater flange. Remove all of the slack from the lifting strap so as to provide support for the heater as it is unbolted from the heater vessel flange, but taking care not to apply excess tension. Remove the flange studs and nuts from the heater that secure it to the heater vessel. Once the heater bundle is free from the heater vessel, remove it and set aside.





CAUTION



Take care to guard against pinching and crushing hazards when handling the heater bundle.

Inspect the heater for coking and for cracked or split elements. Clean the heater bundle to remove any residue or contamination that may have entered the heater vessel.

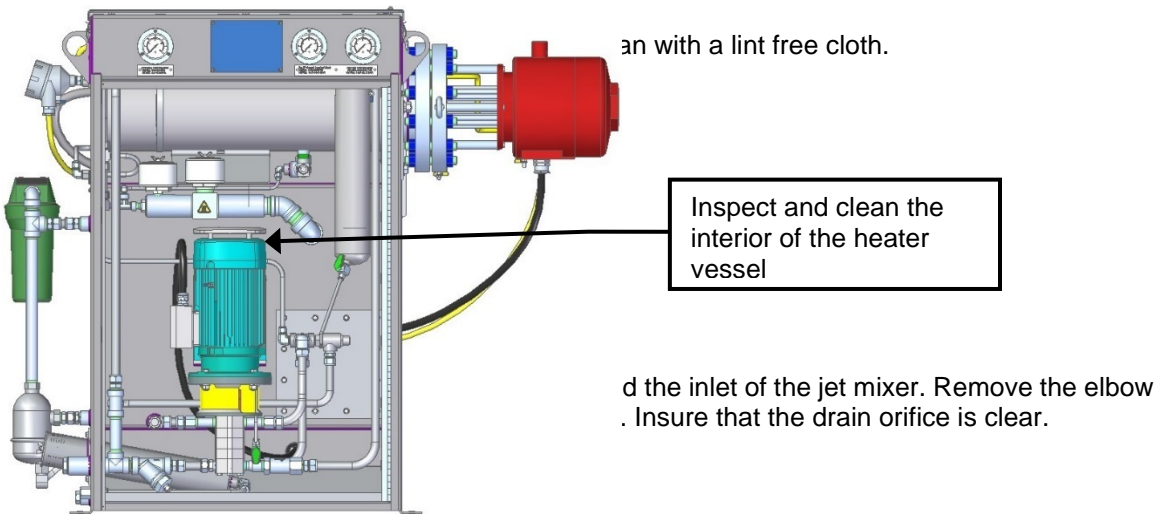

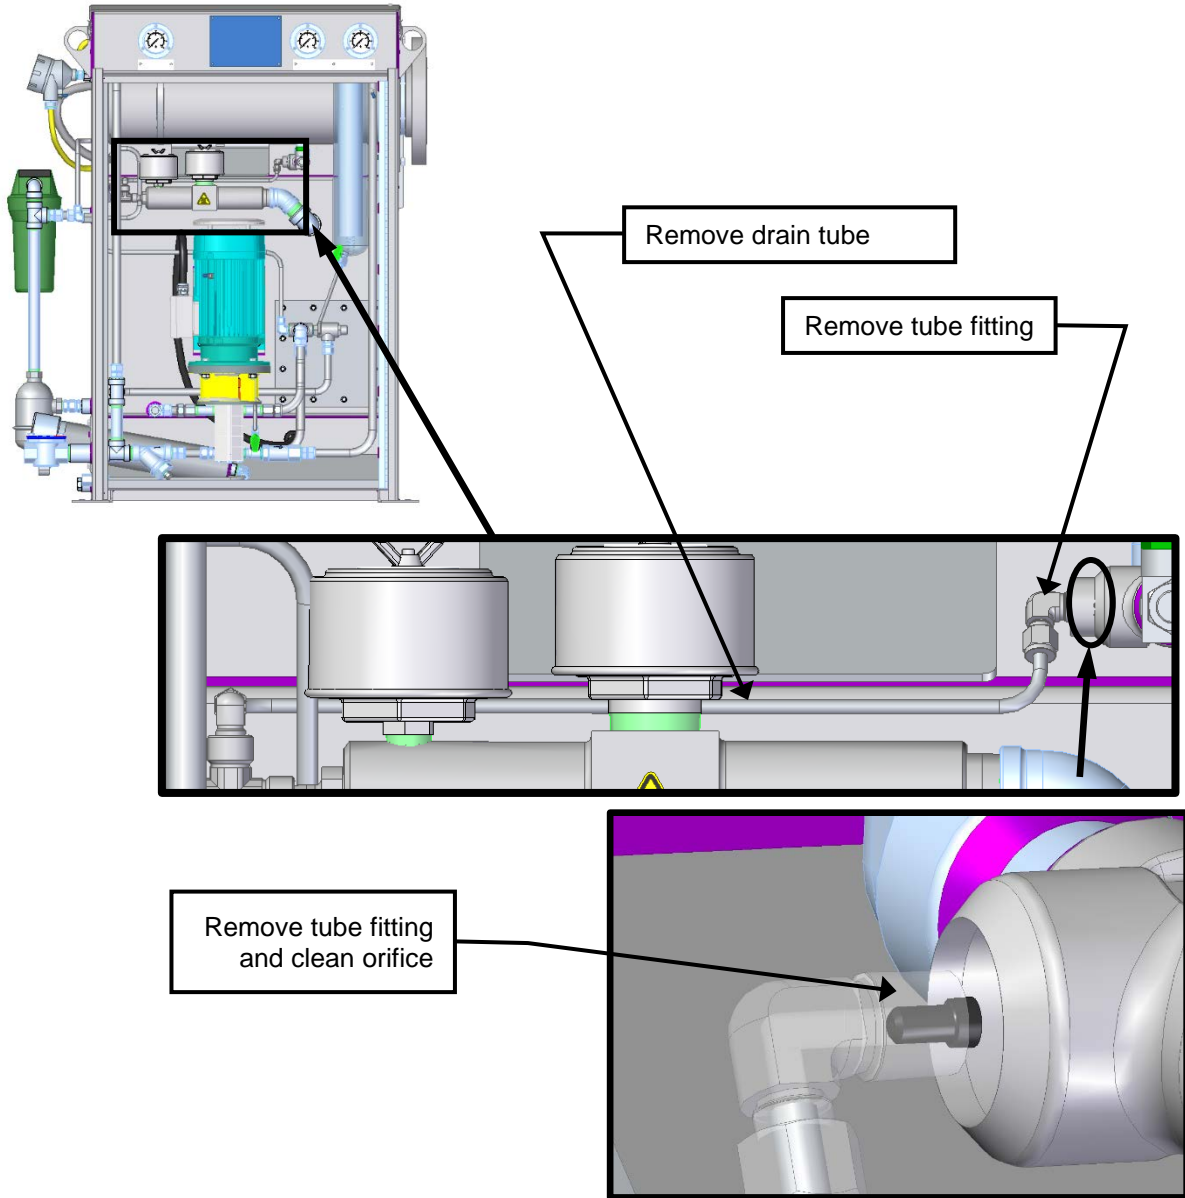

Once inspection and cleaning is complete reinstall the tube fitting with drain orifice and the drain tubing from the bottom of the heater tube and the jet mixer

With a new flange gasket, use the flange studs and nuts to install the heater bundle into the heater vessel. Gasket p/n 40500060



CAUTION

Take care to guard against pinching and crushing hazards when handling the heater bundle.






WARNING

Use suitable transport equipment for removing the heater bundle from the heater vessel, lifting and re-installing the heater into the heater vessel. Ensure that the heater is secured prior to and during lifting and transport. Stand clear of the all equipment while being maneuvered. Crane and fork truck operators should be properly trained in there operation.
Heater approximate weight is 84 Kg (185 pounds)




Reinstall the gable glands into the heater and high temperature terminal enclosures. Connect the power wiring to the heater terminals. Reinstall terminal cover.

Connect the thermocouple wire to the terminals in the thermocouple terminal enclosure. Take care to observe proper connections for (+) and (-) terminations. Reinstall terminal cover.



NOTICE:
All electrical connections should only be made by a qualified personnel.



WARNING

Ensure that all enclosure covers are securely installed.




Install the cap on the drain valve in the bottom of the heater vessel and insure that the drain valve is in the close position.


Auto Tune Oil Heater Controller



The ThermoJet Oil Purifier must be running and operating normally in order to perform this maintenance task.

	WARNING	
<p>Before performing this maintenance task ensure that the area is clear of all hazardous or explosive gases or materials, and that a HOT WORK PERMIT or other authorization to work has been issued and posted according to all facility standards and procedures. Where required proper monitoring and alert systems and process must be in place and in operation during the performance of work. Observe all local and state laws and restrictions. Failure to do so may result in explosion and loss of property, serious injury or even loss of life.</p>		
		

To access the heater controller, unthread the enclosure cover it from the base.


	CAUTION
<p>Care should be taken when removing and reinstalling the controller enclosure so prevent damage to any flame proof joint, such as between the enclosure and the treaded cover. Flameproof joints are not to be repaired in the field. If the flame path is damaged the enclosure is to be removed from service and replaced with a new properly working enclosure.</p>	

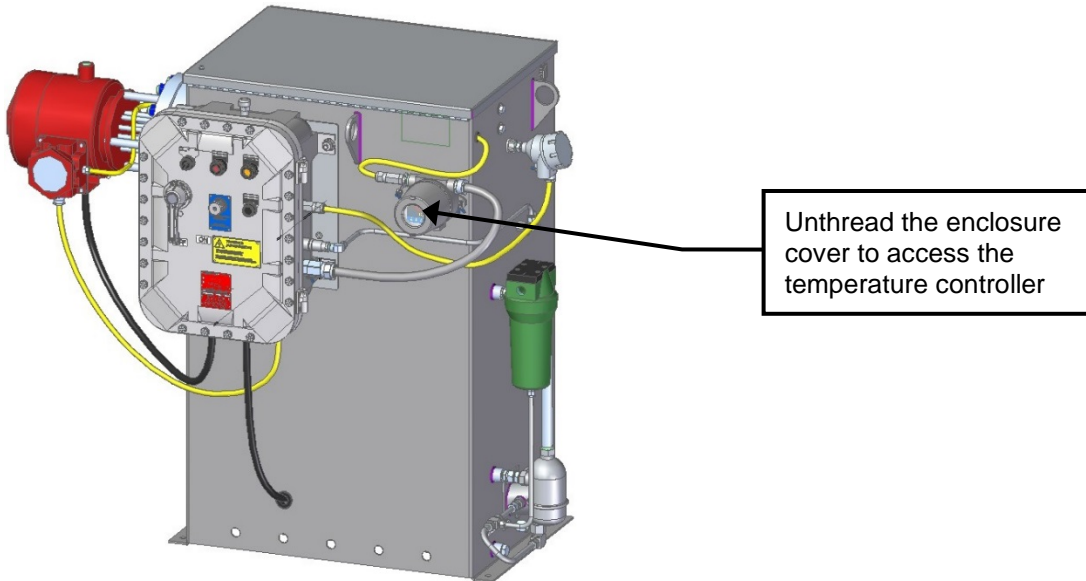


With the controller set point set to the normal operating temperature (82°C / 180° F) press   until

A_t	----
-----	------

 appears on the display.

Press  for at least 3 seconds. The upper display will begin to flash and the auto-tuning process begins.

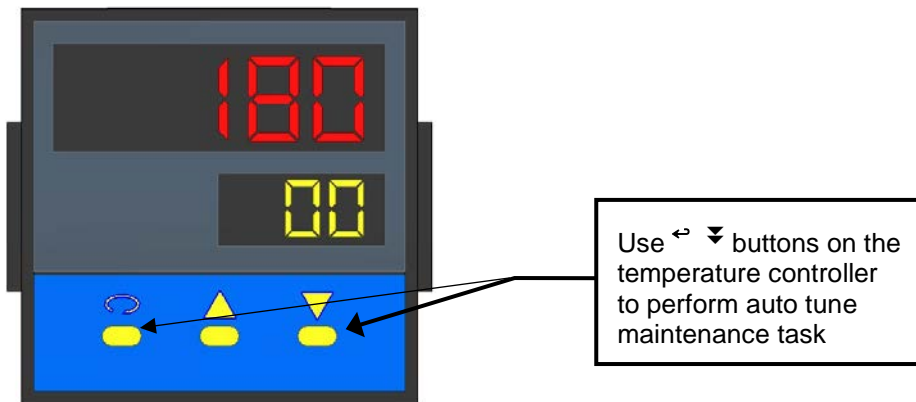

Once the auto tune process is completed the process display will cease to flash and the unit will revert to normal operation. Insure that the oil temperature operates at the prescribed operating temperature and make adjustments as required. Reference the section of this manual in the V SYSTEM START-UP AND OPERATION section of this manual titled *Heater Operation*.






Once the auto tune maintenance is completed, reinstall the controller cover.

Check and Adjust Operating Pressures

The ThermoJet Oil Purifier must be running and operating normally in order to perform this maintenance task. Checking and adjusting operating supply and return oil pressure is for the purpose of insuring that the systems operating pressures are correctly adjusted.

For information on adjusting the inlet oil pressure refer to the section titled *Adjusting System Pressure* in the V SYSTEM START-UP AND OPERATION section of this manual


For information on adjusting the inlet oil pressure refer to the section titled *System Discharge Pressure* in the V SYSTEM START-UP AND OPERATION section of this manual

	 WARNING Surfaces are HOT	
	NOTICE: Wear appropriate personal protective gear.	

Verify Low Oil Pressure Switch Operation

The ThermoJet Oil Purifier must be running and operating normally in order to perform this maintenance task. Verifying the operation of the low oil pressure switch is to insure that the oil heater turns OFF and is disabled when the oil pressure drops below 9.3 BAR (135 PSI).

The low oil pressure switch is mounted on the right side of the electrical control enclosure. It is wired in series with the oil heater control circuit so that the oil heater is inoperable if the oil pressure drops below 9.3 BAR (135 PSI). For additional information refer to the wiring diagram included in the section of this manual titled *IX PARTS LIST / DRAWINGS / SCHEMATICS*.

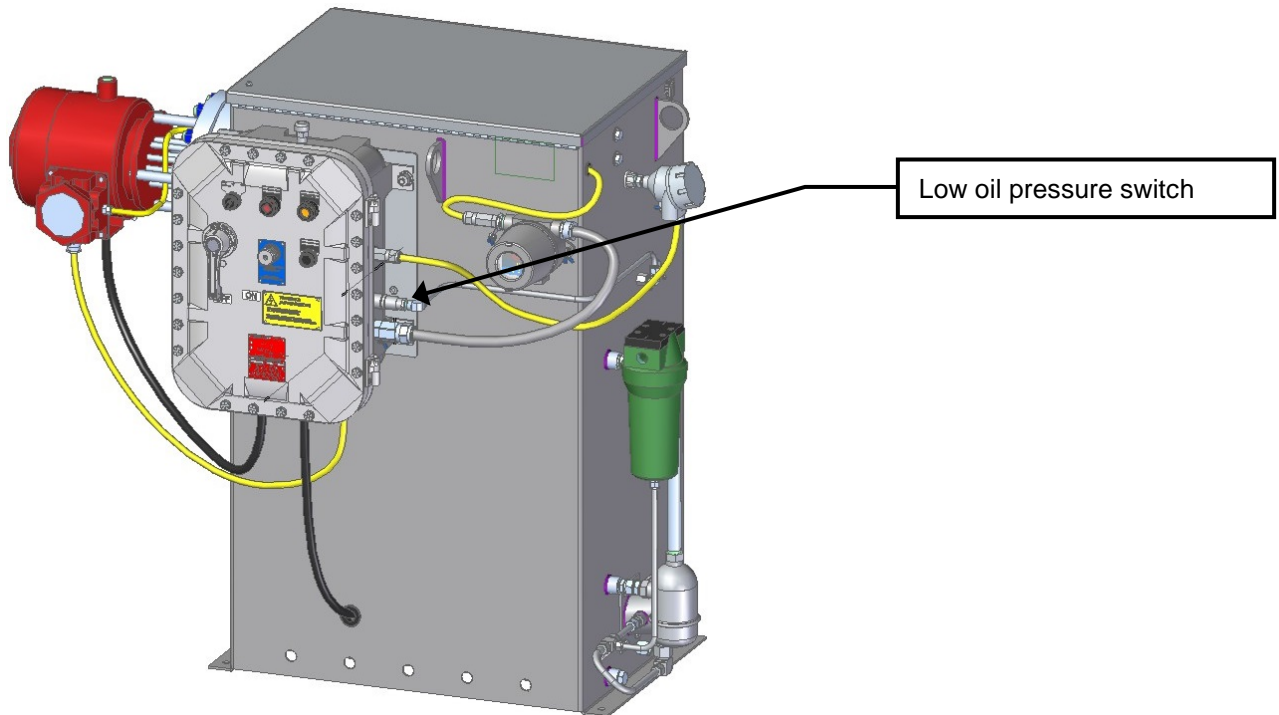


	WARNING	
Surfaces are HOT		


	NOTICE: Wear appropriate personal protective gear.	
--	--	--

While the ThermoJet is operating normally, open the top cover of the ThermoJet cabinet to access the inlet pressure control valve located on the outlet of the heater vessel. While observing the Filter Outlet Pressure gauge, loosen the lock nut and adjust the control valve by turning the

adjusting screw CC-Clockwise to decrease the oil pressure. Decrease the pressure to a value that is less than the low oil pressure set point of 9.3 BAR \pm 0.3 BAR (135 PSI \pm 5 PSI).

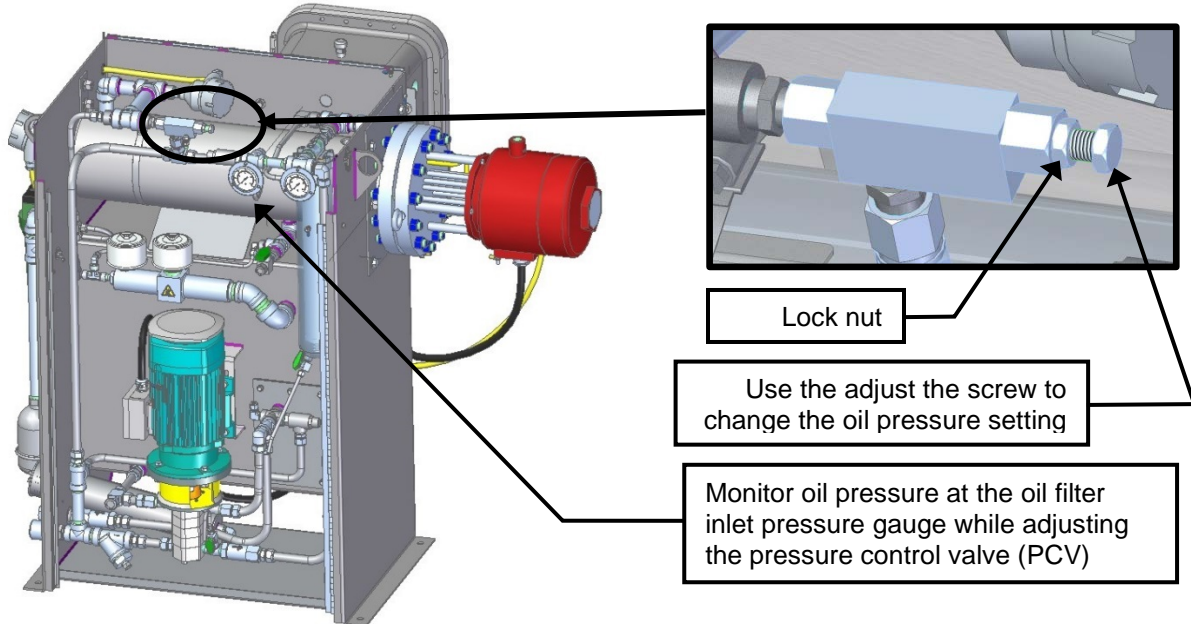

The oil heater and the oil heater ON pilot light (AMBER) will become inoperable. The oil temperature will begin to decrease. The heater and the pilot light will remain OFF as long as the oil pressure is below the low pressure set point of 9.3 BAR (135 PSI).

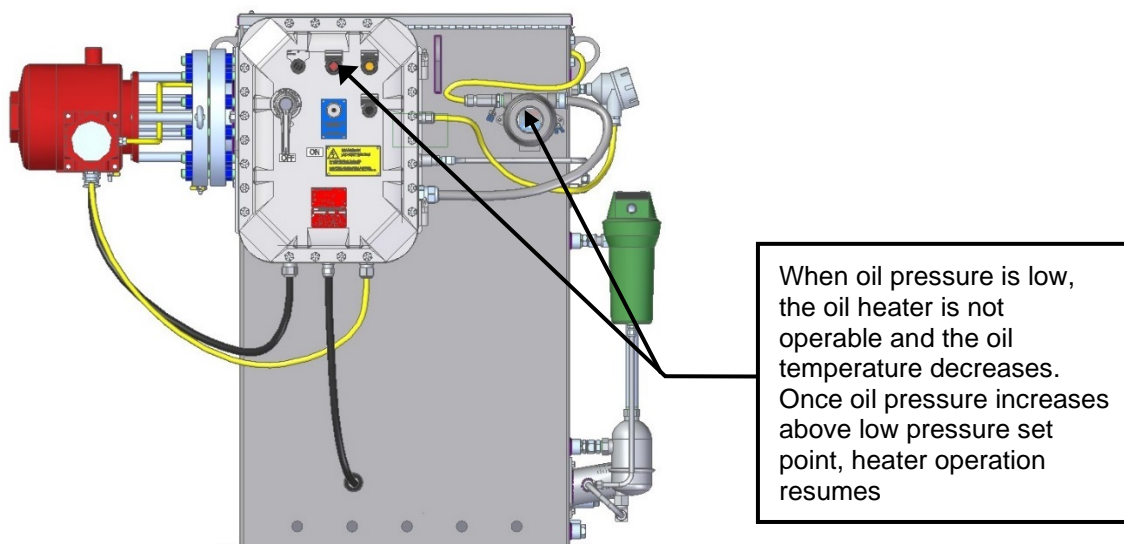

Once the low pressure switch operation has been confirmed, adjust the pressure control valve by turning the adjusting screw C-Clockwise to set the system operating pressure to it normal operating set point of 16.5 BAR (240 PSI). Securely tighten the lock nut.

Verify Oil Heater High Temperature Cutout Operation

To perform this maintenance task, the ThermoJet Oil Purifier must be running and operating normally. This maintenance task is performed to ensure safe operation should a high temperature condition occur. For additional information regarding the operation of the high temperature circuit see drawings and schematics in section of this manual titled IX PARTS LIST / DRAWINGS / SCHEMATICS.

The oil heater is equipped with two (2) thermocouples for high temperature protection.


- A thermocouple is attached to one of the heater elements located in the oil stream inside of the heater vessel. This thermocouple provides a signal for high temperature alarm and heater cutout for the heater element
- A thermocouple is clamped to the outside of the heater vessel. This thermocouple provides a signal for a high temperature alarm and cutout for the heater vessel surface.

Should the heater element or vessel surface thermocouple output reach the high temperature alarm/heater cutout setting, power to the oil heater element is interrupted. When this happens the oil temperature as indicated on the heater controller display will begin to decrease. As the oil temperature falls below oil heater controller setting, the heater control thermocouple will sense the decreasing oil temperature and signal the oil heater temperature controller to energize the heater. However the high limit controller will prohibit the oil heater from energizing and oil temperature will continue to fall. The Heater On pilot light will be illuminated because the heater controller is providing an ON signal to the heater power control relay.



NOTICE:

When a Heater High Temperature alarm occurs the red pilot light will illuminate. The alarm pilot light will remain illuminated and the oil heater will not be operable until the Heater High Temperature reset button is depressed. Press the reset push button to resume heater operation.

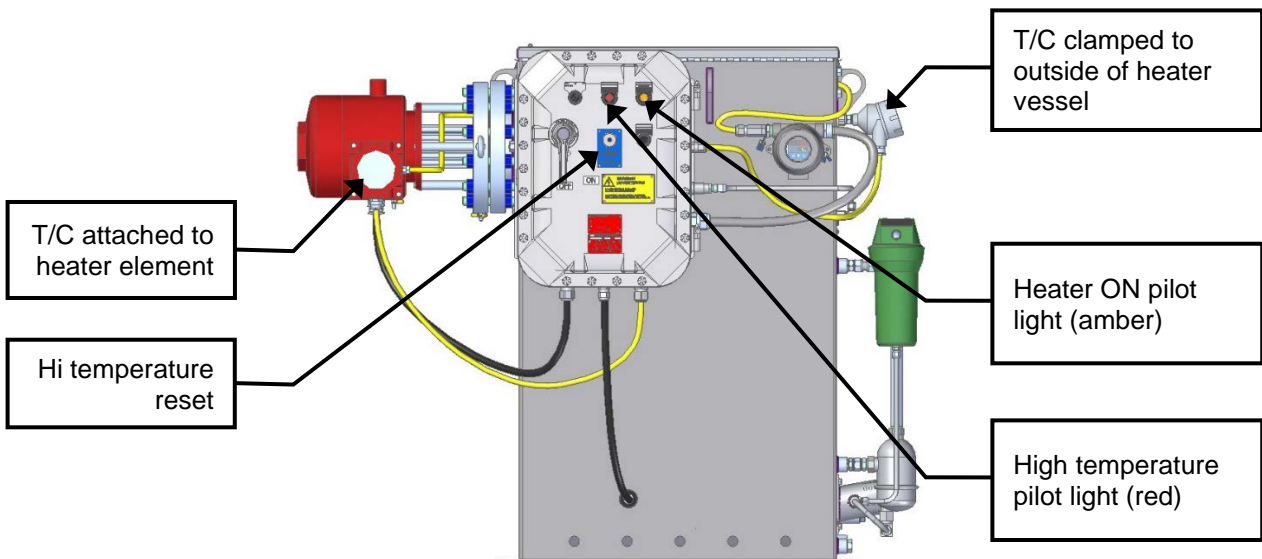



NOTICE:
A round tool is required to depress the high temperature reset button. Use a the blunt end of a pencil, pen or a blunt end round dowel rod , 8-11 mm (0.312" – 0.375") diameter..

This maintenance task requires that a thermocouple simulator be connected to the terminal connectors of each thermocouple.





NOTICE:
Thermocouple simulators should be provide an output signal for a type J thermocouple up to 150°C (300°F) minimum. Devices must be approved for use in an Ex IIC hazardous area. Devices should be calibrated and labeled with the calibration date according to applicable standards.



NOTICE:
All electrical connections should only be made by a qualified electrician.

urn the ON-OFF selector switch to the OFF position and allow the unit to shut down. Once the ThermoJet has turn OFF. Switch the disconnect switch to the OFF position.

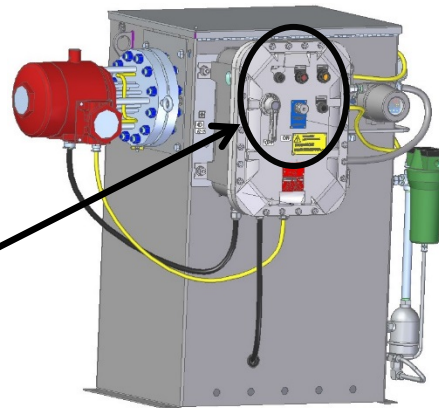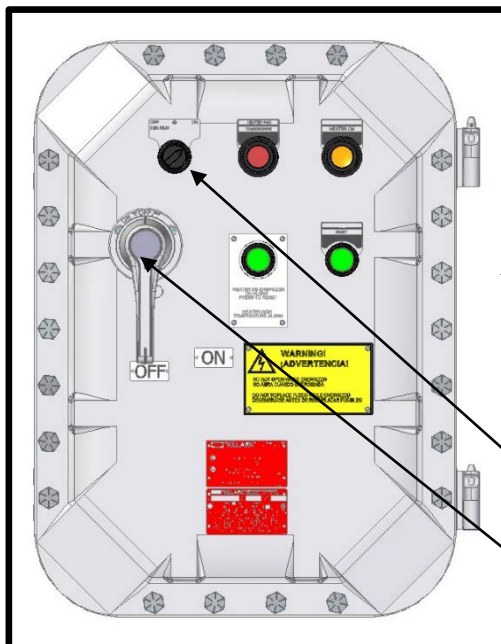

Use ON-OFF Selector Switch to shut down ThermoJet

Use disconnect switch to turn power OFF

Locate the thermocouple terminal enclosure for the T/C connected to the heater element. Remove the terminal enclosure cover and find the terminal screws which connect the thermocouple to the high alarm circuit. Disconnect the thermocouple and wire the thermocouple simulator to the same screws. Take care to observe proper polarity for (+) and (-) terminations.


Restart the ThermoJet by turning the main disconnect to the ON position and then switching the ON-OFF selector switch to the ON position. The unit will start and oil temperature will increase to the normal operating temperature. Allow the machine to reach normal operating temperature.



NOTICE:

The Heater High Temperature alarms are designed to disable the oil heater as temperature increase above 135°C ±2°C (275°F ±4°F). High temperature cutout set point is non-adjustable.

Adjust the thermocouple simulator output so that the signal replicates an increasing temperature T < 135°C (275°F) to T > 135°C (275°F). The high temperature cutout will disable the oil heater and give a local annunciation as the temperature increases above 135°C ±2°C (275°F ±4°F). Oil temperature will decrease.

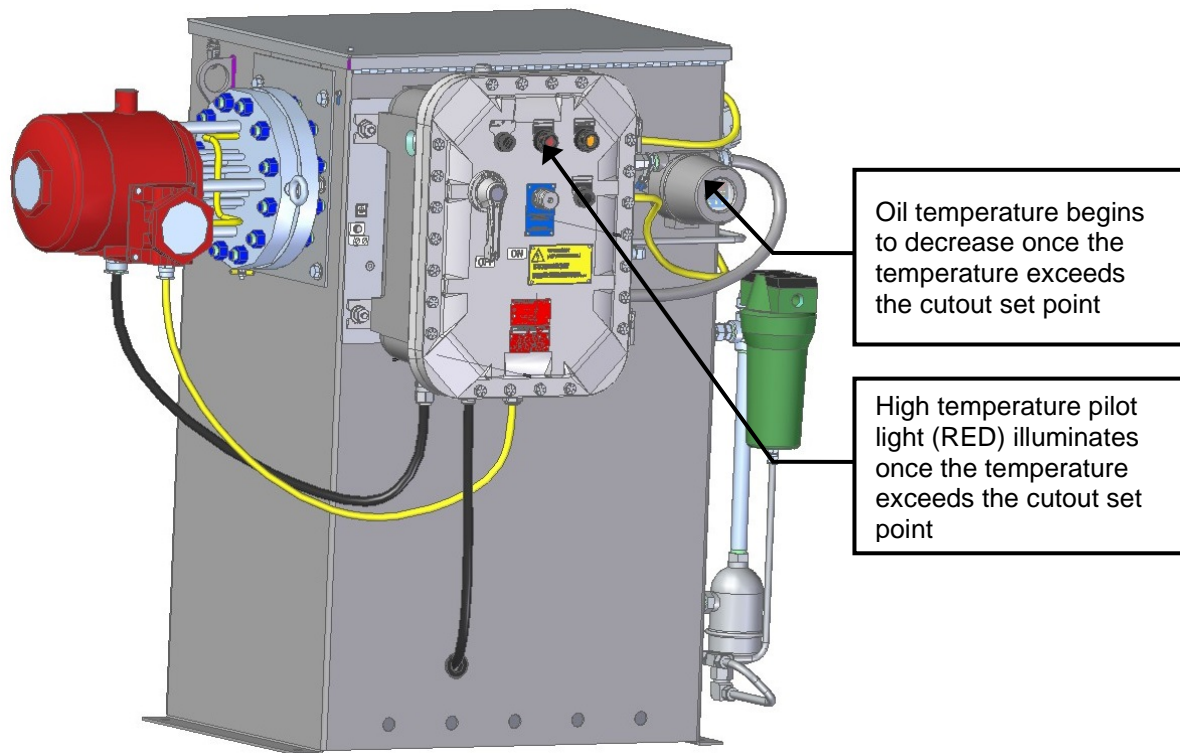


Temperature indicated on the heater controller display will begin to decrease. As the oil temperature falls below oil heater controller setting, the heater controller will sense the decreasing oil temperature and attempt to energize the heater. However the high limit controller will prohibit the oil heater from energizing and oil temperature will continue to fall. The Heater ON pilot light will be illuminated because the heater controller is providing an ON signal to the heater power control relay. For additional information refer to the wiring diagram included in the section of this manual titled *IX PARTS LIST / DRAWINGS / SCHEMATICS*.



NOTICE:

When a Heater High Temperature alarm occurs the red pilot light will illuminate. The alarm pilot light will remain illuminated and the oil heater will not be operable until the Heater High Temperature reset button is depressed. Press the reset push button to resume heater operation.

Press the High Temperature Cut-Out reset button and observe the oil temperature indication on the heater temperature controller. The oil heater will resume operation and the oil temperature will increase to the normal set point.

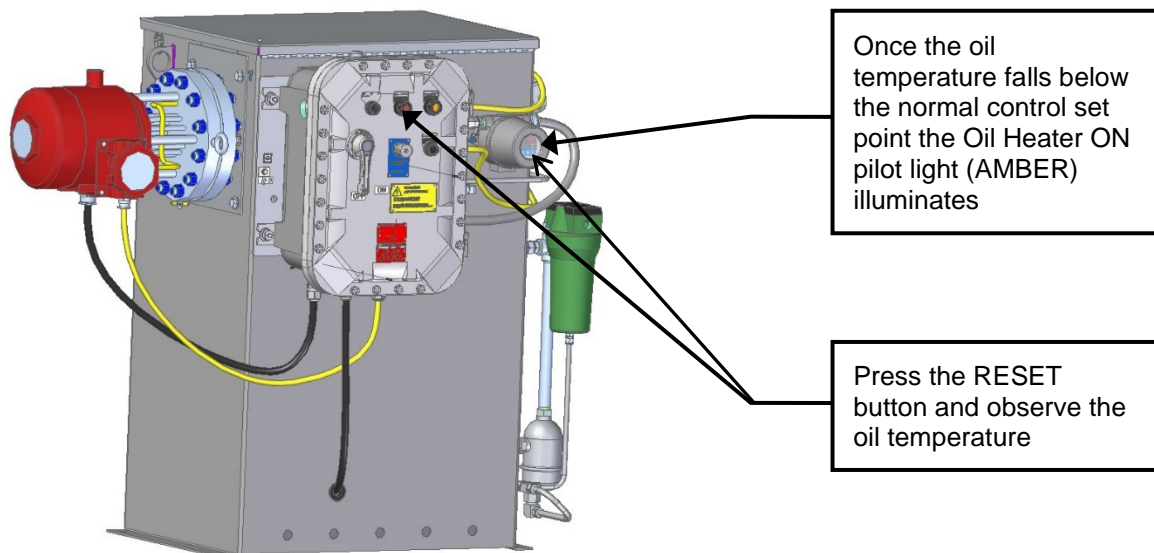

Shut down the ThermoJet as described above. Disconnect the thermocouple simulator from the terminals and re-connect the high limit thermocouple. Take care to observe proper connections for (+) and (-) terminations. Securely re-install the enclosure covers.

Conduct the same sequence as described above except verify the high temperature cut out operation for the thermocouple that is clamped to the outside of oil heater vessel.



**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**

INSTALLATION AND OPERATING MANUAL

Doc #	77740150
Rev	02
Date	June 2020
Page 72 of 110	

VII CLEANING AND DECONTAMINATION

Cleaning and Decontamination

Oil spills may be wiped up using paper, cloth or other absorbent media. Clean reservoir and cabinet surfaces with mild soap and water. If degreasing agents or solvents are used to clean oil spills, follow the label instructions of the cleaning agent. The ThermoJet Oil Purifier cabinet and reservoir are constructed from T-304 stainless steel.

Use inspecting and cleaning reservoir interiors use only lint free rags for cleaning and wiping them out.


The outside and interior of the ThermoJet Oil Purifier cabinet and reservoir may be wiped down with cloth rags or recyclable paper wipes or towels that are able to absorb oil and remove any accumulation of dust.







WARNING

USE DAMP CLOTH ONLY TO CLEAN PLASTIC COMPONENTS. USING A DRY CLOTH TO CLEAN PLASTICS CAN GENERATE A STATIC DISCHARGE AND CREATE AN EXPLOSION HAZARD.











CAUTION

In case of oil spillage, the user or other responsible body must ensure appropriate cleanup and decontamination is carried out.







CAUTION

Ensure that decontamination or cleaning agents used do not cause a hazard as a result of a reaction with parts of the equipment. Cleaning solvents should not contact gaskets or plastic components

Consult with your lubricating oil supplier and the lubricating oil MSDS documentation to ensure that decontamination and cleaning agents do not react with the lubricating oil used.



NOTICE:

When cleaning oil spills consult with your lubricating oil supplier and the lubricating oil MSDS documentation regarding safe guards and Personal Protective Equipment (PPE) requirements



NOTICE:

Dispose of all contaminated cleaning materials in accordance with all environmental laws, ordinances and directives. Consult your company or plant environmental protection department for disposal policy. Understand the environmental effect any used cleaning agents used and plan your cleanup accordingly.





Use environmentally friendly products and recycle where ever possible



Direct all questions regarding the compatibility of decontamination or cleaning agents to;

Manufacturer
5615 W Fuqua St. B-201 • Houston, Texas 77085
1-713.464.6266




 	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
			Page 75 of 110	

Removal From Use, Disposal And Transport



Typical service life for ThermoJet Oil Purifier equipment manufactured by manufacturer is 20+ years. Once the ThermoJet Oil Purifier is installed and commissioned in an operating Hydrocarbon Processing Industry (HPI) process unit, its service life generally coincides with the life of the owners operation of the plant. Disposal methods used should comply with the users plant policy and guidelines used for disposal of other machinery assets.

If the ThermoJet Oil Purifier has reached the end of its useful working life and a no-repair decision is made it must be disposed through a licensed scrap or waste disposal facility. Alternately the machinery may be partially or completely striped for recycling purposes. Prior to shipment to a recycling facility or disassembly for recycling the following steps should be performed;


- All oil must be drained from the separation tank, the oil heater tube, the oil filter housing and interconnecting piping and tubing.
- Disconnect all external supply oil connections. Take care to avoid spills. For oil supply and return connection locations reference the *INSTALATION* section of this manual.
- Remove and drain all oil supply, oil return and flare connection tubing, pipe and hardware.


	CAUTION	
In case of oil spillage, the user or other responsible body must ensure appropriate cleanup and decontamination is carried out.		
		


- Remove all oil filters. Dispose of elements in accordance with all regulatory requirements in force at the time of equipment disposition. Consult you company environmental protection or plant safety department for guidance.

	NOTICE: Recycle all drained oils and oil filters.	
---	--	---

- Disconnect all electrical supply wiring. For power wiring connection locations reference the *INSTALATION* section of this manual. Disconnect discharge (flare) connection. For discharge (flare) connection location reference the *INSTALATION* section of this manual









Ensure that all previously connected sources of electrical power are disconnected before opening the ac power remote alarm enclosures and attempting to disconnect electrical wiring alarm contacts


The ThermoJet Oil Purifier is secured to its foundation by anchor bolts through mounting pads around the perimeter of the cabinet. Unbolt the machine from its foundation to remove. The cabinet is equipped with lifting lugs for lifting and moving. Use appropriate lifting and transport equipment to remove this machinery.











Do not tip or stand equipment on edge











Use suitable transport equipment for lifting and setting the equipment into place. Ensure that the equipment is secured prior to and during lifting and transport. Stand clear of the all equipment while being maneuvered. Crane and fork truck operators should be properly trained in their operation.



NOTICE:
Equipment is fitted with lifting lugs. For safe lifting and placement of equipment use approved lifting cables and accessories




 	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM		Doc #	77740150
	INSTALLATION AND OPERATING MANUAL		Rev	02
			Date	June 2020
			Page 77 of 110	

Draining and Cleaning Procedures


Draining and cleaning procedures must be practiced if the ThermoJet is being used to remove water contaminant in different type of oil and from different reservoirs. The following procedures are listed in order of criticality. Depending upon any variety of individual situations, they may be either followed to conclusion, modified as desired, or discontinued at any point.

1. Shut off the reservoir drain valve; energize the motor so that the major portion of oil in the system can be pumped out within a few minutes. If the suction and the discharge hoses were attached to the portable unit, care must be taken to ensure that oil in these lines are pumped out.





NOTICE:
This procedure allows the pumps to run “dry”, but it will not damage them since they are lubricated with the residual oil. However, this procedure should not continue for more than a few minutes because the pump requires inlet oil to lubricate and cool the gears of the pump, and the operator should be in attendance to monitor it while draining the equipment.

2. Remove the drain cap from the separation vessel and drain the oil into a suitable container.
3. To drain the oil from the filter housing, remove the air vent screw located on the top of the filter housing to prevent siphoning of oil out of the heater tube. Then open the drain valve at the bottom of the filter housing and allow the oil to drain into a suitable container.
4. To drain the heater vessel, open the drain valve and drain the oil into a suitable container.



NOTICE:
For many situations the above procedures are adequate for removing most of the oil from the system in order to prepare the ThermoJet for use on similar or compatible oil..

5. Remove the oil filter element and install a new one.
6. Remove the screen from the Y-strainer and clean it.
7. If preparing the unit for use on a significantly different type of oil, perform one or all of the following procedures:
 - Connect the ThermoJet to a small supply of the next oil to be purified (minimum 20 gallons), and circulate the fresh oil to flush out the existing oil for a minimum of 15 minutes, or up to 60 minutes if the ThermoJet is especially dirty.
 - Connect the system to a supply of compatible solvent (or other cleaning agent) and circulate to flush for a minimum of 15 minutes.

	<p>DANGER</p> <p>Do not use flammable cleaning solvents to flush this system. Failure to do so may result in serious injury or even death.</p>	
---	---	---

VIII TROUBLE SHOOTING

Trouble Shooting Guide

The following information is designed for identifying potential problems and possible solutions on the ThermoJet Oil Purifier. For complete operating instructions, parts list, electrical schematics and component locations refer to other sections of this manual

PROBLEM	SOLUTION
No Flow in the Suction Line	<p>A. Verify motor rotation is in the proper direction.</p> <p>B. Verify that any valves between the oil supply tank and the system inlet are open.</p> <p>C. Verify that there are no inlet line blockages other than closed valves.</p> <p>D. Check and clean inlet Y-strainer.</p> <p>E. Check that hoses are fully extended without kinks, or if hard-piped, that there are no elevated sections to create air pockets.</p> <p>F. Verify that inlet line sizes are as specified in Section III of this manual.</p> <p>G. Verify that suction lift does not exceed 8 feet (2.4 meters).</p> <p>H. Verify that oil viscosity does not exceed 3,000 SSU.</p> <p>I. If the pump is noisy, check for damage, wear, foreign objects, relief valve set too low or stuck open.</p> <p>NOTE: The pump may be noisy upon cold start-up and while air is being bled from the suction line, but will quiet down once it achieves normal operating temperature</p>
No Flow in the Discharge Line	<p>A. Ensure that there are no valves or other line-blocking devices or debris in the discharge line. If there are, remove them.</p> <p>B. Verify that the inlet pump flow into the separation tank is sufficient to supply the outlet pump by observing the oil flow through the sight glass.</p> <p>C. If the pump is noisy, check for damage, wear, foreign objects, relief valve set too low or stuck open.</p>
No Vapor Discharge	<p>A. Verify that no line-blocking devices are installed in the vent connection or in the drain line.</p> <p>B. Check the oil condition. If there is little or no water present, no vapor or condensate will exhaust through the vent connection.</p>

<p>Temperature Control Problems</p>	<p><u>Low Oil Temperature</u></p> <p>A. Verify that the “heater on” light is illuminated.</p> <p>B. Verify the unit is connected to the correct power supply.</p> <p>C. Verify that the temperature controller is set at the desired operating temperature. If the temperature controller is set to the desired temperature, then the parameters of the PID temperature controller may have drifted and need to be readjusted. To adjust the parameters of the temperature controller, initiate the auto-tune function of the controller. To initiate the auto-tune function, depress the up arrow and the down arrow keys of the controller at the same time for longer than 4 seconds. After the up key and the down key are released, the process value should start flashing. This flashing indicates that the auto-tune function of the temperature controller has been started. Once the controller enters auto-tune mode, the ThermoJet® must be running so that the controller can learn the process which the ThermoJet® is operating. The flashing should last for several minutes but the length of time will vary per application. Once the flashing stops, the temperature controller should have adjusted the temperature values and the temperature should return to normal level.</p> <p>D. Verify that the temperature the controller is reading from the thermocouple is accurate. A method of accomplishing this might be to remove the thermocouple that is in the ThermoJet® and attempt to read ambient condition or a known temperature. Then verify that the temperature reading being displayed by the temperature controller would match the temperature of the ambient or known condition. If the two temperatures do not match, then either the temperature controller or the thermocouple may need to be replaced.</p> <p>E. If all of the above are correct, then check the heater resistance, the heater contactor, the temperature controller contactor, and the pressure switch for possible malfunction.</p> <p><u>High Oil Temperature</u></p> <p>A. Verify that oil is flowing normally through the inlet sight glass and that the pressures of the system are normal.</p> <p>B. Verify that the temperature controller is set at the desired operating temperature. The parameters of the PID temperature controller may have drifted and need to be readjusted. To adjust the parameters of the temperature controller, initiate the auto-tune function of the controller. To initiate the auto-tune function, depress the up arrow and the down arrow keys at the same time for longer than 4 seconds. After the up key and the down key are released, the process value should start flashing. This flashing indicates that the auto-tune function of the temperature controller has been started. The flashing should last for several minutes but the length of time will vary per application. Once the flashing stops, the temperature controller should have adjusted the temperature values and the temperature should return to a normal level.</p> <p>C. Verify that the heater contactor is neither stuck, nor has failed in the energized position. If so, replace the contactor.</p>
-------------------------------------	--

Excessive noise/vibration	<p>A. Ensure that there are no air bubbles in the sight glass. If bubbles are present, check that all inlet line connections are tight and properly sealed.</p> <p>B. Ensure that the suction connection in the reservoir is not adjacent to or near to any oil return connection which could cause oil foaming.</p> <p>C. With a ¾" wrench, exercise the inlet and outlet pressure control valves. There may be a piece of trash stuck in one of these valves that is causing the valve to chatter. After exercising the valves and the trash has been removed, reset the valve to its previous position by ensuring that all the operating pressures are back to the normal values. Exercising these two valves will change the pressure in which the unit is running.</p>
High/ low filter discharge pressure	<p>If filter discharge pressure range is too high, replace filter element. <i>(Replace filter element at maximum 30 PSIG (2 bar) differential)</i></p> <p>If filter discharge pressure range is too low with a clean filter, reset pressure relief safety valve (PRV1) by turning off machine for 15 seconds and allow the pop-off valve to reseat. Restart the machine and check pressure settings. Adjust PCV1 if necessary.</p>
Outlet Pressure	<p>The normal outlet pump discharge pressure range should be 3.4-608 BAR (50-100 PSIG).</p> <p>If outlet pump discharge pressure range is too high, check the return line for blockage.</p> <p>If outlet pump discharge pressure range is too low, reset PRV2 by turning off machine for 15 seconds and allow the pop-off valve to reseat. Restart the machine and check pressure settings.</p>



NOTICE:


DO NOT adjust pressure setting in PRV1 & PRV2. Relief valves are they are factory set at 270 PSIG.



WARNING


In no case should the pressure be allowed to exceed 300 PSIG. If such a high pressure is indicated, immediately turn off the unit, and take any necessary steps to pre-heat the oil. Refer to shut down procedures. If this occurs use the main shut off switch. This unit is equipped with a two- (2) minute time delay for cooling down the oil heater during a normal shutdown.



	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM INSTALLATION AND OPERATING MANUAL	Doc #	77740150
		Rev	02
		Date	June 2020
		Page 82 of 110	

Quick Reference Troubleshooting Guide

DO	DON'T
Drain free water from the bottom of reservoir	Operate with inadequate oil flow caused by suction line too small, elevated sections of suction piping, excessively high viscosity, excessive suction lift or suction line restrictions
Install oil filter element	Operate with air bubbles in sight glass
Change oil filter element at 30 PSID	Operate with excessive solids contamination. The oil filter element within the ThermoJet is not designed to clean up the solid particulate in oil reservoirs. The element is designed to protect critical systems within the ThermoJet and will load up with particulate very quickly and requires frequent changes if a pre-filter package is not used. Contact manufacturer for technical assistance if frequent filter loading occurs.
Clean Y-strainer screen	Attempt to remove contaminants not designed for air stripping such as heavy hydrocarbons, ethylene glycol, carbon black, or motor oil contaminants
Compound gauge reading zero BAR (0 PSIG)	Operate with contaminants which attack Viton seals
Operate at recommended pressures and temperature	Connect to a pressurized reservoir without inlet pressure-reducing valve or discharge boosting means
Return oil above reservoir level	Expect satisfactory performance when rate of contaminant intrusion exceeds removal rate
Vent line extends at least fifteen (15) feet vertically above the ThermoJet	Adjust factory set 18.6 BAR (270 PSIG) pop-off relief valve
Operate at correct voltage and frequency	Reduce the inner diameter of the suction and discharge lines.
Ensure power supply breakers or fuses are adequately sized for the full load amps	
Operate motor clockwise facing the fan	
Change oil absorption media sock	

	THERMOJET® H-2700E SERIES OIL PURIFIER SYSTEM INSTALLATION AND OPERATING MANUAL	Doc #	77740150
		Rev	02
		Date	June 2020
		Page 83 of 110	

Types of Product Misapplication and Misuse Not Covered By Warranty or Guarantees

1. Prolonged operation with air bubbles in the sight glass which causes pump cavitation and/or relief valve chatter.
2. Excessive water ingress beyond the system capability at maximum operating temperature.




NOTICE:




If this is a temporary condition, free water may be drained manually from the reservoir while a permanent solution is implemented. If it is constant condition, request customer service on the feasibility of installing an automatic water drain valve.

3. Operating with inadequate oil flow caused by:
 - A. Suction lines too small.
 - B. Elevated sections of suction piping.
 - C. Suction line restrictions.
 - D. Excessively high viscosity.
 - E. Excessive suction lift.
4. Excessive solids contamination with no pre-filter.
5. Presence of contaminants which are not within the scope of removal for air stripping technology, for example heavy hydrocarbons, ethylene glycol, carbon black or attempting to purify motor oils.
6. Presence of contaminants which attack Viton seals.
7. High differential pressure on oil filter.
8. Operating without oil filter element or inlet Y-strainer element.
9. Operating with inlet Y-strainer plugged.
10. Incoming oil temperature too cold for heater capacity (except for small reservoir volumes).
11. Operating either above or below recommended operating pressures.
12. Discharging oil into reservoir below the oil level.
13. Operating on under-voltage, over-voltage or wrong voltage.
14. Inadequate power supply, i.e. amperage rating of breaker or fuses under-sized for load required.
15. Vent line piping not extending fifteen (15) feet above the **ThermoJet®**.

16. Connection to pressurized reservoir without inlet pressure reducing valve or discharge boosting means
X PARTS LIST / DRAWINGS / SCHEMATICS

	WARNING	
<p>EXPLOSION HAZARD – Substitution of components may impair suitability for II 3G Ex db e nA IIB+H2 T3 Gc</p>		


	<p>NOTICE: All electrical checks and circuit testing should only be made by a qualified electrician.</p>
---	---

	DANGER	
<p>Before removing the cover to the controller contact appropriate operating personnel and obtain all required hot work permits. Ensure that the area has been inspected and determined to be nonhazardous. Observe all hot work permit procedures and policies.</p>		
		

Maintenance Spare Parts List






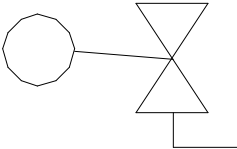

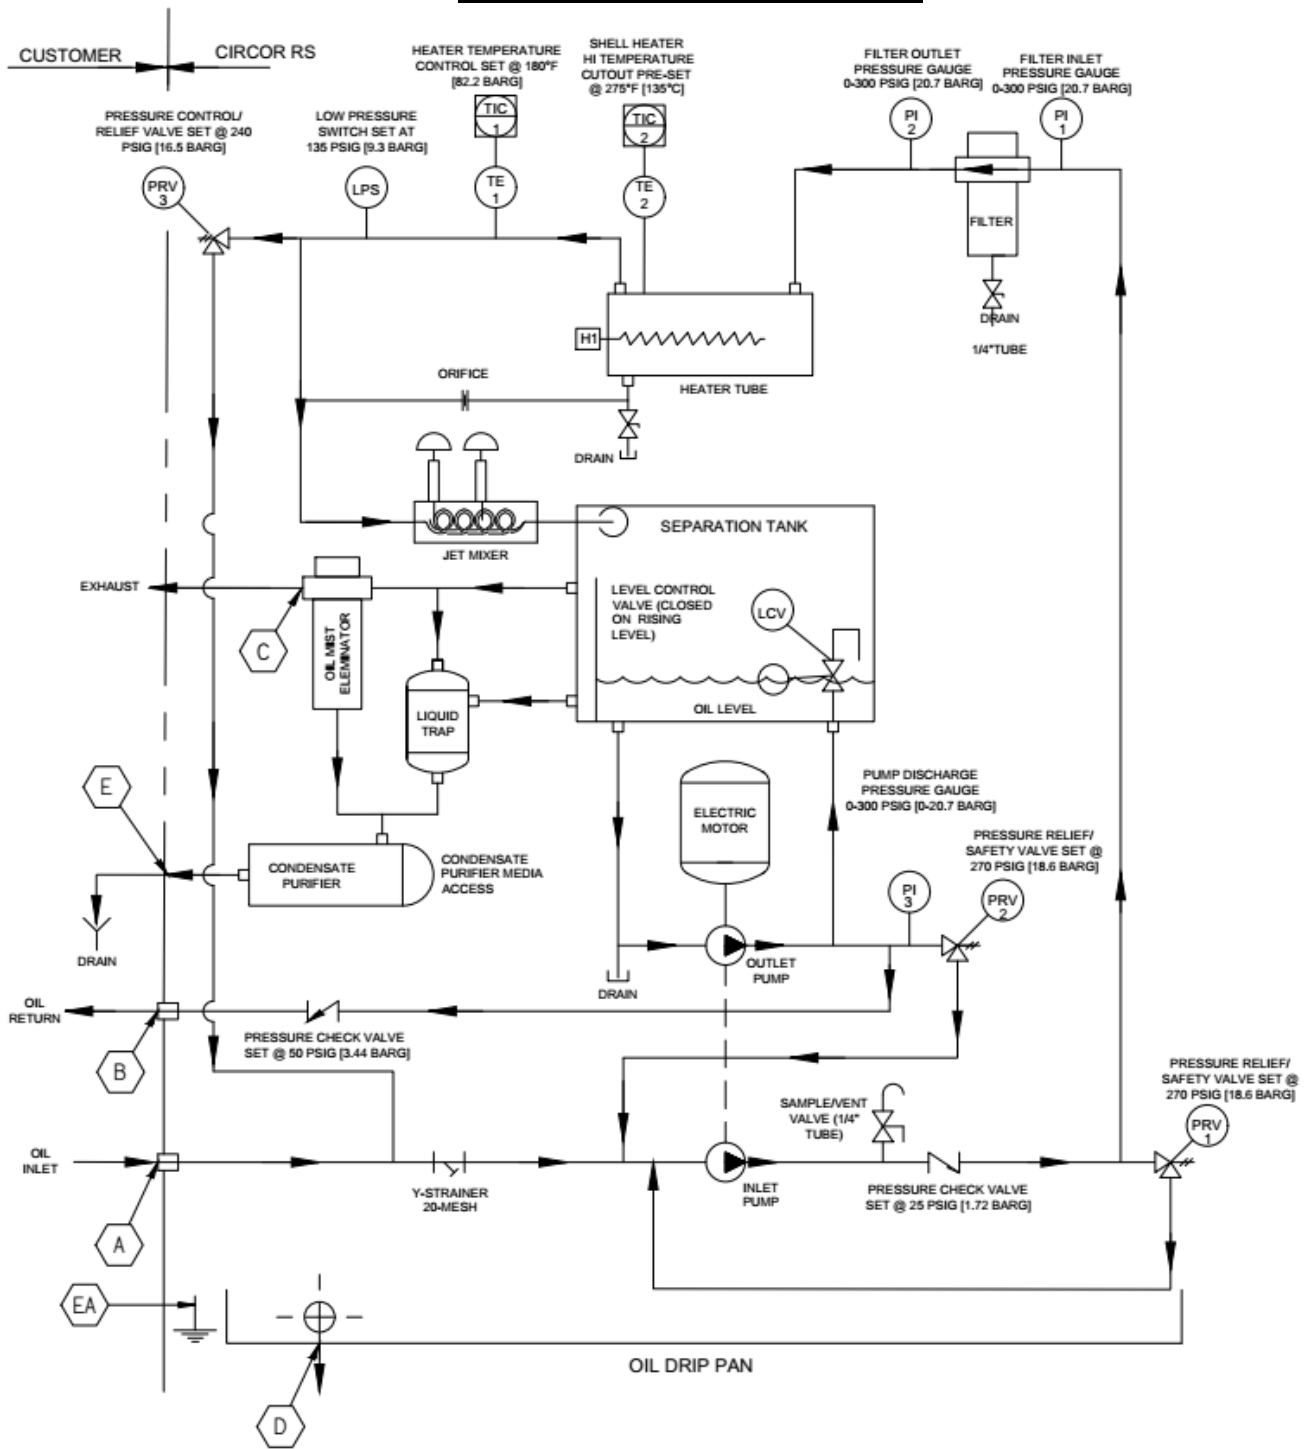
<u>Part Number</u>	<u>Description</u>	<u>Quantity</u>
1910-3006	Oil Filter Element 6 Microns	1
4052-0235	Filter Housing O-Ring, Viton	1
1920-1002	Oil Absorption Media Sock	1
77750101	Filter Element, Demisting 1 Microns	1

Process and Instrument Diagram





**THERMOJET - OIL PURIFIER
MODEL - H2700 SERIES**

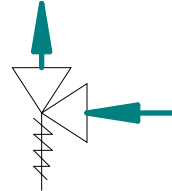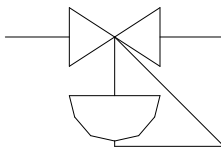
PID Symbol Legend and Customer Connection Chart


Electrical Wiring Diagram

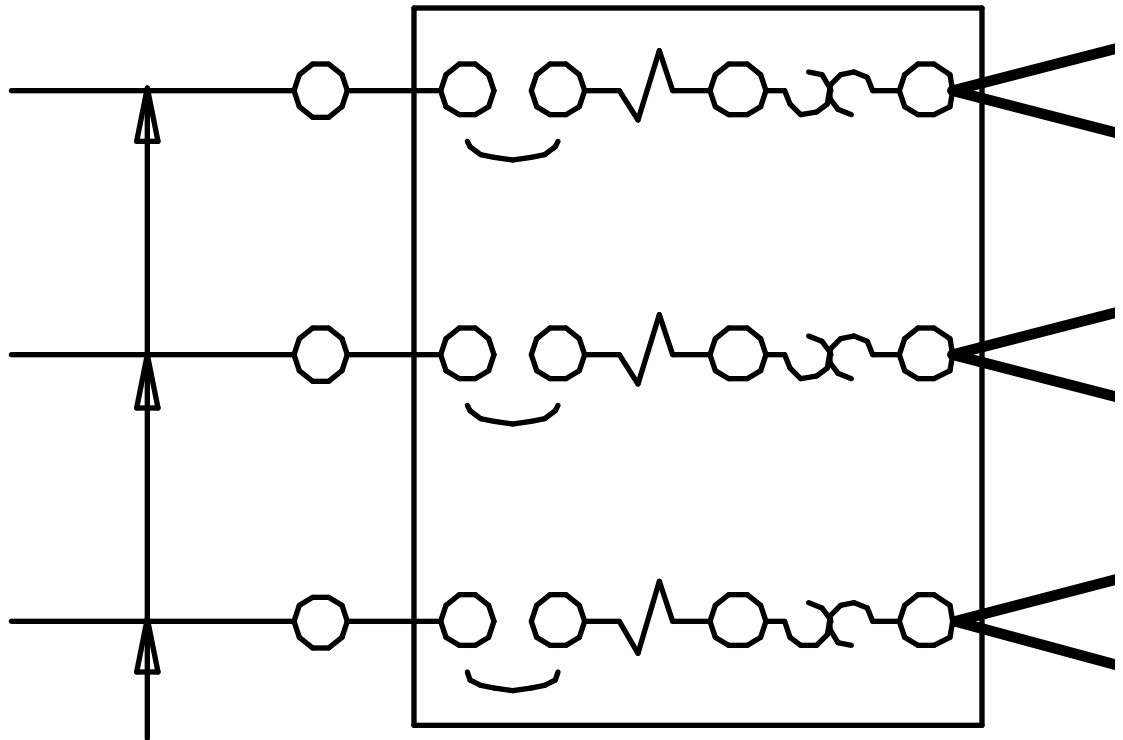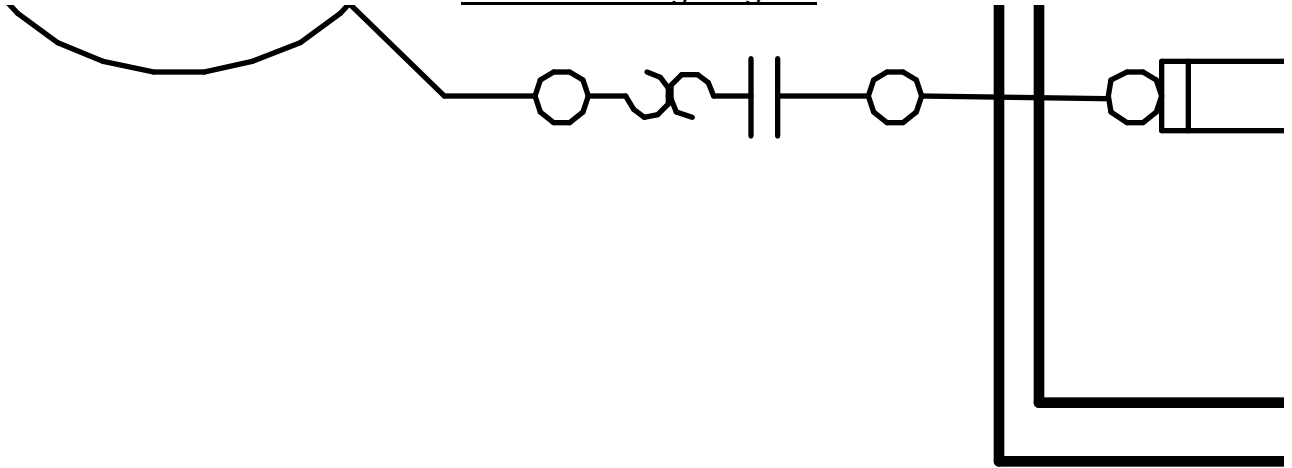

Transformer Wiring

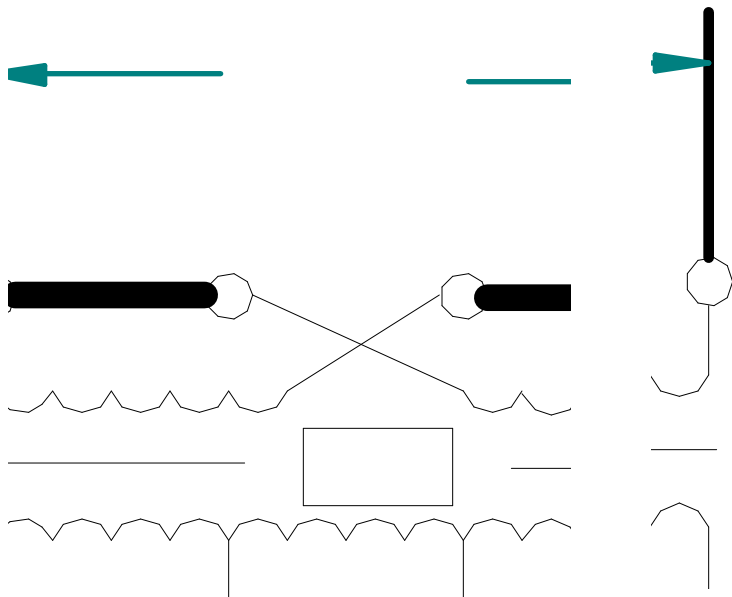

Fuse Ratings and Characteristics

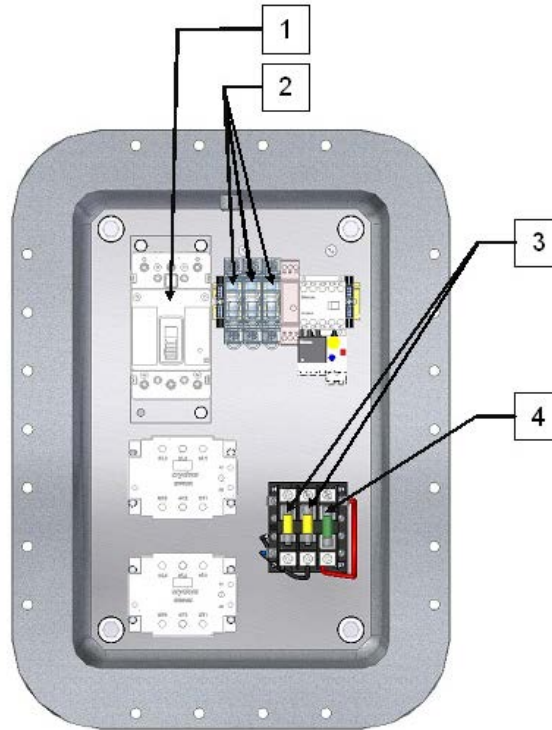

Item	Part Number	Quan	Description
1	30561025 30561030	1	Molded Case Circuit Breaker_3 Pole - 25 Amp (note 1) Molded Case Circuit Breaker_3 Pole - 30 Amp (note2)
2	77750215 <R1>	3	Time Delay Fuse, Class CC - 600V - 6 Amp
3	30180010	2	Time Delay Fuse, Class CC - 600V - 1 Amp
4	30180021	1	Time Delay Fuse, 13i32 X 1-1i2 _ 250V - 2 Amp


Note:


- 1) For equipment with 460 VAC supply voltage
- 2) For equipment with 380, 400 or 415 VAC supply voltage


WARNING

ENSURE THAT ELECTRICAL POWER IS TURNED OFF PRIOR TO OPENING ENCLOSURE AND REPLACING FUSES.

Tagging and Labeling

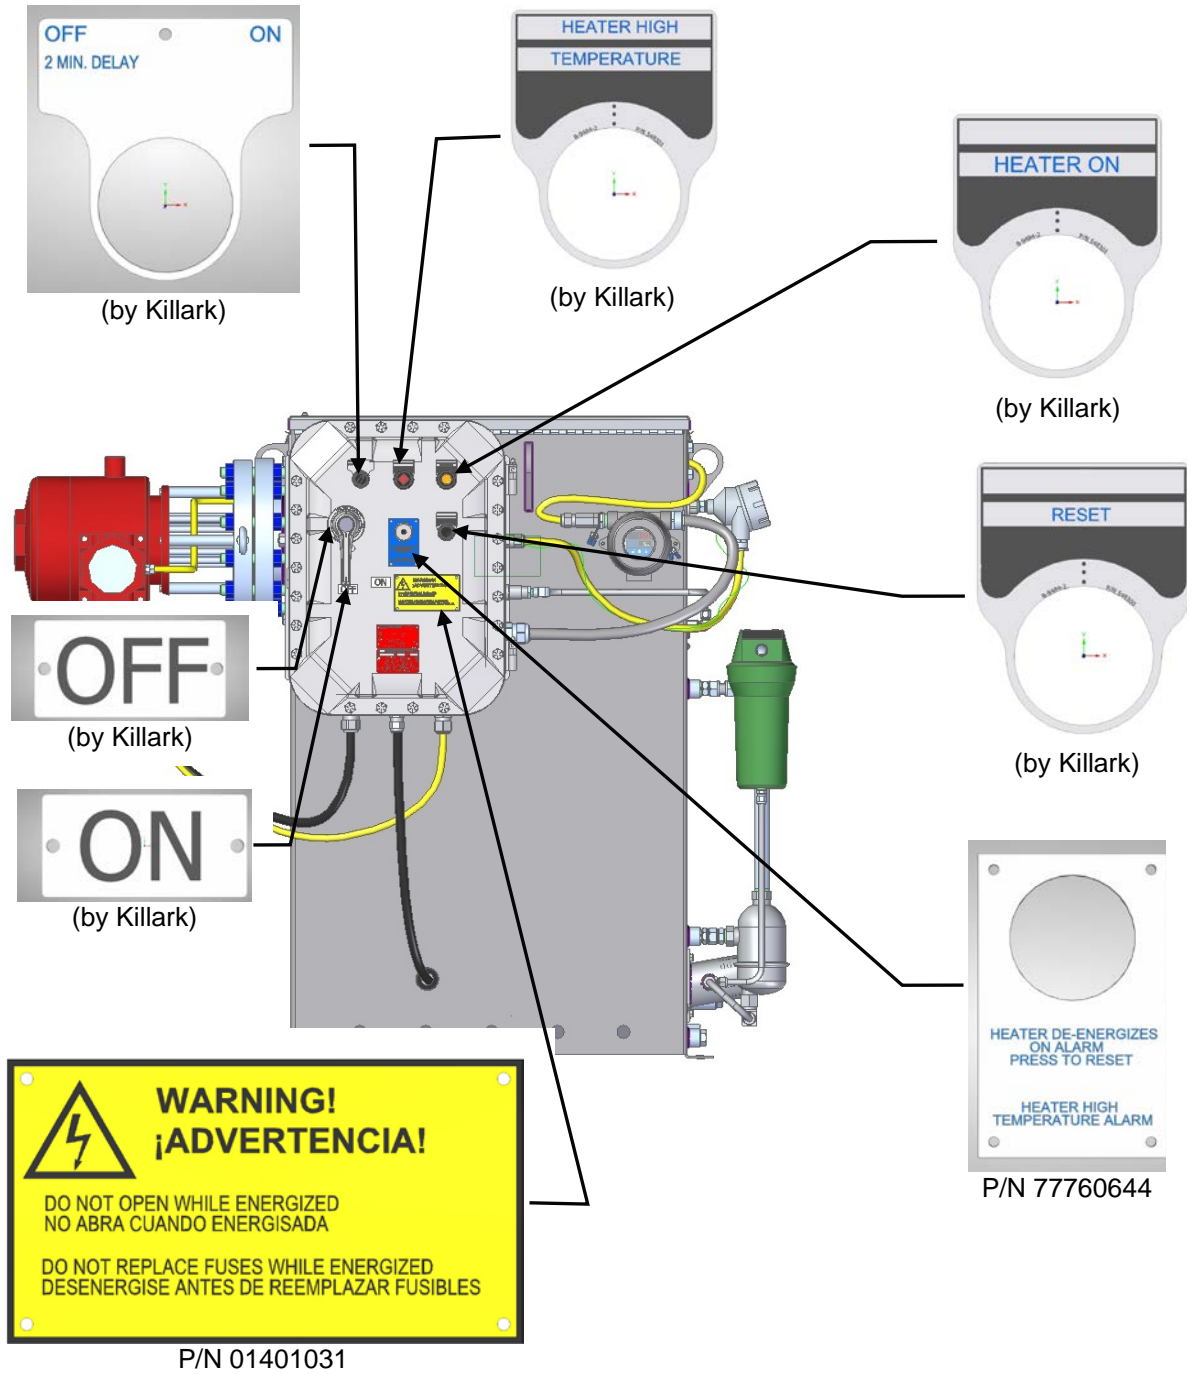

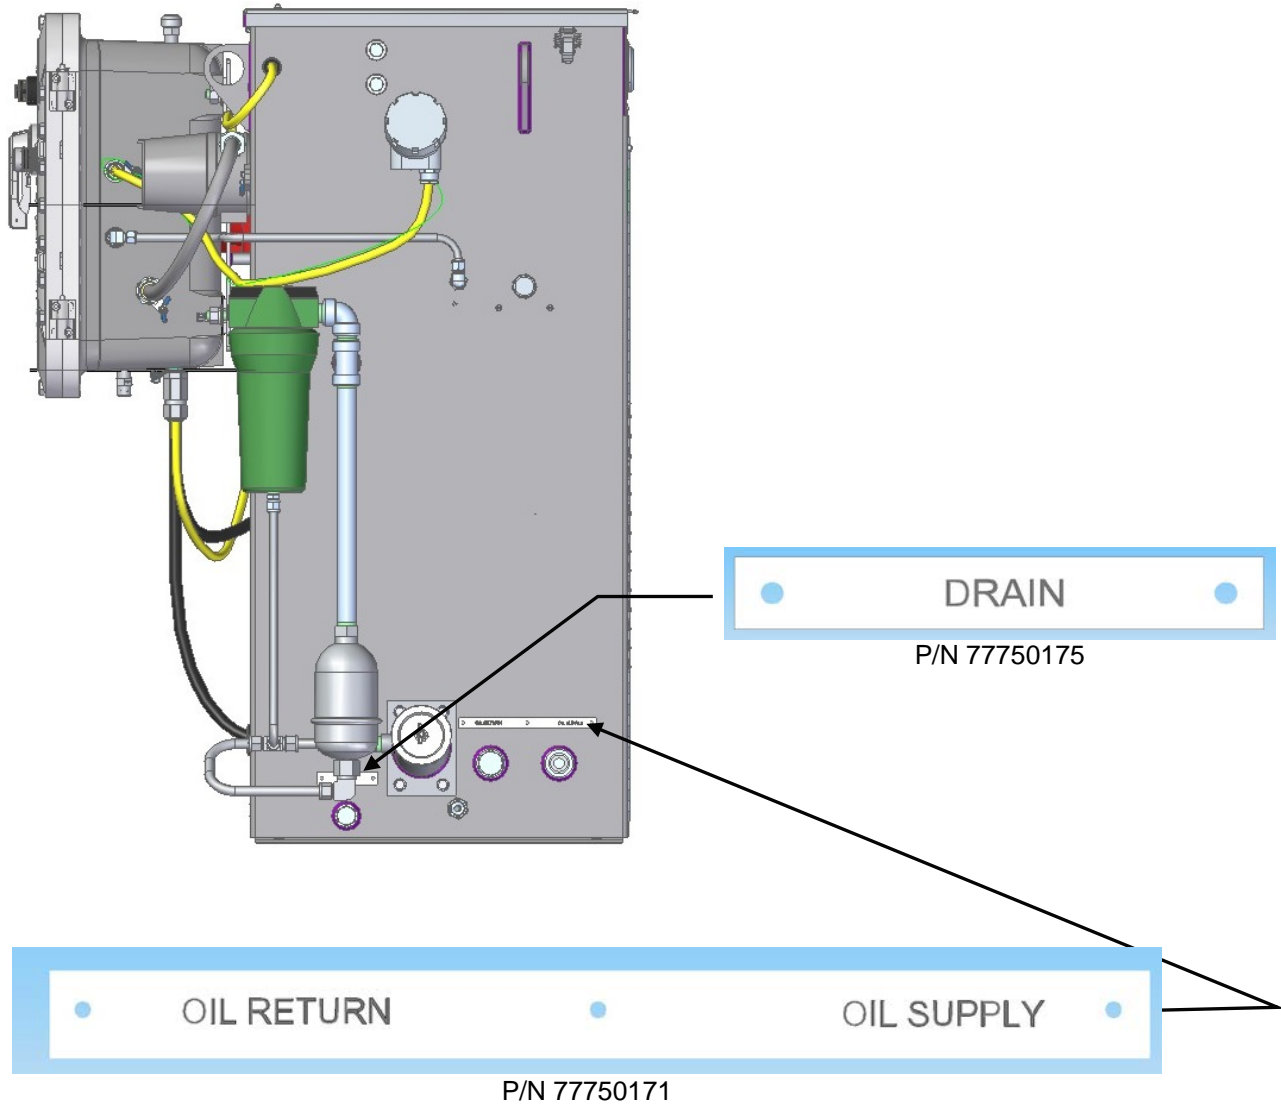

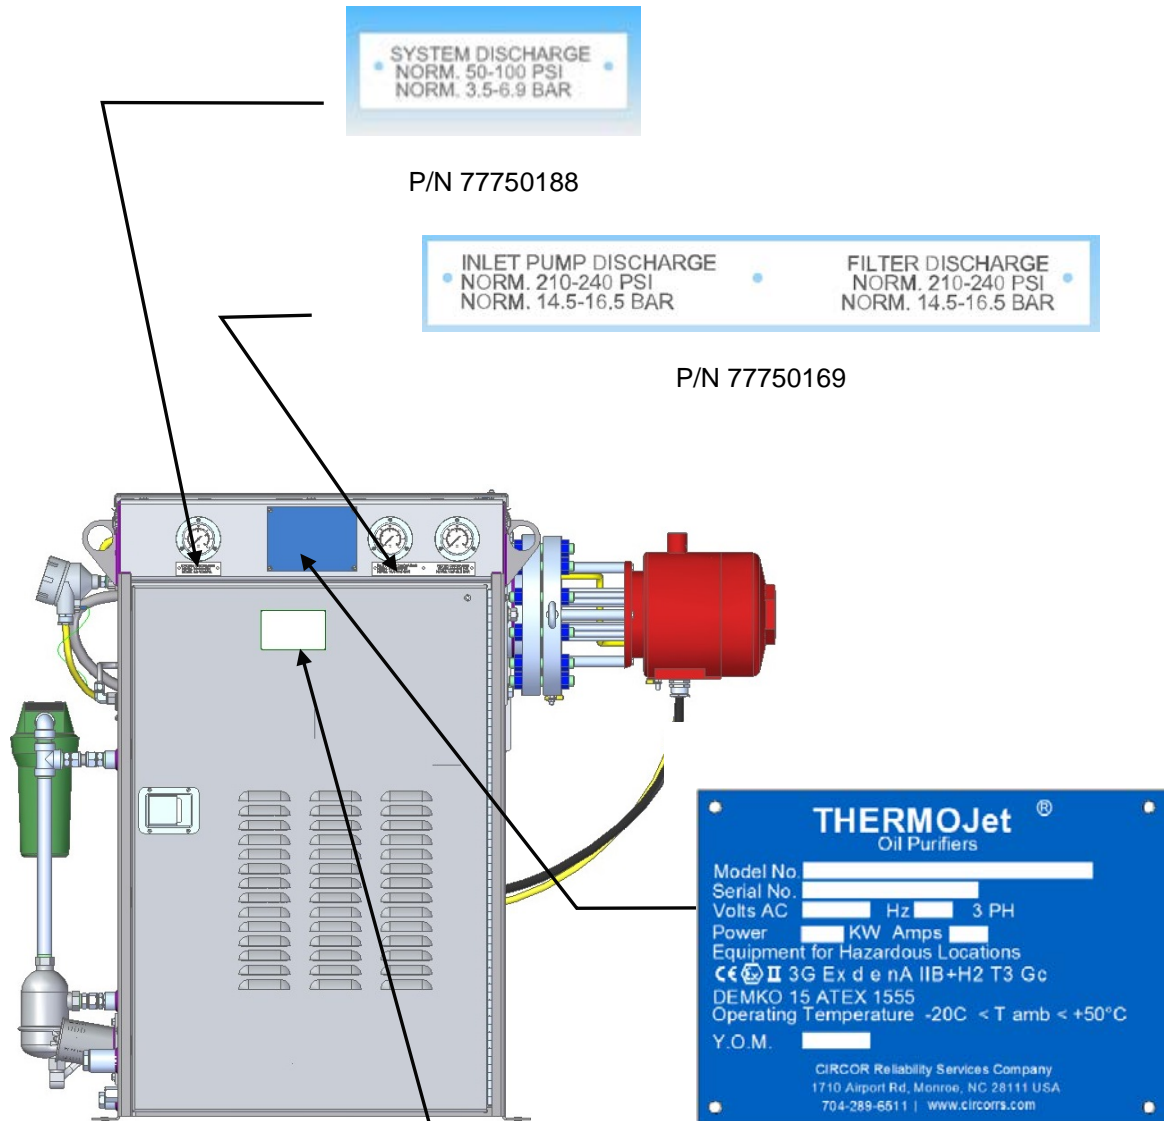

P/N 77750188

INLET PUMP DISCHARGE
NORM. 210-240 PSI
NORM. 14.5-16.5 BAR

FILTER DISCHARGE
NORM. 210-240 PSI
NORM. 14.5-16.5 BAR

P/N 77750169

THERMOJet®
Oil Purifiers

Model No. _____
Serial No. _____
Volts AC _____ Hz _____ 3 PH
Power _____ KW Amps _____
Equipment for Hazardous Locations
CE II 3G Ex d e nA IIB+H2 T3 Gc
DEMKO 15 ATEX 1555
Operating Temperature -20C < T amb < +50°C
Y.O.M. _____


CIRCOR Reliability Services Company
1710 Airport Rd, Monroe, NC 28111 USA
704-289-6511 | www.circors.com

WARNING:
This machine is designed for removing water and solid contaminants. It is not designed for degassing applications. **HAZARD** exists if used in applications where flammable or explosive gases are present in the lube oil.

ADVERTENCIA:
Esta máquina está diseñada para remover agua y contaminantes sólidos. No está diseñada para aplicaciones de desgasificación. **PELIGRO** existe si se utiliza en aplicaciones donde gases inflamables o explosivos estén presentes en el aceite lubricante.

P/N 77750211

P/N 77750211
REV 1
10/2/2003

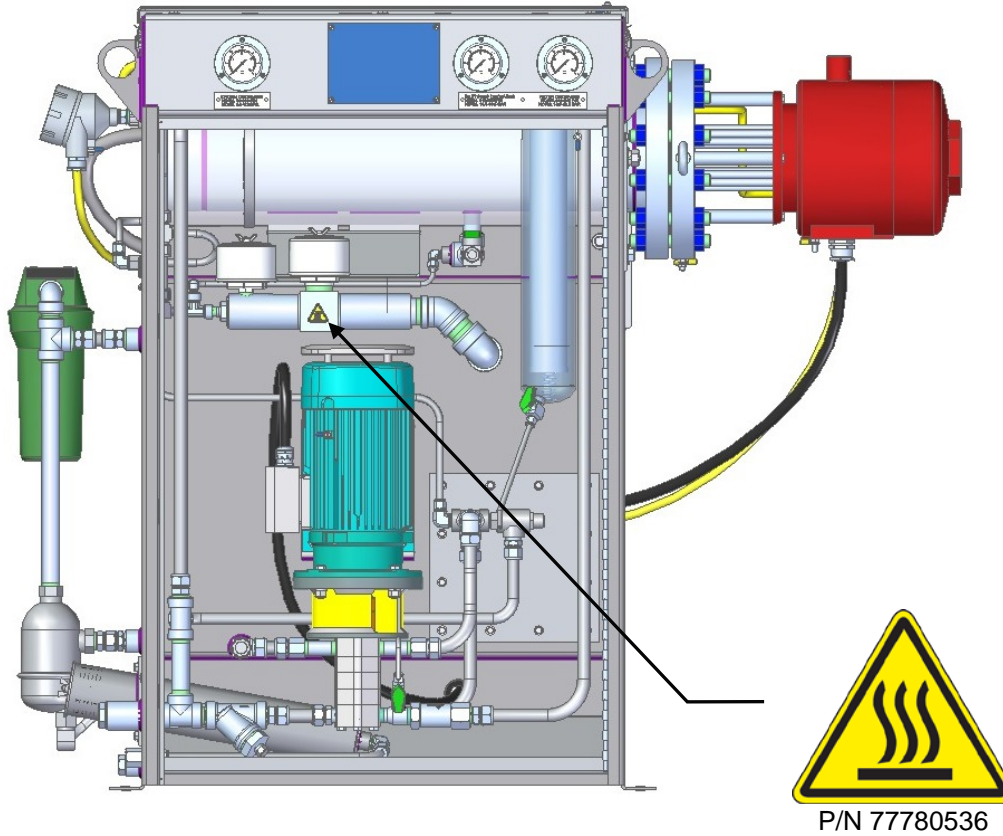

P/N 77780536



**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**

INSTALLATION AND OPERATING MANUAL

Doc #	77740150
Rev	02
Date	June 2020
Page 94 of 110	


Bill Of Materials


Item	Part Number	Quan	Description
1	02000001	1	Double Spur gear Pump
2	03501000	1	Jet Mixer
3	15000300	3	Pressure Gauge, 0-300 PSI
4	19103006	1	Filter Element, 6 Micron
5	19201002	1	Oil Absorption Sock Media
6	19701001	1	Oil Filter Housing, ¾ NPT, SS
7	30100601 30100603	1	Transformer, Control, 240/480 VAC - 100VA, w Fuse Blocks (note 4) Transformer, Control, 380/400/415 VAC, 100VA_w Fuse Block (note 1, 2, 3)
8	30110120	1	Contactora, Motor Starter - 3 Pole w AC Coil, 110/120 VAC, 50/60 Hz
9	30140040	1	Overload Relay, For Three Phase Motor, 2.4 -4 Amp, Direct Mount
10	30180010	2	Time Delay Fuse, Class CC - 600V - 1 Amp
11	77750215 <R1>	3	Time Delay Fuse, Class CC - 600V - 6 Amp
12	30180021	1	Time Delay Fuse, 13i32 X 1-1i2 _ 250V - 2 Amp
13	30201014	1	Ground Lug
14	30561025 30561030	1	Molded Case Circuit Breaker_3 Pole - 25 Amp (note 4) Molded Case Circuit Breaker_3 Pole - 30 Amp (note 1, 2, 3)
15	30600123	1	Temperature Controller, Triac Output 1a - 240vac, Celsius Readout
16	30600200	2	High Limit Control w Man Reset - Non Potted w Sc Term, Type J TC, Set 180 C / 356 F
17	33000100	1	Float, SS 6 Inch Diameter
18	36061380 36061415 36061460	1	Oil Heater, 380V, 3Ph, 12 Kw, 6" 300# ANSI Flange, EEx de IIC T3, W TC For High Temp (note 1, 2) Oil Heater, 415V, 3Ph, 12 Kw, 6" 300# ANSI Flange, EEx de IIC T3, W TC For High Temp (note 3) Oil Heater, 460V, 3Ph, 12 Kw, 6" 300# ANSI Flange, EEx de IIC T3, W TC For High Temp (note 4)
19	36101001	1	Heater Insulation Blanket
20	30661025	2	Relay, 3 Pole Solid State- 25 A / 48-530 VAC Power, 90-140 VAC Control Voltage, Zero Crossover, w Thermal Pad
21	40500060	1	Gasket, Flexitalic 6 inch, 300# RF
22	40511031	1	Gasket, Oil Level Control Plate - VITON
23	40520235	1	O-ring, Oil Filter - VITON
24	Item Not Used	0	Item Not Used
25	49002075	1	Y-Strainer

Item	Part Number	Quan	Description
26	50000010	1	Water Condensate Trap
27	51001137	1	Back Pressure Control - Pressure Limiting Valve, Direct Acting, 3i8 NPT, SS Body
28	51020050	1	Plug Valve, ½ NPT SS
29	51052525	1	Plug Valve, ¼ NPT SS
30	51850100	1	Valve, Level Control
31	52000075	1	Check Valve, 25 PSI (1.7 BAR)
32	52002075	1	Check Valve, 50 PSI (3.4 BAR)
33	77750117	1	Thermocouple, 1/4 X 3, Type J, EExd IIC
34	77750119	1	Thermocouple, 1/4 X 7, Type J, EExd IIC
35	77750564	2	Safety Relief Valve, 1i2 X 1i2 NPT, 09.8 MM Orifice, SS316, Set 270 PSI, CE-PED
36	77760155	1	Pump Motor Mount, USA4F17 Pump to M90 B35 Flanged Motor
37	77760730	1	Motor, Non-Sparking 1.4 kW @ +50°C, 380/3/50, 4 pole – 1445 rpm , Ex nA II T3 (note 1)
	77760756		Motor, Non-Sparking 1.4 kW @ +50°C, 380/3/60, 4 pole – 1785 rpm, Ex nA II T3 (note 2)
	77760758		Motor, Non-Sparking 1.4 kW @ +50°C, 415/3/50, 4 pole – 1445 rpm, Ex nA II T3 (note 3)
	77760760		Motor, Non-Sparking 1.4 kW @ +50°C, 460/3/60, 4 pole – 1785 rpm, Ex nA II T3(note 4)
	77760763		Motor, Non-Sparking 1.4 kW @ +50°C, 400/3/50, 4 pole – 1445 rpm, Ex nA II T3(note 5)
38	77780680	3	Fuse Holder, Class CC Type Fuse, DIN Rail Mount, Single Pole, 30 Amp
39	77780929	1	Pressure Switch, Adjustable 40-200 PSI (2.8-3.8 BAR), , Set 135 PSI (9.33 BAR) Dec
40	77781040	1	Timing Relay, OFF Delay, 60-600 Sec - DIN Rail Mount
41	19000125	1	Air Breather – 1-1/4 NPT
42	19000050	1	Air Breather – 1/2 NPT
43	77750102	1	Demisting Filter


Note:

- 1) Used in Model H2700-EE** - 380Volt – 50 Hz Electrical Power Supply
- 2) Used in Model H2700-EB** - 380Volt – 60 Hz Electrical Power Supply
- 3) Used in Model H2700-EK** - 415Volt – 50 Hz Electrical Power Supply
- 4) Used in Model H2700-EA** - 460Volt – 60 Hz Electrical Power Supply
- 5) Used in Model H2700-EC** - 400Volt – 50 Hz Electrical Power Supply

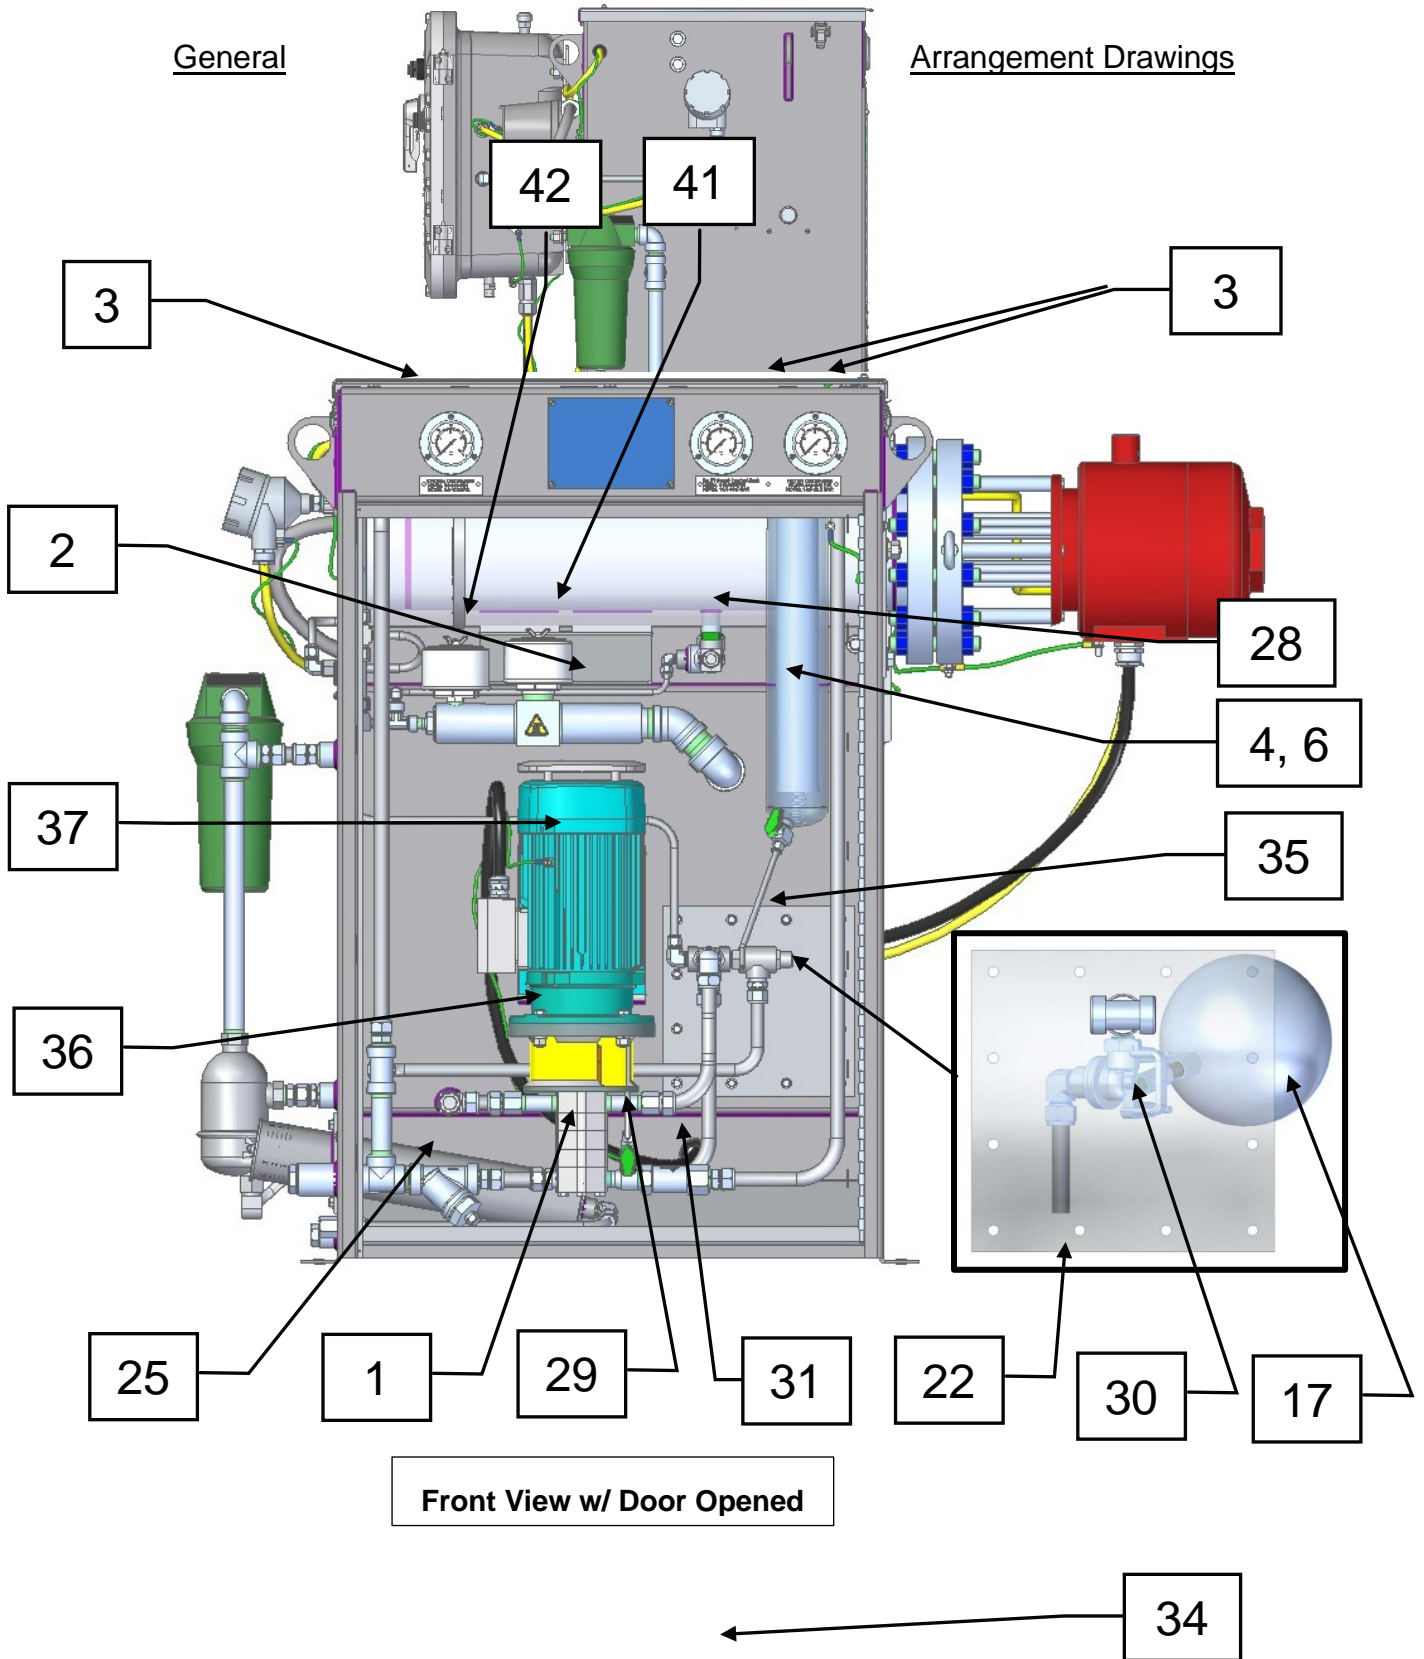



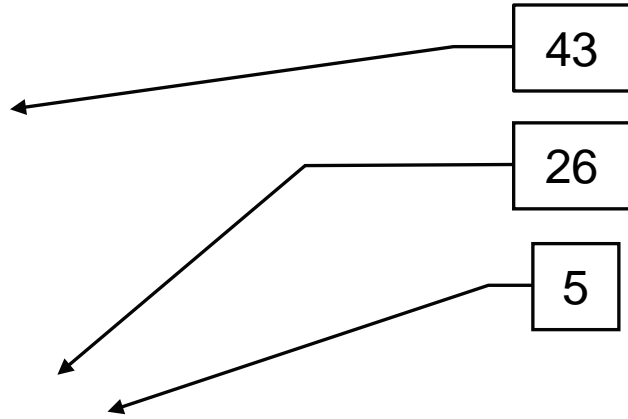


Left Side View

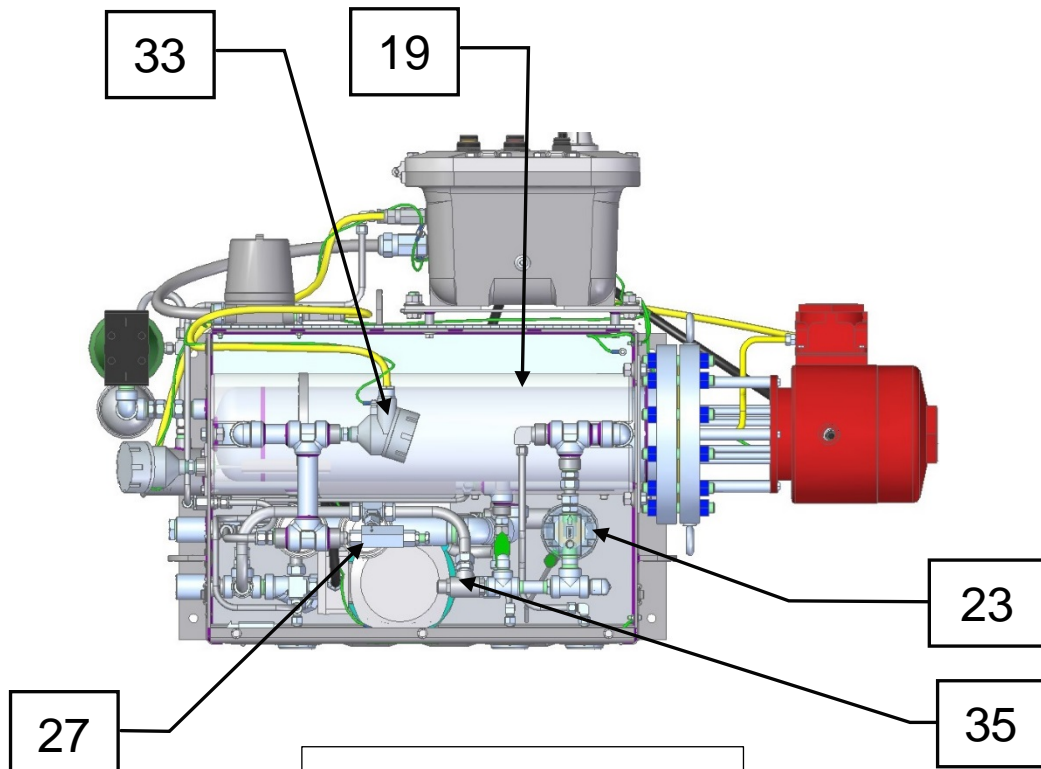

Top View

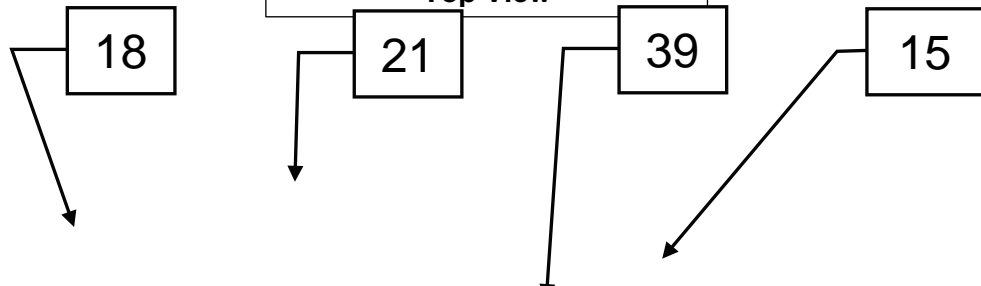

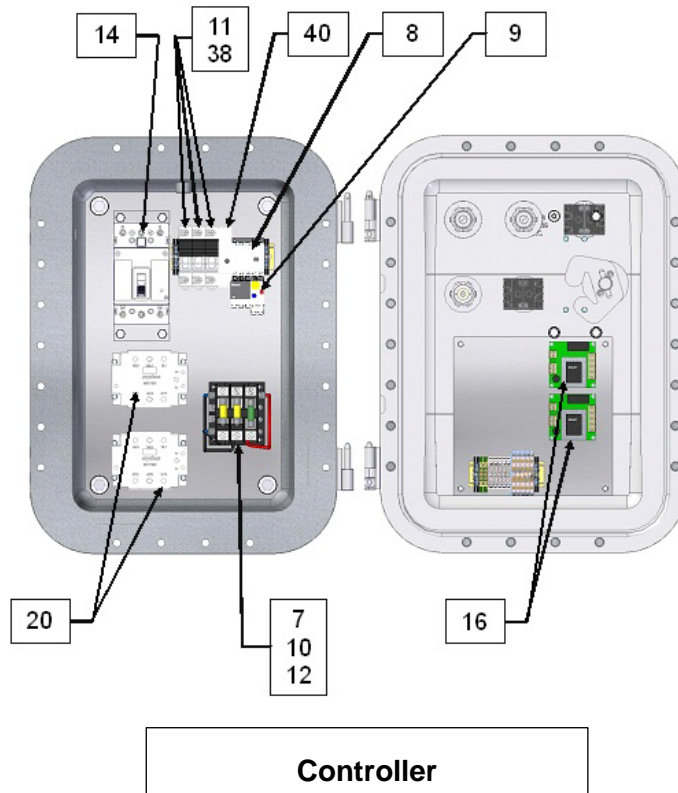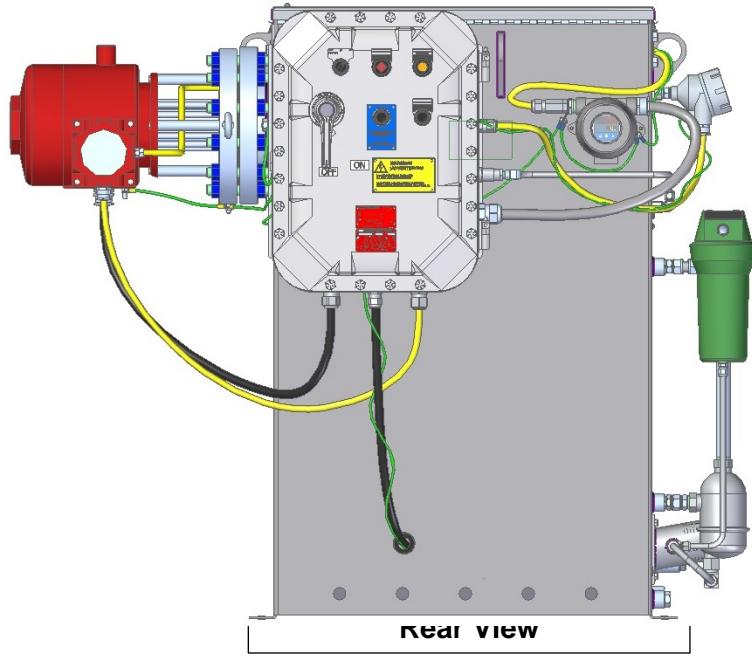




**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**


INSTALLATION AND OPERATING MANUAL

Doc #	77740150
Rev	02
Date	June 2020
Page 99 of 110	


Dimensional Outline Drawings

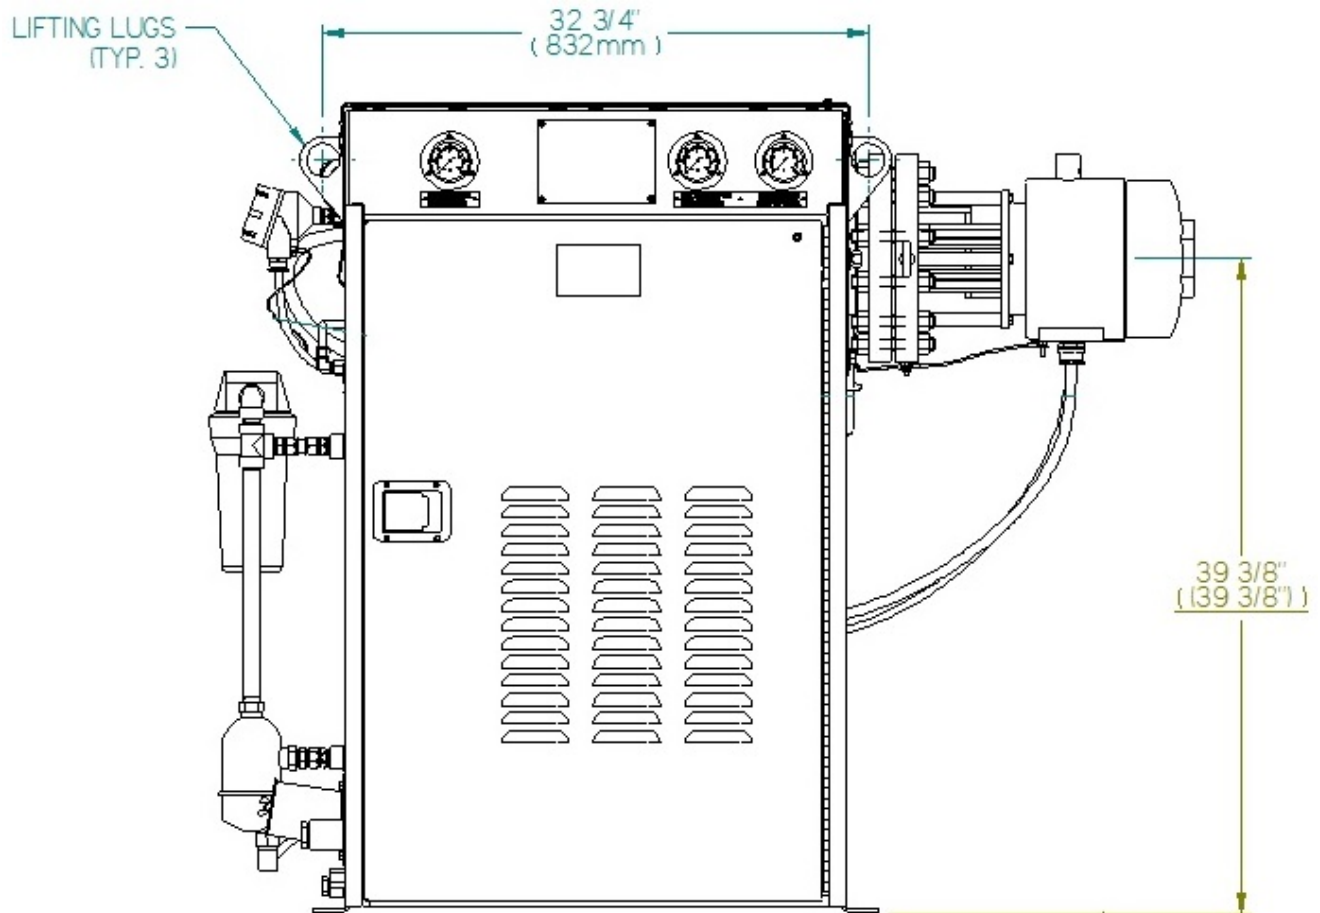


Front View

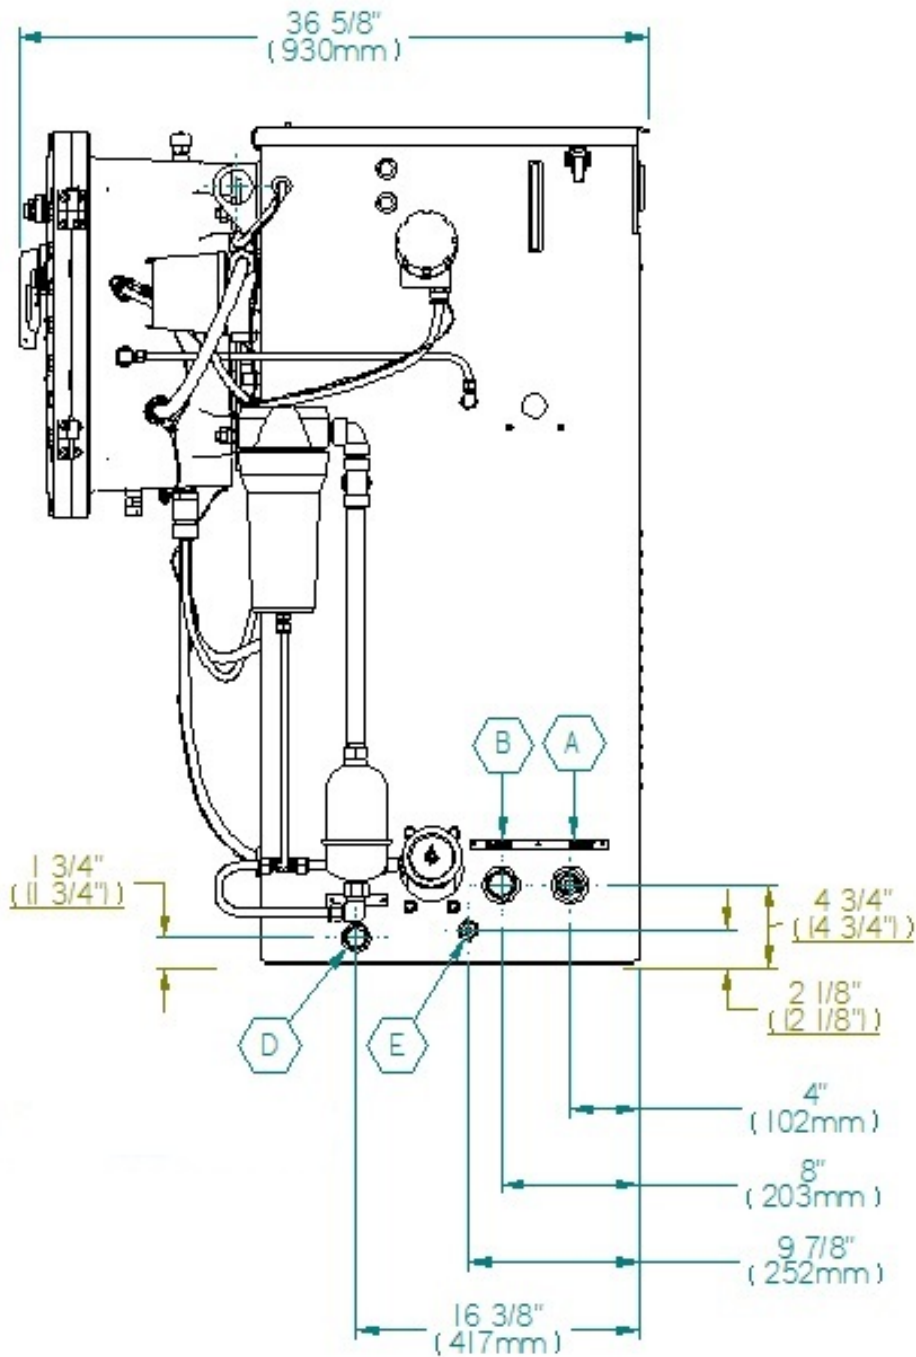


Left Side View

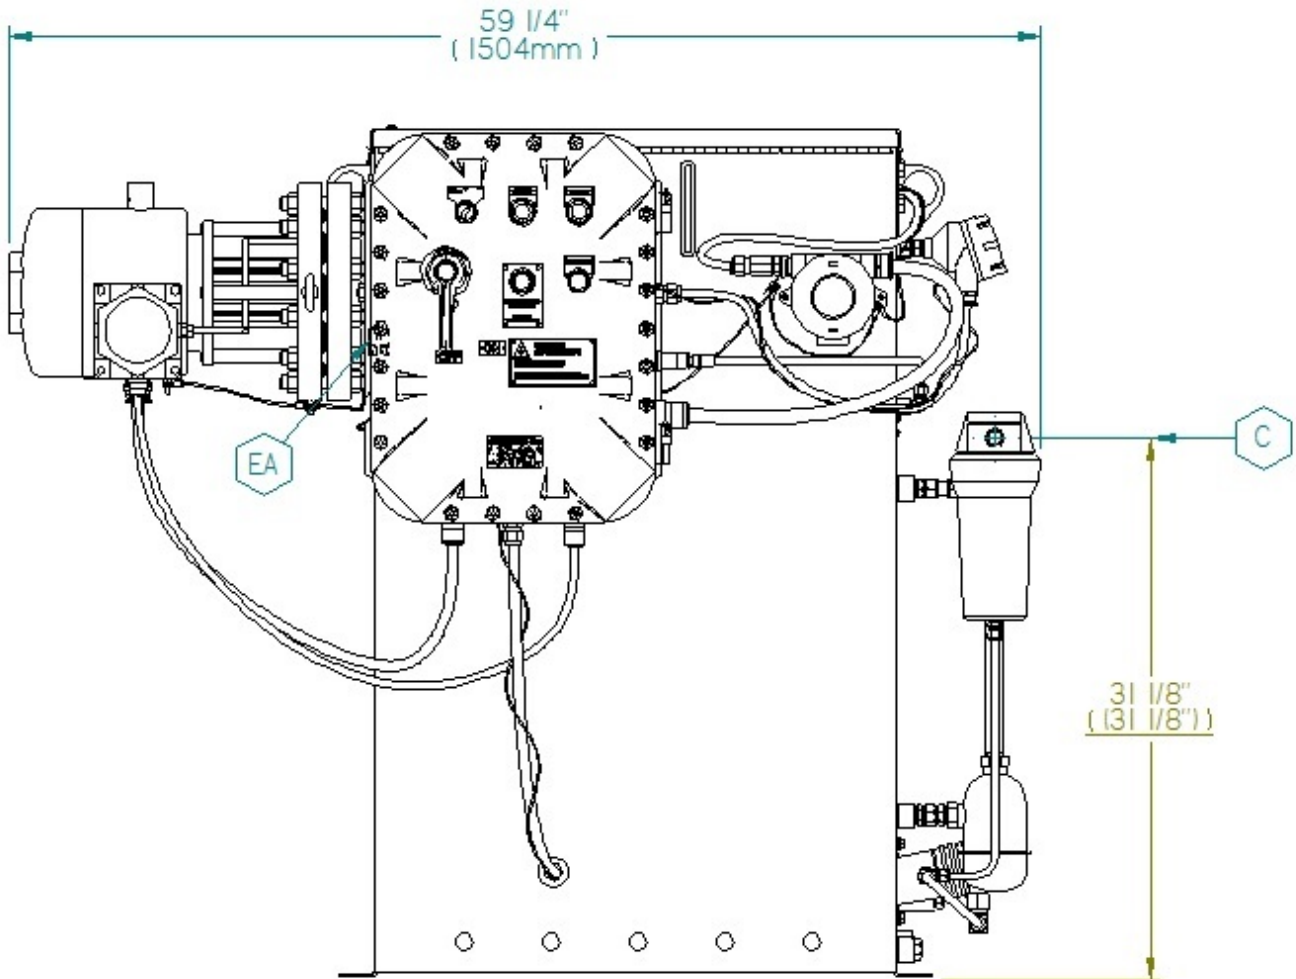


Rear View

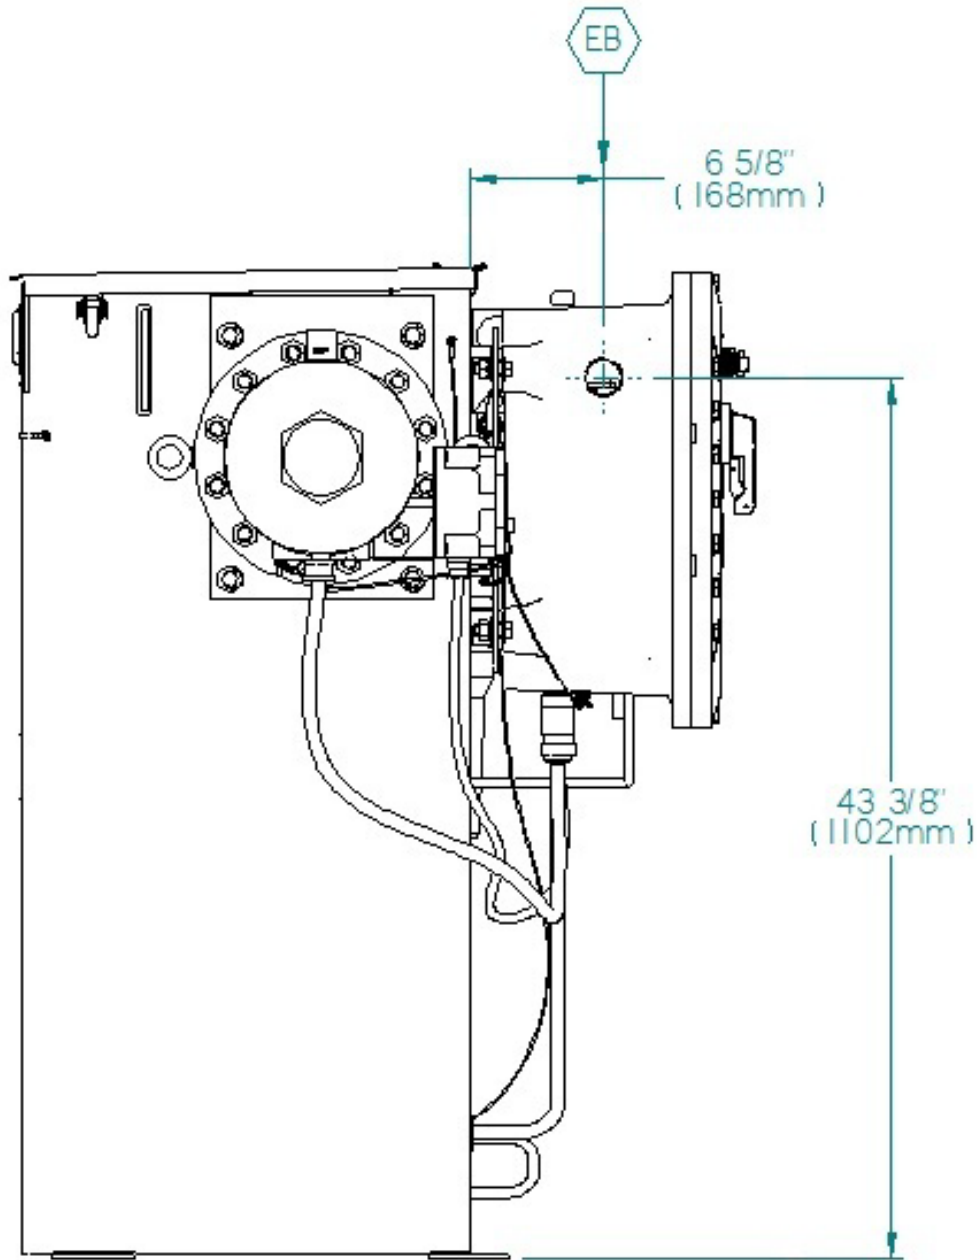

Right Side View

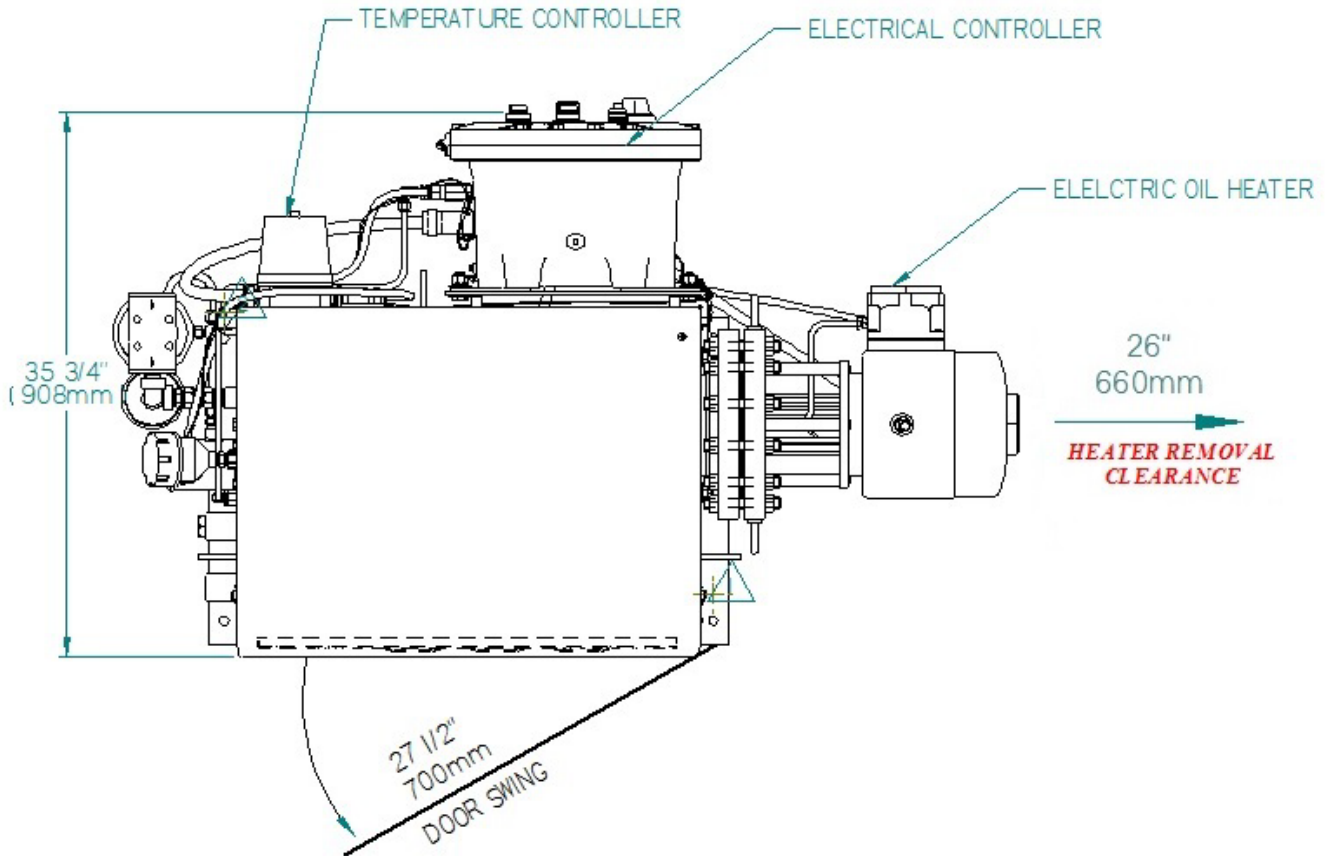

Top View

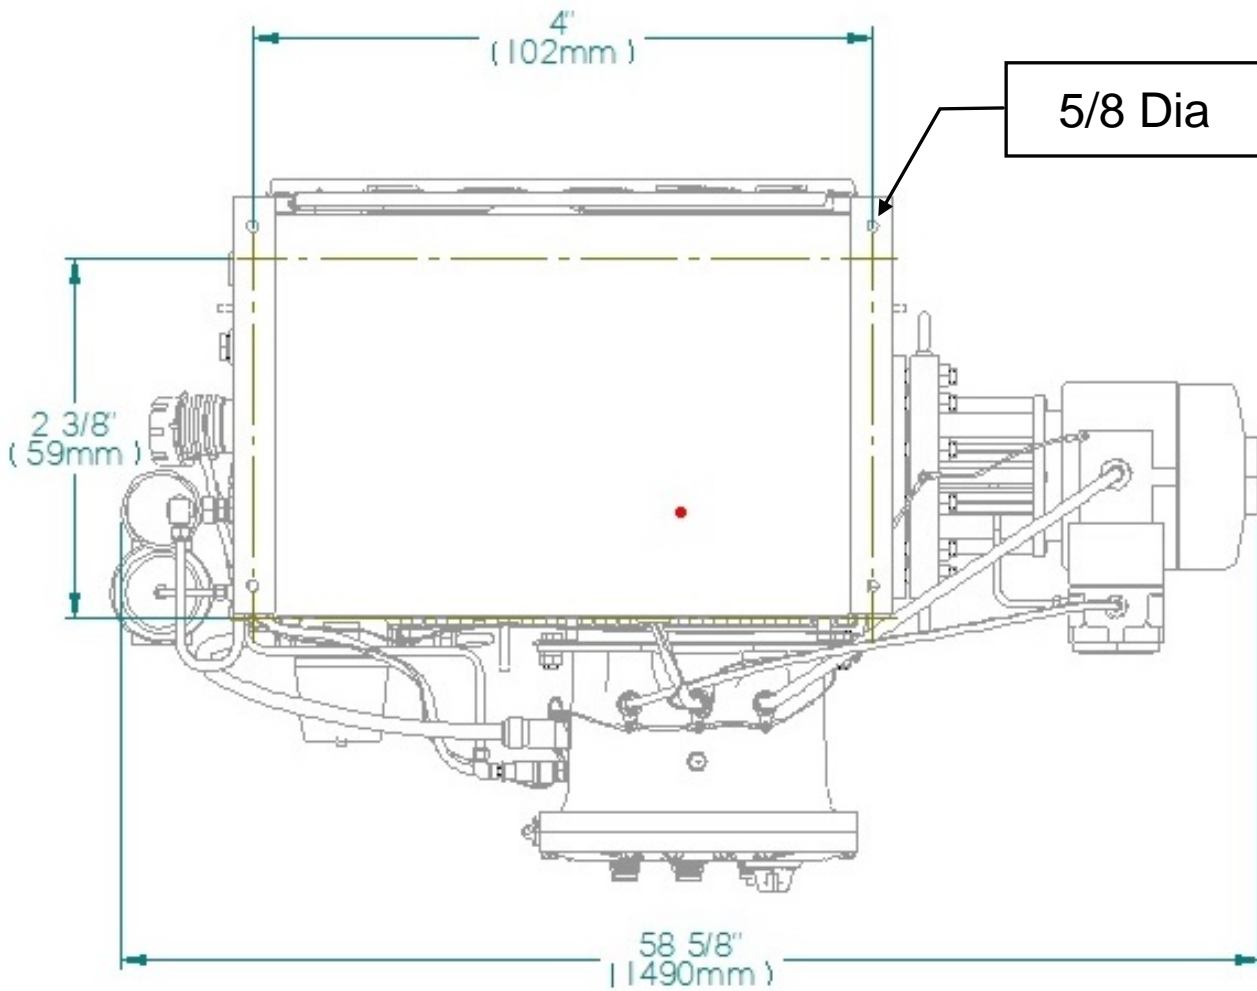

**Bottom View
Anchor bolt spacing**



**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**

INSTALLATION AND OPERATING MANUAL

Doc #	77740150
Rev	02
Date	June 2020
Page 106 of 110	

Ex Components
ThermoJet Oil Purifiers
ATEX Model H-2700E

Item	Description	Manufacturer	Manuf. P/N	Certificate	Issued By	Marking	Standard							
							EN 60079-0	EN 60079-1	EN 60079-7	EN 60079-15				
							Electrical apparatus for explosive gas atmospheres. General requirements	Explosive atmospheres. Equipment protection by flameproof enclosures "d"	Explosive atmospheres. Equipment protection by increased safety "e"	Explosive atmospheres. Equipment protection by type of protection "n"				
Date	Issue	Title												
1	Electrical Control Enclosure, ThermJet H2700 - G3700, ATEX Ex d IIB+H2	Killark	EXB-12188N34-CEN	PTB 07ATEX1024 Manf. C of C	PTB Hubbel Killark	EX II 2G Ex d IIB+H2 T5 EX II 2G Ex d IIB+H2 T5	X	X	X	X				
2	Instrument Enclosure, 3.5 Inch Dia x 5 Inch Deep, CL 1 Grp BCD, Ex d IIC	Killark	HBK-2GLDC	DEMKO 01 ATEX 015742U	DEMKO	EEX de IIC T3	X		X					
3	OIL HEATER, 380V, 3PH, 12 Kw "300# ANSI FLANGE, Ex de IIC T3 w/ T/C FOR HIGH TEMP CUTOUT	CHROMALOX	Type CFP4 FPF01215/12 380V, 12kW	ITS 02 ATEX 1022X/5 Manufacturers C of C	Intertek Testing Services Chromalox	EEX de IIC T3 EEX de IIC T1-T6	X	X	X	X	X			
4	OIL HEATER, 400V, 3PH, 12 Kw "300# ANSI FLANGE, Ex de IIC T3 w/ T/C FOR HIGH TEMP CUTOUT	CHROMALOX	Type CFP4 FPF01215/12 400V, 12kW	ITS 02 ATEX 1022X/5 Manufacturers C of C	Intertek Testing Services Chromalox	EEX de IIC T3 EEX de IIC T1-T6		X	X	X	X			
5	OIL HEATER, 415V, 3PH, 12 Kw "300# ANSI FLANGE, Ex de IIC T3 w/ T/C FOR HIGH TEMP CUTOUT	CHROMALOX	Type CFP4 FPF01215/12 415V, 12kW	ITS 02 ATEX 1022X/5 Manufacturers C of C	Intertek Testing Services Chromalox	EEX de IIC T3 EEX de IIC T1-T6	X	X	X	X	X			
6	OIL HEATER, 460V, 3PH, 12 Kw "300# ANSI FLANGE, Ex de IIC T3 w/ T/C FOR HIGH TEMP CUTOUT	CHROMALOX	Type CFP4 FPF01215/12 460V, 12kW	ITS 02 ATEX 1022X/5 Manufacturers C of C	Intertek Testing Services Chromalox	EEX de IIC T3 EEX de IIC T1-T6	X	X	X	X	X			
7	THERMOCOUPLE, 1¼ X 3, TYPE J, EExd IIC Connection Head	Thermo Electric LimaTherm	CTADF-2-1-XD-A14JUR-03 Type XD-AD	LCIE 05ATEX6105X FTZU 03ATEX0074U	LCIE FTZU	Ex II 2GD Ex d IIC T6 Ex II 2G Ex D IIC		X	X					
8	THERMOCOUPLE, 1¼ X 7, TYPE J, EExd IIC Connection Head	Thermo Electric LimaTherm	CTADF-2-1-XD-A14JUR-07 Type XD-AD	LCIE 05ATEX6105X FTZU 03ATEX0074U	LCIE FTZU	Ex II 2GD Ex d IIC T6 Ex II 2G Ex D IIC		X	X					
9	Motor, Non-Sparking 1.4 kW @ +50°C, 380/3/50, 4 pole – 1445 rpm, Ex nA II T3	VEM Motors GmbH	TYPE IE2-KPR 90 L 4 Ex nA II T3 380/3/50	IBExU06ATEXB001	IBExU Institut fur Sicherheitstechnik GmbH	Ex II 3G Ex nA IIC T3	X							X
10	Motor, Non-Sparking 1.4 kW @ +50°C, 380/3/60, 4 pole – 1785 rpm, Ex nA II T3	VEM Motors GmbH	TYPE IE2-KPR 90 L 4 Ex nA II T3 380/3/60	IBExU06ATEXB001	IBExU Institut fur Sicherheitstechnik GmbH	Ex II 3G Ex nA IIC T3	X							X
11	Motor, Non-Sparking 1.4 kW @ +50°C, 400/3/50, 4 pole – 1785 rpm, Ex nA II T3	VEM Motors GmbH	TYPE IE2-KPR 90 L 4 Ex nA II T3 400/3/50	IBExU06ATEXB001	IBExU Institut fur Sicherheitstechnik GmbH	Ex II 3G Ex nA IIC T3	X							X
12	Motor, Non-Sparking 1.4 kW @ +50°C, 415/3/50, 4 pole – 1445 rpm, Ex nA II T3	VEM Motors GmbH	TYPE IE2-KPR 90 L 4 Ex nA II T3 415/3/50	IBExU06ATEXB001	IBExU Institut fur Sicherheitstechnik GmbH	Ex II 3G Ex nA IIC T3	X							X



**THERMOJET® H-2700E SERIES
OIL PURIFIER SYSTEM**

INSTALLATION AND OPERATING MANUAL

Doc #	77740150
Rev	02
Date	June 2020
Page 107 of 110	

Ex Components
ThermoJet Oil Purifiers
ATEX Model H-2700E

Item	Description	Manufacturer	Manuf. P/N	Certificate	Issued By	Marking	Standard												
							EN 60079-0	EN 60079-1	EN 60079-7	EN 60079-15									
							Issue	Issue	Issue	Issue	Issue	Issue							
							Date	Date	Date	Date	Date	Date							
							Title	Title	Title	Title	Title	Title							
13	Motor, Non-Sparking 1.4 kW @ +50°C, 460/3/60, 4 pole – 1785 rpm, Ex nA II T3	VEM Motors GmbH	TYPE IE2-KR 90 L 4 Ex nA II T3 460/3/60	IBExU06ATEXB001	IBExU Institut für Sicherheitstechnik GmbH	Ex II 3G Ex nA IIC T3	X												
14	PRESSURE SWITCH_ADJ 40-200 PSI, Viton O-Ring, 135 DEC	Ashcroft	APA N7 1H 012C V 02 200#-135D-XNO	Sira 13ATEX1123X	SIRA	Ex d IIC Gb	X		X										
15 450	CABLE GLAND, EEX d, 9.5 - 15.9 MM DIA CABLE, M20 THRD, Ni-BRASS	CMP Products Limited	20S T3CDS 1RA 5	Sira13ATEX 1073X	SIRA	Ex d IIC Gb	X		X				X						
16 451	CABLE GLAND, EEX d, 6.5 – 14.0 MM DIA CABLE ½ NPT THRD, Ni-BRASS	CMP Products Limited	20 A2F 1RA 5 3 1	Sira13ATEX 1068X	SIRA	Ex d IIC Gb	X		X				X						
17 454	CABLE GLAND, EEX d, 18.2 - 26.2 MM DIA CABLE, M25 THRD, Ni-BRASS	CMP Products Limited	25 T3CDS 1RA 5	Sira13ATEX 1073X	SIRA	Ex d IIC Gb	X		X				X						
18 460	CABLE GLAND, EEX d, 11.1 - 20.0 MM DIA CABLE, 3/4 NPT THRD, Ni-BRASS	CMP Products Limited	25 A2F 1RA 3 2 5	Sira13ATEX 1068X	SIRA	Ex d IIC Gb	X		X				X						
19 456	CABLE GLAND, EEX d, 11.1 - 20.0 MM DIA CABLE, M25 THRD, Ni-BRASS	CMP Products Limited	25 A2F 1RA 5 3	Sira13ATEX 1068X	SIRA	Ex d IIC Gb	X		X				X						
20 464	CABLE GLAND, EEX d, 6.5 – 14.0 MM DIA CABLE M20 THRD, Ni-BRASS	CMP Products Limited	20 A2F 1RA 5	Sira13ATEX 1068X	SIRA	Ex d IIC Gb	X		X				X						
21 454	CABLE GLAND, EEX d, 9 - 16 MM DIA CABLE, M20 THRD, Ni-BRASS	CMP Products Limited	20 T3CDS 1RA 5	Sira13ATEX 1073X	SIRA	Ex d IIC Gb	X		X				X						

+

